

TRI-2110

STARTING MANUAL



**MAINTENANCE
DOSAGE
SPARE PARTS**

SOLÀ seed drills and fertilizer spreaders are manufactured in a highly specialized environment and our factory has a vast customer-endorsed experience.

SOLÀ machines use highly advanced technology and are guaranteed to work without malfunctions in a great variety of conditions. They are provided with easy-to-use and efficient devices. SOLÀ machines perform excellently with only minimum operator maintenance.

This manual will help you use your SOLÀ product with the upmost efficiency.



1^a Edition - March 2012
Ref.: CN-811054

It is forbidden to copy any part of this manual.
Specifications are subject to change or modification without notice.

The pictures included do not necessary show the standard version.

INDEX

1- INTRODUCTION	4
2- SAFETY INTRUCTIONS	4
2.1- SAFETY SYMBOLS	4
2.2- USE ACCORDING TO DESIGN	6
2.3- GENERAL SAFETY INSTRUCTIONS	6
2.4- LOADING AND UNLOADING INSTRUCTIONS	7
3- ESSENTIAL SOWING CONCEPTS	8
3.1- TERRAIN	8
3.2- THE SEED	8
3.3- SEED PLANTING DEPTH	8
3.4- SEED DOSING ADJUSTMENTS	9
4-STARTING	11
4.1- COUPLING	11
4.2- DOSING SYSTEM	12
4.3- SEED DOSING	13
4.4- CALIBRATION TEST	14
4.5- FIELD TEST	17
4.6- COULTERS DEPTH AND PRESSURE ADJUSTMENT	17
4.7- TINE COULTERS ADJUSTMENT	18
5- OPTIONAL EQUIPMENT	18
5.1- TRACK ERASERS	18
5.2- PARALLELOGRAMIC-SHAPED HARROW WITH FLEXIBLE TINES.	19
5.3- TRACK MARKERS	20
<i>Hydraulic track markers</i>	20
5.4- HECTARE COUNTER	22
5.5- FLOATING CULTIVATOR	23
5.6- GEARBOX'S HYDRAULIC CONTROL	24
6- MAINTENANCE	25
6.1- LUBRICATION	25
6.2- TYRES PRESSURE	27
6.3- SCREWS	27
6.4- ANTIOXIDE CONTROL	27
6.5- PROBLEM-SOLVING	28
7- SPARE PARTS	30
7.1- INTRODUCTION	30
7.2- CHASSIS	31
7.3- HOPPER	32
7.4- COVER AND SELECTOR SIEVE	33
7.5- ARMS BARS	34
7.6- TRACK ERASERS "RANSOME"	35
7.7- TRACK ERASERS "SPRING"	35
7.8- FLOATING CULTIVATOR	36
7.9- CENTRAL LEVELER	37
7.10- HECTARE COUNTER	37
7.11- HARROW WITH FLEXIBLE TINES EPI-6	38
7.12- MARKERS	39
7.13- GEARBOX	40
7.14- FINISHES	42

1- INTRODUCTION

It is essential to read and follow the instructions and recommendations in this manual before operating the machine. Careful reading enables maximum operator efficiency, prevents accidents and damage, and increases the seed drill's capacity and life expectancy.

Please ensure that this manual has been read by any person involved in performing operational tasks, (including preparation, dealing with mechanical problems and supervising the machine), maintenance (inspection and technical assistance) and transport.

For your safety, please follow these technical safety instructions as SOLÀ will not be responsible for damages caused by not observing the information provided.

In the first chapters you will find the Technical Characteristics and Safety Instructions, as well as some essential sowing concepts. Basic concepts that are required to operate the machine are explained in the Starting and Maintenance sections. The last part of this manual consists of Dosage Tables, detailed by seed type.



SOLÀ retains the right to modify illustrations, technical data and weights indicated in this operating manual, if these changes help to improve the quality of the seed drills.

2- SAFETY INTRUCTIONS

2.1- SAFETY SYMBOLS

In this operating manual you will find three different symbols relating to safety:



TO WORK MORE EASILY WITH THE SEED DRILL.



TO PREVENT DAMAGE TO THE SEED DRILL AND OPTIONAL EQUIPMENT



TO PREVENT PHYSICAL INJURY

On the machine you will find the following warning pictograms:



Read the instructions carefully and observe the safety advice given in the operating manual.



During the coupling manoeuvre, stay away from the rear part of the tractor. Risk of serious physical injury.



While maintaining or repairing the seed drill, stop the tractor's engine and prevent it from starting. The ignition key must be removed.



Risk of being crushed when working under the machine, please secure the machine to prevent this risk.



It is forbidden to ride on the machine during operation. Risk of serious physical injuries.



Danger of infection from escaping hydraulic fluid at high pressure! This can inflict serious injuries with potentially fatal consequences if it passes through the skin and into the body. Keep the hose lines in good condition. Risk of serious physical injuries.



Be careful when closing the hopper's lid. Keep your hands away from hopper's edge to prevent them being caught.



Never stand under the sowing equipment, or swivel area of the machine's extension tine coulter. Risk of serious physical injury.



Do not exceed maximum load.



Loading and unloading coupling point.



Do not insert your hand into the hopper while the drive wheel is turning. Risk of serious physical injury

2.2- USE ACCORDING TO DESIGN

- The Seed Drill TRI-2110 has been designed for normal use in agricultural work, especially cereal and other kind of grain seeds.
- If the machine is used in circumstances other than the above, the manufacturer will not be held responsible for any damage caused.
- The user must observe all regulations concerning safety, traffic and hygiene.
- If the machine is modified by the user, the manufacturer's warranty is cancelled. SOLÁ will not be held responsible for any damage caused.

2.3- GENERAL SAFETY INSTRUCTIONS

- Before starting the machine, please check the machine is in good condition for work and is safe for road use. Check that visibility is clear around the machine and there is no person in the working area.
- In thoroughfare, please observe traffic signs and regulations.
- It is forbidden to ride on the machine or climb into the machine when it is running.
- Before using the machine, the user must be familiar with all operating elements.
- Please be extremely careful when coupling and uncoupling the machine to the tractor.
- While performing dosing tests, be careful with possible dangers caused by turning pieces. Pay special attention to the agitator's tines from inside the hopper, as well as the wheel drive's scraper.
- Fast-locking hooks must stay unlocked. They should always remain closed and should only be opened when the machine is on the ground to be uncoupled.
- Never leave the tractor's driver's seat while the machine is in operation.
- Do not deposit external elements inside the hopper.
- Before any work in the hydraulic system of the seed drill, lower the machine and make sure that the system is depressurised and the tractor's engine is off.
- Please regularly check the condition of the tubes and hosepipes in the hydraulic system. These parts age naturally and their life should not surpass six years. Please replace when necessary.
- When raising the seed drill, the front axle is unloaded. Ensure that the machine has enough load to prevent it overturning. At this time you must ensure that the condition of both the steering and the brakes is optimal.
- During transit with the raised seed drill, block the lowering switch. Before leaving the tractor, lower the seed drill onto the ground and remove the tractor's starting key.
- Always use enough supporting elements when maintaining the machine in a raised position to prevent the machine from lowering or falling.


2.4- LOADING AND UNLOADING INSTRUCTIONS

Figures 1 and 2 show how and where to place the tow ropes to perform this operation: in the machine's three-point linkage as well as in the fasten points situated in the harrow's support.

These are dangerous tasks. They should only be performed by qualified and experienced personnel.



When the seed drill is suspended, be sure that the danger zone below and surrounding the machine is clear to prevent serious consequences in case it falls.

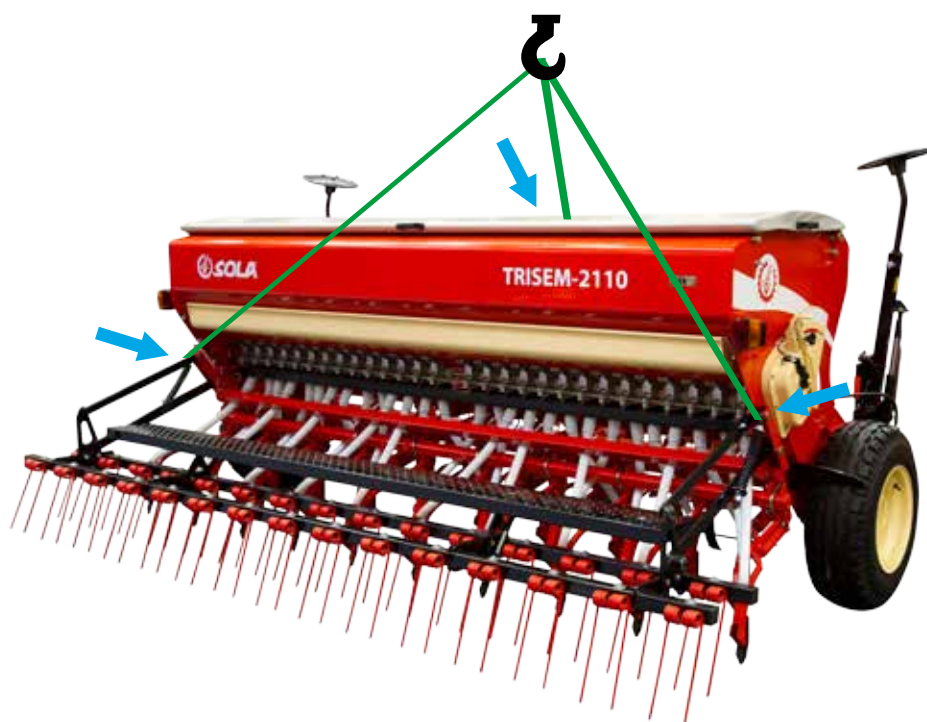

3- ESSENTIAL SOWING CONCEPTS

3.1- TERRAIN

The better the soil condition, the better the sowing quality. Work is more difficult on big clods or uneven furrows. Although SOLÀ machines resist harsh conditions, if the seedbed does not satisfy appropriate conditions then the sowing quality will suffer.

3.2- THE SEED


It is essential that seeds are well maintained and clean. Barley seeds should be trimmed.

3.3- SEED PLANTING DEPTH

The recommended seed planting depths are from three to five centimetres. Planting too deep causes problems as rhizome cannot reach the surface and the plant will die. It does not matter that some grains are visible because the harrow's tines will cover them eventually.

The seed planting depth has consequences for tillering, as well as for the plant's strength and its ability to resist frostbite or drought. The parent shoot grows from 1 to 2 cm under the ground, whatever the depth of the seed.

Planting deeper does not necessarily mean getting deeper roots. Only a few roots grow from the lower part of the seed. Most of them grow from a parent shoot close to ground level.

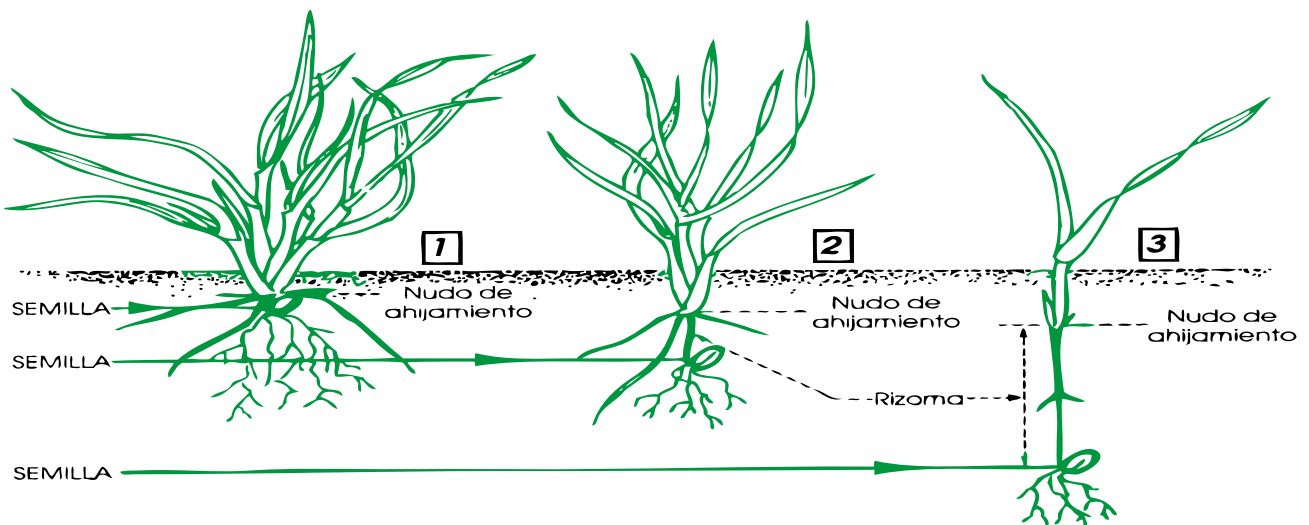

Normal Planting Depth: from 2 to 4 cm

Thick stem, short rhizome, resistant to frostbite

Multiple tillering providing from 3 to 6 shoots and a lot of blades, from 6 to 10.

Deep and thick roots, approximately 5 cm in width and 10-12 cm in depth.

With less grains per sowing square metre, more ears are obtained.

Deeper Planting: from 5 to 6 cm

Fine stem, rhizome exposed to frostbite.

Late and weak tillering, 1 or zero shoots and only a few blades, 3-4 aprox.

Medium quality roots of approximately 3 cm in width and 5 cm in depth

More grains per sowing square metre are required to obtain the same number of ears as in the previous case.

Very deep planting: from 8 to 10 cm

Very fine stem. No tillering and only one blade.

Seed runs out of supplies by growing a long rhizome which frostbite can easily cut.

The plant takes weak roots, approximately 1 cm in width and 3 cm in depth.

Twice the number of grains per sowing metre are required to obtain the same number of ears as in the first case.



In very cold places, repeated frostbite can have a honeycomb effect on the ground's most superficial layer. In this case the plant's very first roots can loosen and the plant will die. Slightly deeper planting is recommended and if possible, the use of rollers to compact the earth to better protect the seeds.



In all SOLÀ machines, the right side wheel activates the seed distributor's mechanical transmission. Consequently, sharp curves should be performed towards the left side, since using the ground wheel drive would cause a lesser seed distribution.



When starting the machine, furrows will not contain any seeds for a metre. When stopping the machine, seeds which were previously inside the seed hoses, slide from the machine and end up piled on the ground. Take this into account when stopping and starting the machine in order to achieve more accuracy.



Always work at a uniform speed as sudden accelerating and slowing down will cause an irregular seed distribution.

3.4- SEED DOSING ADJUSTMENTS

When using high quality certified seeds it is not enough to know the weight in kilograms distributed by the machine, as the final result of the harvest will depend on the number of plants which eventually ripen.

Every plant requires a certain amount of land from which nutrients will be absorbed. Therefore, both a low or an excessive plant density can be detrimental. To determine how many kilograms per hectare are to be sown, you should know the number of plants per square metre that are going to be planted.

As a guidance, the recommended number of plants per square metre when sowing wheat or barley in un-irrigated land can be found in following table:

AUTUM:	<i>Premature sowing, 200 plants per m² Late sowing: 265 plants per m²</i>
SPRING:	<i>Premature sowing, 310 plants per m² Late sowing: 445 plants per m²</i>

Please note that in spring there is less tillering so more seeds should be sown



MAQUINARIA AGRÍCOLA SOLÀ, S.L. RECOMMENDS THAT THE FARMER SEEKS PROFESSIONAL ADVICE ABOUT THIS SUBJECT FROM A TECHNICAL SOWING CENTRE.




SEED DOSING SHOULD BE ADJUSTED TO EACH TERRAIN, DEPENDING ON THE: TEXTURE, FERTILIZING LEVEL, PLUVIOMETER RESULTS AND SOWING SEASON, GRAIN QUALITY, GERMINATING AND TILLERING POWER, ETC

It should be taken into account that a seed's germinating power is variable and dependant on multiple factors. It can be experimentally calculated to be between 70% and 80%, which is practically equivalent to multiplying the number of grains to be sown by 1,43 or 1,25 respectively.

Next, we describe a practical method to determine the number of kilos per hectare to be distributed once we know how many plants per square metre we want to obtain.

1) Place seeds on the "seed counter"

Wipe seed counter with your hand to make sure that there is only one grain per slot (100 grains in total). Do the same 10 more times to obtain 1000 grains

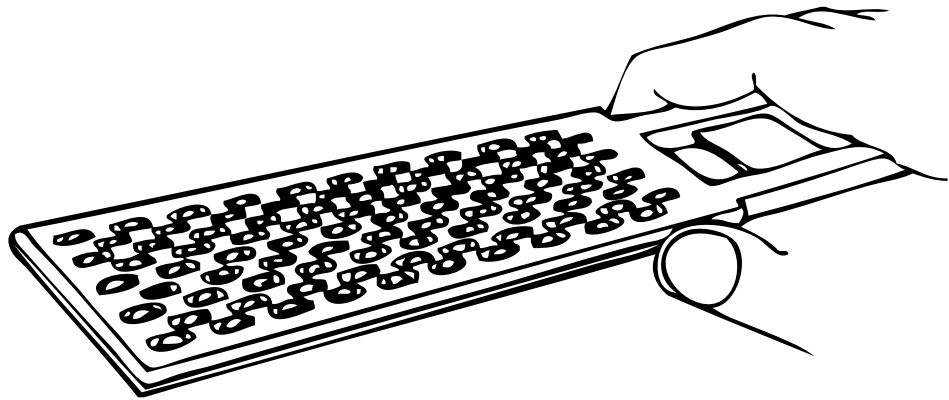

2) Weigh 1000 grains with the precision scales. We call the result the OPERATIVE WEIGHT.

3) Once we know how many seeds per square metre we are going to sow, we should adjust the following kilograms per hectare in the dosing control:

$$\text{kilograms per hectare} = (\text{grains per m}^2 \times \text{OPERATIVE WEIGHT}) / 100$$

4-STARTING

4.1- COUPLING

Seed drill TRI-2110 is fitted for fast coupling to the hydraulic lift. The oscillating coupling bar adapts to ground's irregularities. In order to switch it off, place the machine in a raised position and unlock the two locking hooks (1, fig 5) to secure the hooked clip (2, fig 5) of the lever's (3, fig 5) to the axis (4, fig 5).

All machines are supplied with a supporting base to secure the machine during transportation and prevent accidents. It must be removed before working with the machine.




Make sure that nobody is ever between the seed drill and the tractor when coupling both machines.

4.2- DOSING SYSTEM

SOLÀ's dosing system can be adjusted to the following working positions:

- *Narrow position with small housings, used for small seeds (fig. 6).*
- *Wide position with large alternated housings, used for regular or big seeds (figs. 7 and 8).*

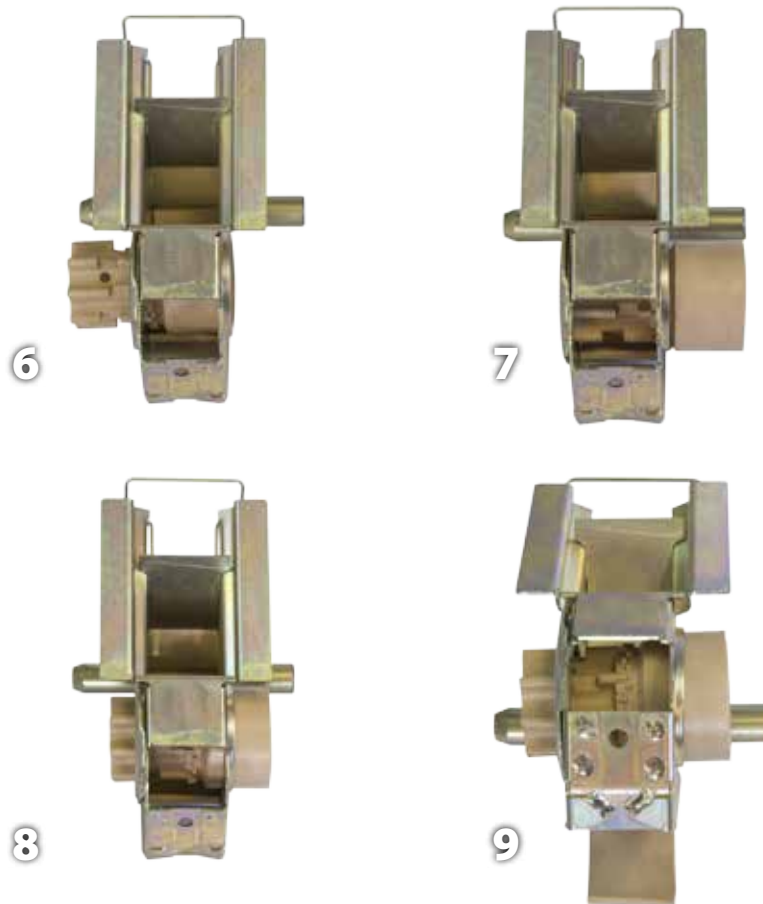

Base flap performs two roles:

- *It adjusts its opening to adapt to seed's size. (figs. 6,7 and 8).*
- *It empties the hopper into the calibration cup (fig. 9).*




To easily switch from WIDE to NARROW position, seed wheels dosing must be without seeds, otherwise the seeds will difficult seed wheel's turning.

Once the position is chosen (narrow or wide) and the base flap is adjusted (depending on the seed's size), seed flow to be dosed will depend on seed wheel's speed. The gearbox allows to adjust the seed wheel's speed to sow from 0 to 600 kg/ha in a very precise way.


4.3- SEED DOSING

Check that the shutoff gates are open and allow the seed flow. Before filling the hopper, check that there are no external elements inside the hopper and next connect the agitator's shaft to the gearbox's axle.

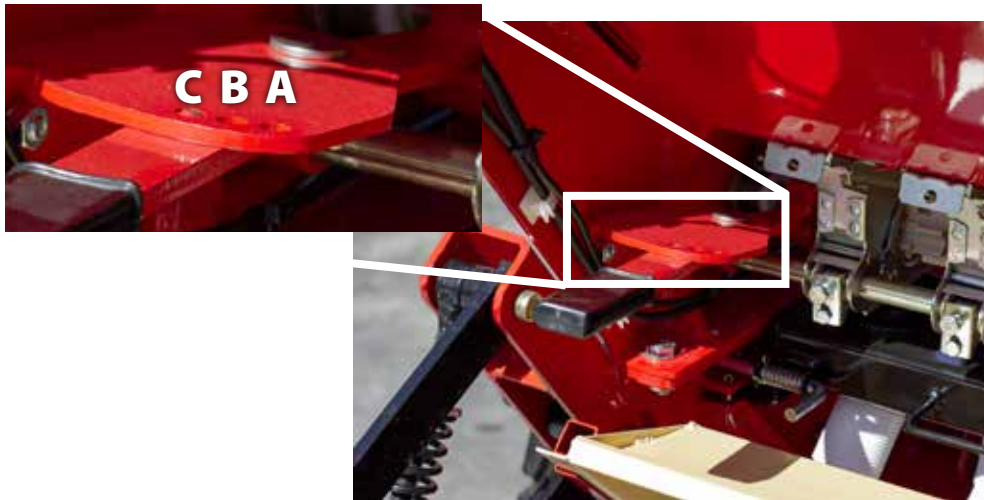

Move the lever to switch between narrow and wide position in the seed wheel

- A. To the right to set wide position for wheat, barley, etc.*
- B. To the centre to set medium position for sunflowers, peas, etc.*
- C. To left, to set narrow position for lucerne, rape, etc.*

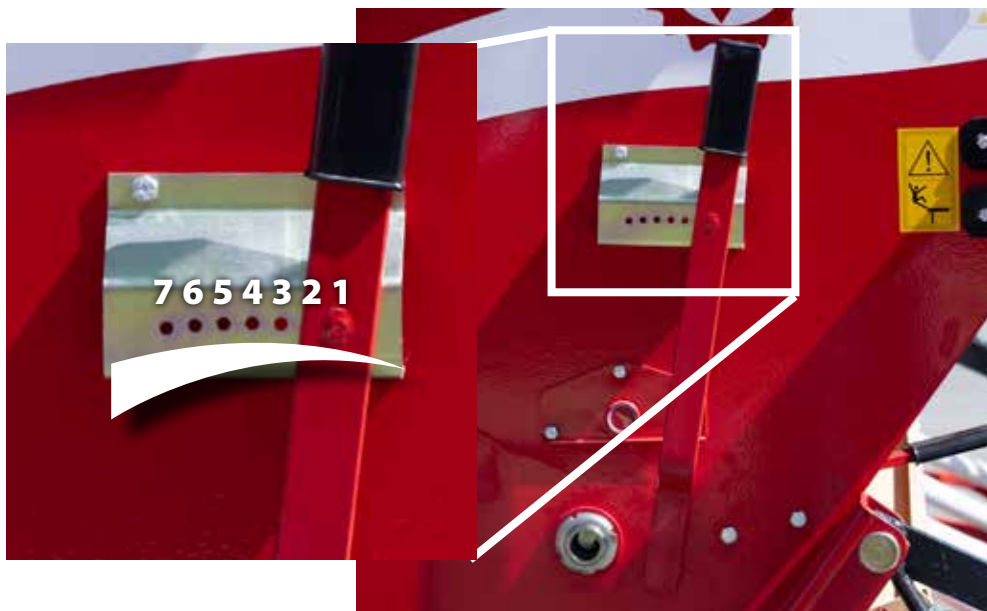


The base flap lever (placed on the left side of the hopper) has 7 positions

- No 1, for small seeds.*
- No 3, for wheat and barley.*
- No 5, for big seeds.*

To empty the hopper, place the calibration cup under the seed wheels and move the lever beyond position n° 7 (emptying position).


Finally loosen gearbox's knob, move the gear lever on the sector graduated from 0 to 100 and tight the knob in the number position selected previously, as indicated in the dosing tables.

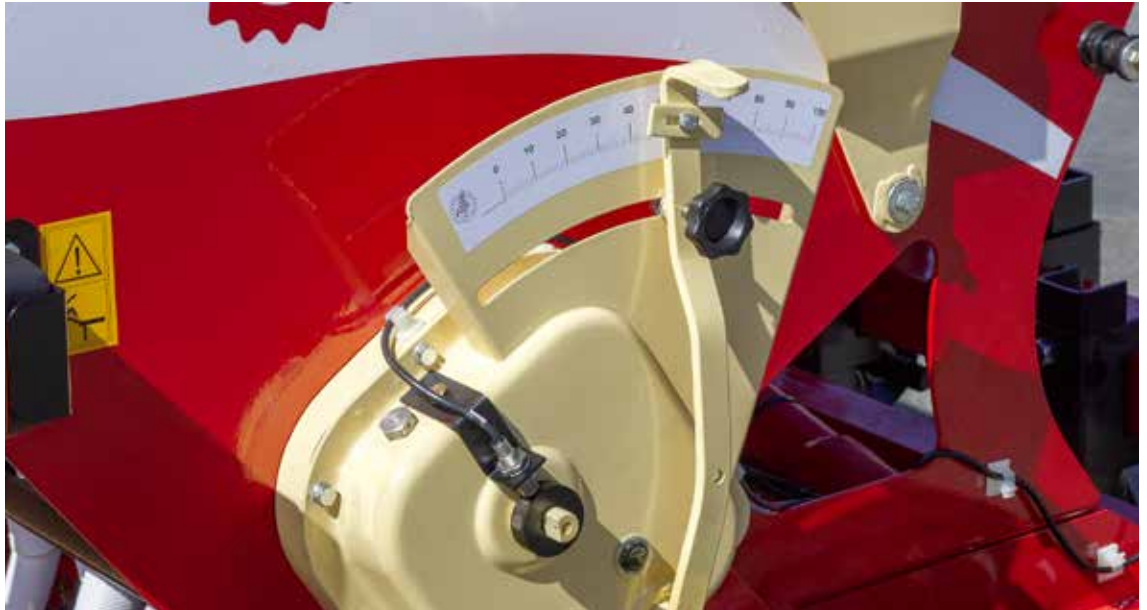



4.4- CALIBRATION TEST

Once the narrow or wide position is selected, and both the base flap and the gear lever are in correct position, it is essential to perform a calibration test.


FIRST: withdraw the spring-loaded lever (2,) that keep the hopper bar in working position and push the bar (1) forward until the end. This will allow to place the calibration cup under seed wheels.

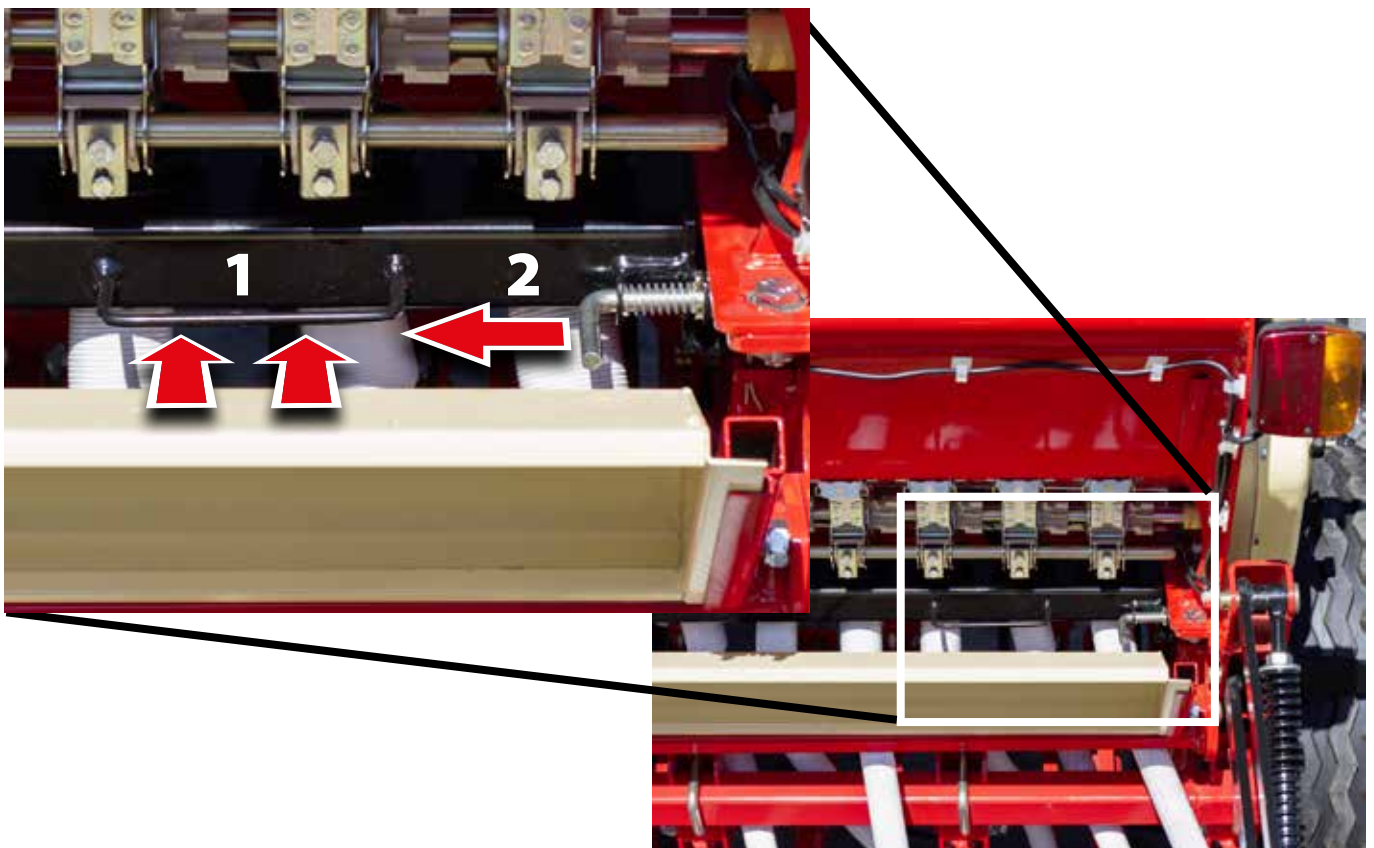

SECOND: Pull the calibration cup upwards out of their holders and place it under the seed wheels.

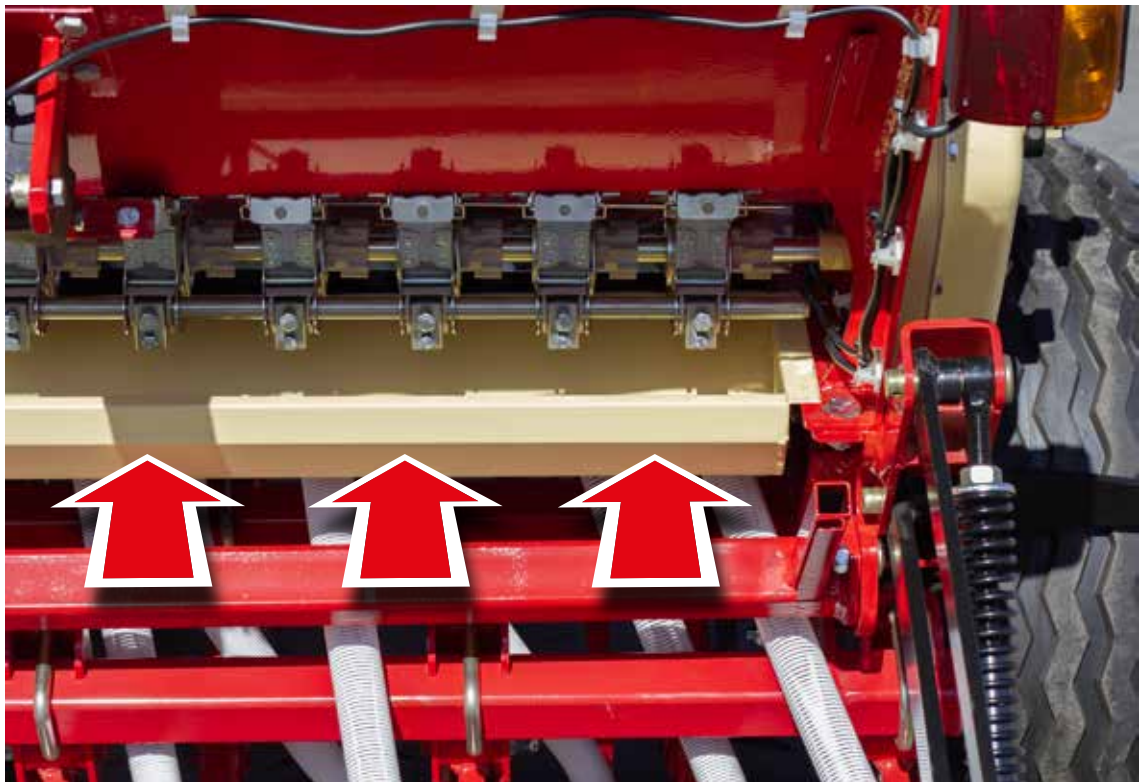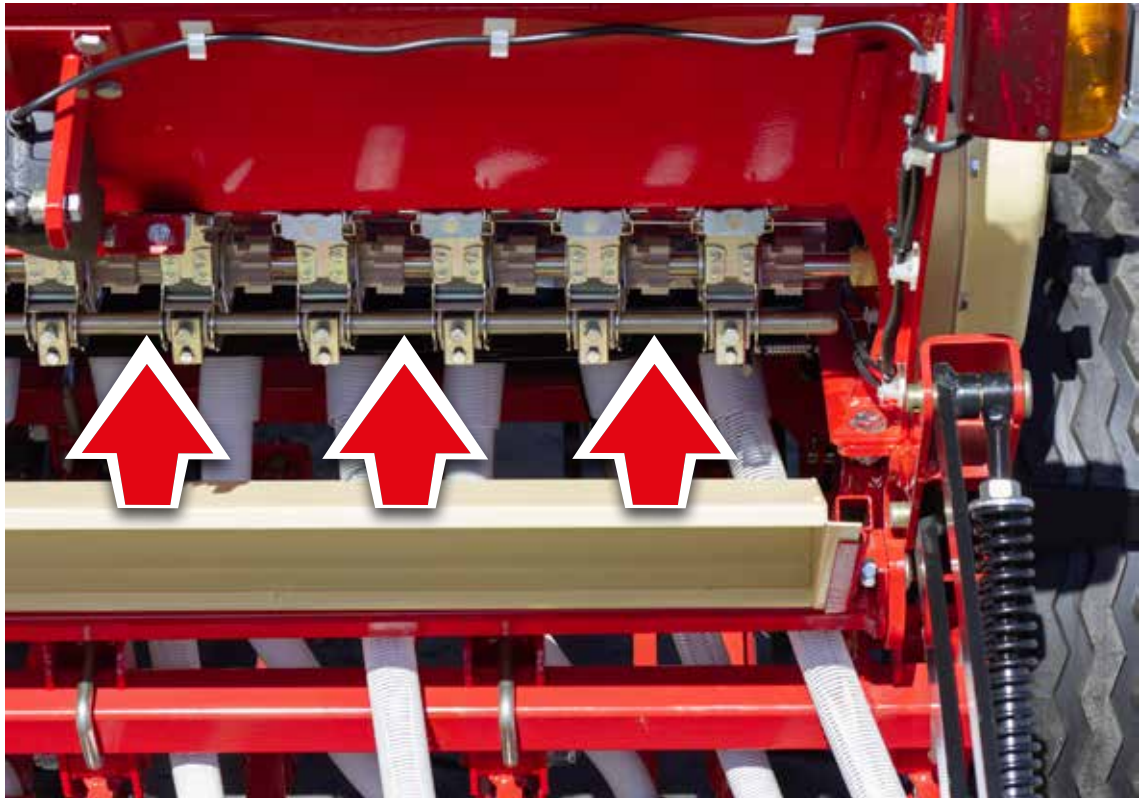

THIRD: Raise the seed drill using the tractor until the wheels can turn freely. Place the calibration crank in the bolt on right wheel and turn it clockwise until seeds start to fall onto the calibration cup. At this moment, stop turning, put these seeds back inside the hopper and start turning the crank again to perform the real turns of the test.

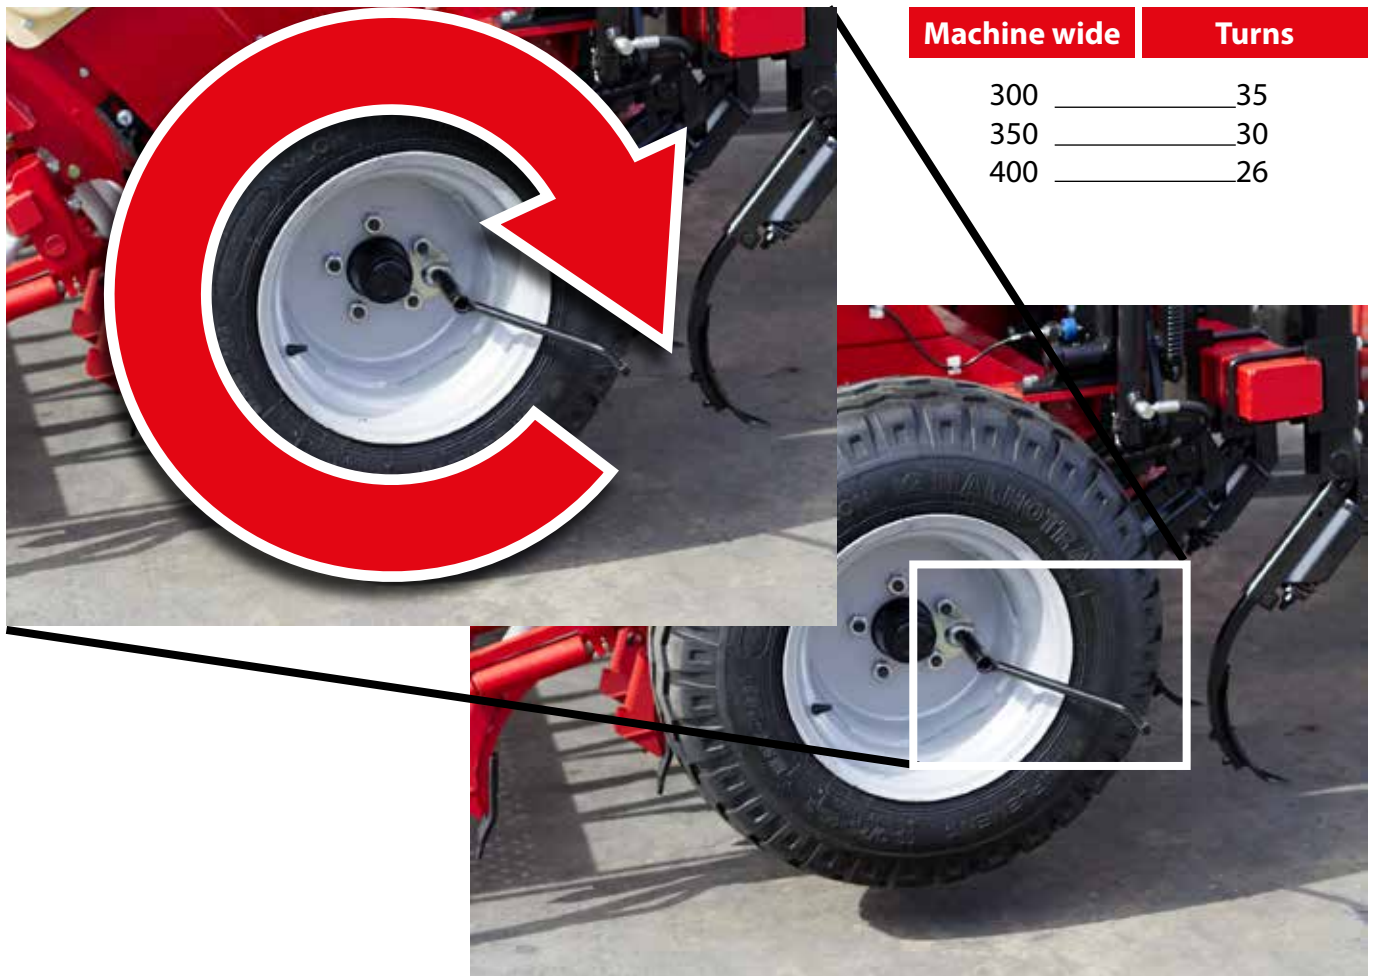

You must turn the wheel uniformly using the crank at approximately one revolution per second, depending on the land's characteristics, tyre's manufacturer or tyre pressure. For this reason it is highly recommended to perform a field test as described in this manual (4.5).

At the end, accurately weigh the collected seeds that are in the calibration cup. At a selected opening, you can obtain the kilograms per hectare distributed by the machine, by multiplying the weight by 40.

For ease of performing these operations the machine should be coupled to the tractor in a slightly elevated position (wheels should not be in contact with the ground). It is also necessary that the hopper is only half-filled with seeds to alleviate difficulty in turning the wheel with the crank.

If seeds show excess treatment powder, flow can be reduced, consequently a second control is recommended after sowing approximately three hoppers.



It is dangerous to turn the wheel with your hands as the mud scraper can cause injuries.

4.5- FIELD TEST

If differences exist between the test and the actual dose distribution (due to a very uneven or light soil, low pressurised tyres, etc.), an experimental test can be performed.

First of all, the distance (in metres) as shown in the table below should be marked on the field's ground using a tape measure.

Machine wide	Displacement (m)
300	83,3
350	71,4
400	62,5

Next, the seed drill in working position should cover that distance.

By means of a mark made previously on the tyre, count the number of turns performed in the covered distance. A good place whereby which to count could be the wheel's mud scraper.

By following these steps we can obtain the actual number of turns performed in the seed dosing test. By performing the test, we will know the actual kilograms per hectare distributed by the machine.

4.6- COULTERS DEPTH AND PRESSURE ADJUSTMENT


The coulters depth is set with an central adjuster spindle).

Previously we have explained how to adjust the pressure for each coulters individually



4.7- TINE COULTERS ADJUSTMENT

Tine coulters are secured to their support by means of a special nut (1, fig. 23) equipped with a auto-tightening nut. Tightening this bolt allows to correct the tine coulter's lateral looseness. This operation should be performed periodically.

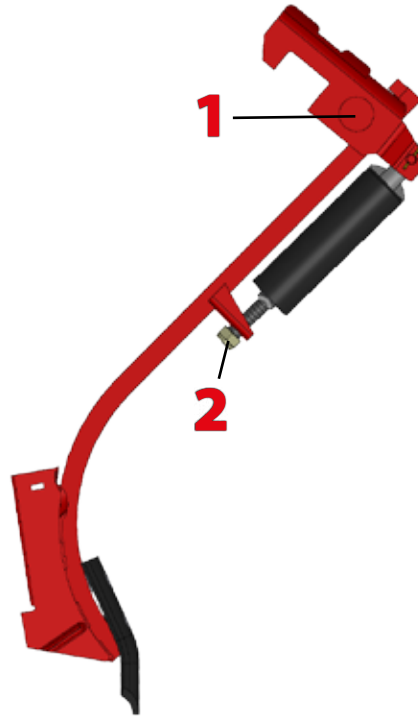

5- OPTIONAL EQUIPMENT

5.1- TRACK ERASERS

Track erasers are very effective devices to erase tractor's tracks. The four coulter's height and length can be adjusted depending on the vehicle's tread.



5.2- PARALLELOGRAMIC-SHAPED HARROW WITH FLEXIBLE TINES.

Harrow with double-tine springs which contribute to cover back the furrows produced by the sowing tine coulters.

By using the upper nut, the harrow's working pressure can be adjusted.

To adjust working depth, use the lower nut.

Parallelogramic-shaped joint allows the flexible tines to adapt vertical and horizontally to terrain irregularities in an excellent way.

Use always original double-tine springs SOLÀ, since they have been rigorously tested to achieve the highest quality.



Never step up the harrow when the machine is running.

5.3- TRACK MARKERS

Hydraulic track markers

Track markers should be assembled using the supplied screws in the supports placed in both sides of the machine. They are hydraulic and should be connected to a double-acting connection so that one arm is in vertical position and the other one is in working position. Cylinders contain a throttle to slow down and smooth the track marker's lift. Before starting work, check that they are in working order.

Track discs can be orientated to achieve the correct penetration angle and their supporters are extensible in order to be correctly adjusted. Track markers also have an extra spring which allows to adjust the pressure that track discs perform on the ground.

To calculate the horizontal spacing between track discs and the last lateral tine coulters, use following formula:

$$L = \text{Working width of the seed drill} \frac{\text{track width of the tractor} + \text{row spacing}}{2}$$

PLEASE NOTE: PERFORM THE CALCULATION USING MEASUREMENTS IN CENTIMETRES.





HIGH PRESSURE OIL MAY ESCAPE, PASS THROUGH THE SKIN AND INGRESS INTO THE BODY, CAUSING SERIOUS INJURIES. KEEP HYDRAULIC HOSE LINES IN GOOD CONDITION.



NEVER STAND UNDER THE TRACK DISCS OR WITHIN THEIR OPERATIONAL AREA



In order to transport the machine, it is essential to fold the track markers so they stay in a vertical position and pin them to the transport bracket using a lynch pin. This will prevent them from lowering during transit.



WHEN PULLING THE HYDRAULIC PIPES, BE SURE THAT THEY CAN NOT BE DAMAGED WHEN RAISING OR LOWERING THE SEED DRILL. CHECK ALSO THAT THEY ARE NOT EXPOSED TO ANY FRICTION.



DO NOT ADJUST SPRINGS AT HIGH PRESSURE NOR ORIENTATE TRACK DISCS VERY OBLIQUELY TO PREVENT SERIOUS DAMAGES TO THEM.


5.4- HECTARE COUNTER

The screw placed in gearbox's upper part must be removed (B1). Next, the hectare counter must be assembled over the gearbox's axle (A) and the special screw (B) supplied with the hectare counter must be screwed down in place A-1.

To access to the hectare counter's reset control, remove the black lid (C, fig. 33).

Finally, a washer and a pin should be placed at the end of the gearbox's axle (D, fig. 33). It is important to check that the pin is not in contact with the hectare counter's box when turning.

Hectare counter "SOLÀ 90" is a direct reading type (hectares and squared metres) and both pinion gears are specific for each machine type, as indicated in the following table:

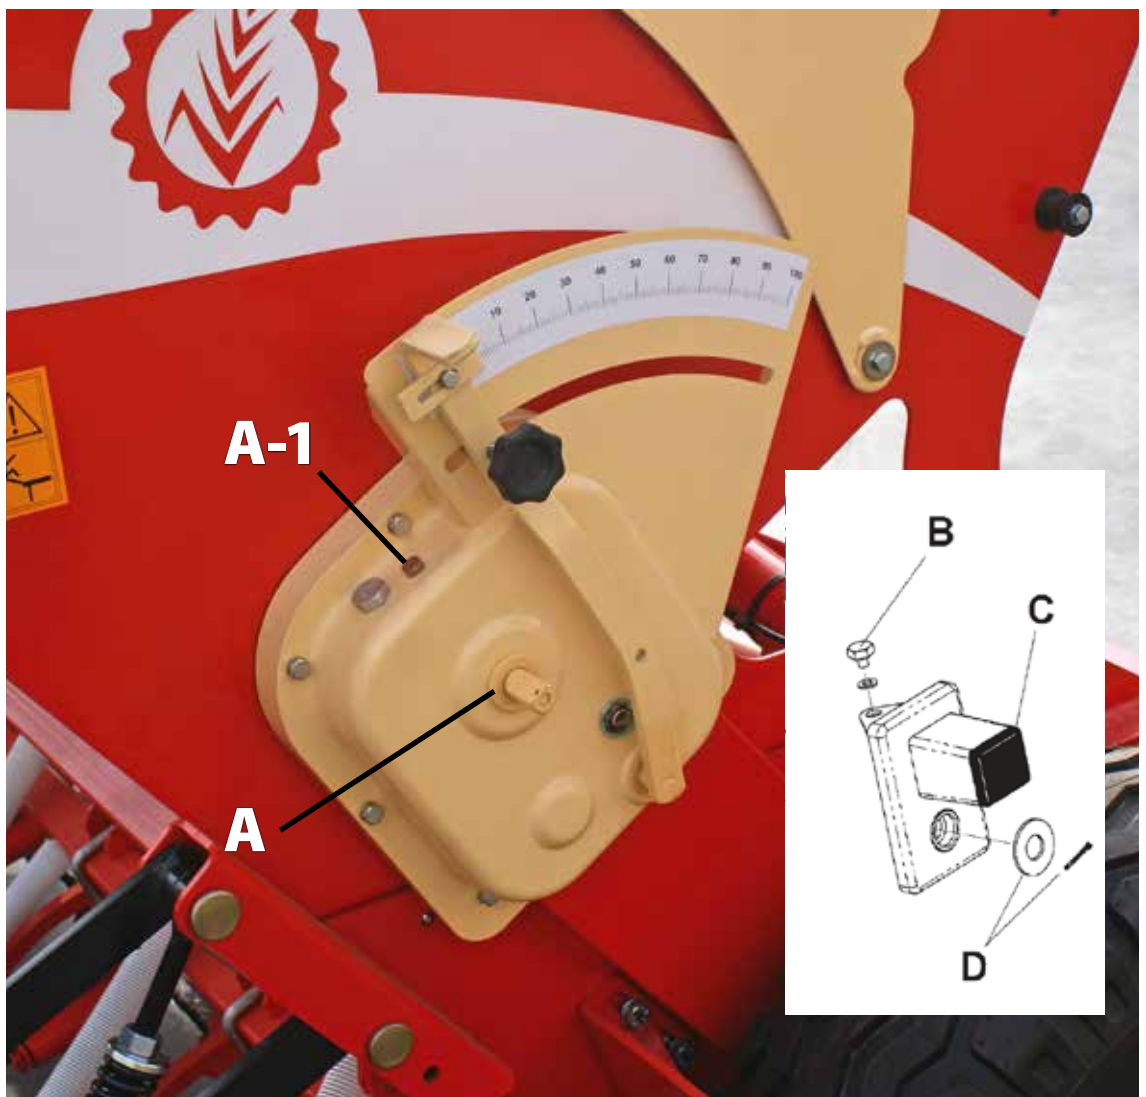

If the hectare counter are supplied separately from the machine, it is advisable to check that pinion type is correct.


5.5- FLOATING CULTIVATOR

Floating cultivator is part of the optional equipment to prepare the soil before sowing. It is assembled between the tractor and the seed drill.

Couple it to the tractor using an oscillant coupling bar (1). To couple it to the seed drill, use the two coupling arms (2) and a coupling piece (3) which joins both the machine's and the cultivator's three-point linkages.

The cultivator must perform the superficial ground work but the coulters placed on the tractor's tracks must work deeper: they must be adjusted to erase these tracks. Each coulters can be adjusted independently both vertically and horizontally.

The cultivator can be adjusted at four different working depths by switching the bolt's position (4). Being a floating cultivator allows its lateral and vertical movement to be independent from the seed drill. Thanks to this feature, the cultivator can be raised using the tractor's lift keeping at the same time the seed drill on the ground.

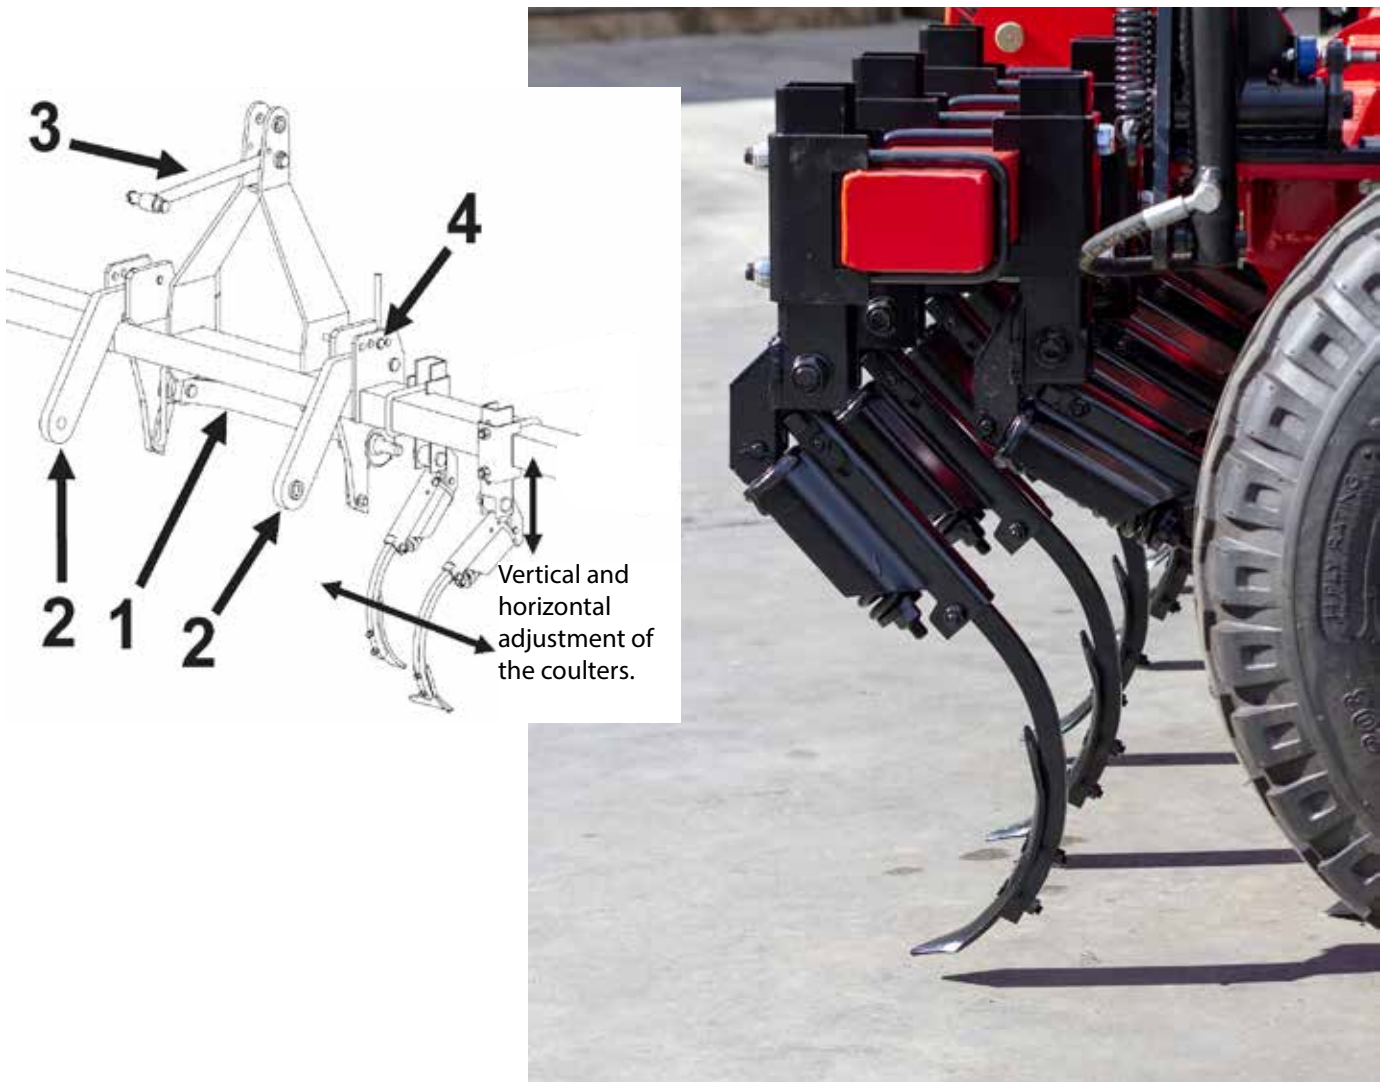


5.6- GEARBOX'S HYDRAULIC CONTROL

EGearbox can be equipped optionally with a hydraulic control to be used remotely.

The cylinder (1) must be assembled to gearbox's lever (2) using a bolt (3). It must be also assembled to the side of the machine using a screwed down support (4). The cylinder is supplied with a hydraulic hose line which must be plugged to a 1/2" tractor control unit.

The gearbox's hydraulic control consists of an single acting hydraulic cylinder with internal return spring, which sets the gearbox lever to "closed" (pressurised circuit) or "sowing" (unpressurised circuit).

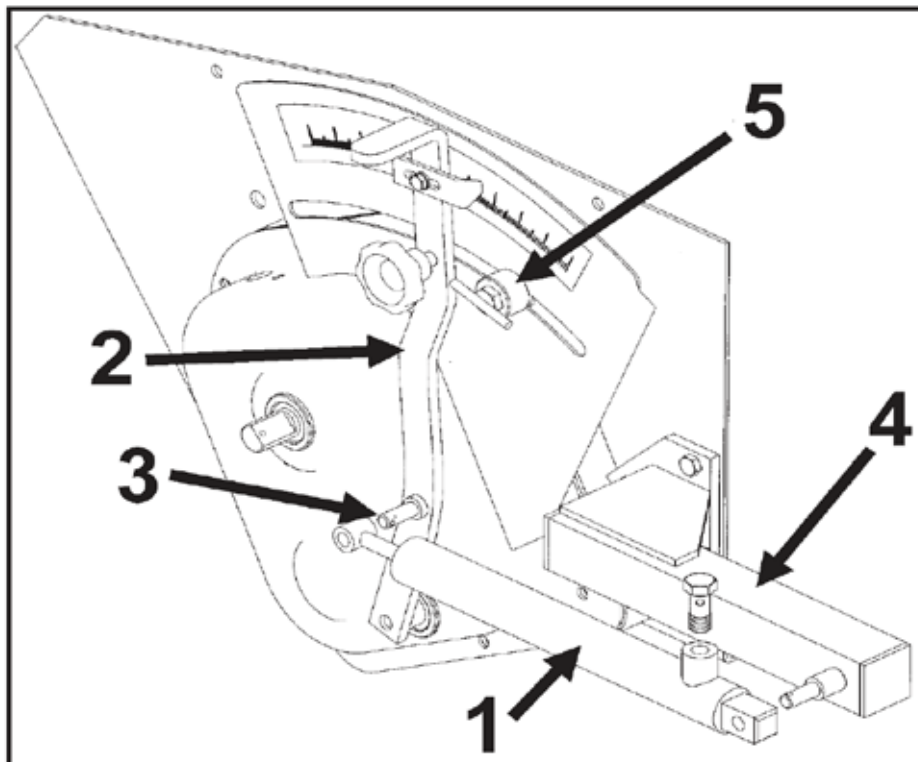

HIGH PRESSURE OIL MAY ESCAPE, PASS THROUGH THE SKIN AND INGRESS INTO THE BODY, CAUSING SERIOUS INJURIES. KEEP HYDRAULIC HOSE LINES IN GOOD CONDITION.

6- MAINTENANCE


6.1- LUBRICATION

The following parts should be lubricated periodically:

Wheels's bushings, releasing the push-in cap. Use solid calcium grease (1)




The central adjuster spindle. Use solid calcium grease (2)

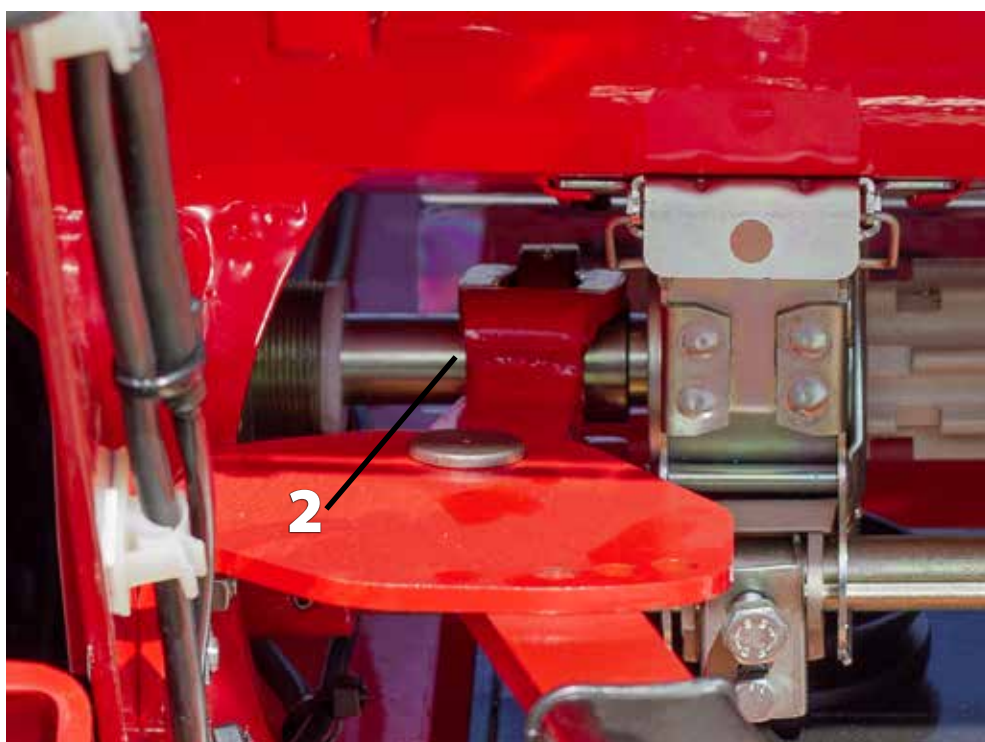

The seed dosing lever's roller guide. Use solid calcium grease. (3)



Check the gearbox's oil level by using the peephole (MIRILLA?? LITTLE WINDOW?) (4). If necessary, remove the cap (5) and refill it with oil type SAE 30.)

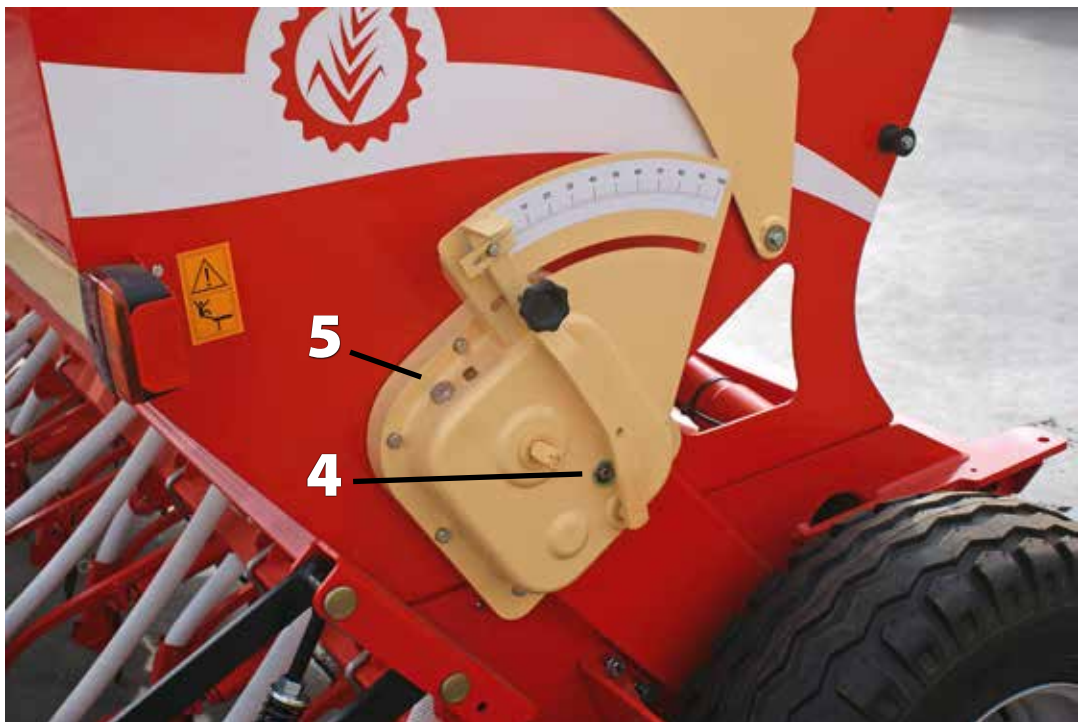

NEVER LUBRICATE THE SEED WHEELS.

6.2- TYRES PRESSURE

Indicated pressures are provided by the manufacturer, at maximum load.

Tyres	Pressure
10/75-15,3	6 kg/cm ²

In general use and especially when working on irregularly tilled terrains, it is recommended to use a slightly lower pressure to absorb the ground's irregularities and get a higher regularity in sowing.

6.3- SCREWS

After working for some hours, all screws should be checked and tightened. Put special attention to the ones which fix the tines to the coulter. For these ones, a special socket wrench is supplied which it is placed inside the hopper.



6.4- ANTIOXIDE CONTROL

Once the sowing season is finished, antioxide maintenance must be carried out as follows.

- a) Dismantle the pipes, nozzles and shutoff gates. Clean them thoroughly.
- b) Wash with water jet the whole machine, specially inside the hopper and the dispensers (with the covers removed). Turn the right wheel so that the seed wheels can be completely washed.
- c) Give a coat of paint to those parts with oxidation signs, specially those made of metal sheet.
- d) Verify the general greasing.

6.5- PROBLEM-SOLVING

In this chapter, user will find a guide to solve the most frequent problems that arise from a regular use of the machine.

Dosing system do not dose evenly.

- Check there is no external elements inside the seed wheel's box.
- Check that all shutoff gates are completely open.
- Check that all base flaps are correctly aligned.
- Check if the seed wheel show any worn out or damaged part.
- Do not work in very narrow circles: this carries an uneven seed dosing

Dose dispensed is lesser than expected or zero.

- Follow steps as described in this manual to adjust the correct dose, paying special attention to tyre's pressure, turning of the wheel on the ground, etc.
- Check that the tractor's hydraulic arms are completely lowered so that the drive wheel makes contact with the ground.
- Check the pin which connects the gearbox and seed wheel's axle.
- Check that scrapers are not slowing the drive wheel down.
- Check that the drive system is in good condition: bushing's teeth, chain and gearbox's pinion must them all not be worn out or show any damage.
- If none of the previous solutions turn out to be useful, contact your closest dealer SOLÀ with the gearbox. Do not try yourself to repair this part.

SEED DOSING TABLE																										
Gearbox value	Wheat		Barley		Triticale		Peas		Beans		Rape		Sainfoin		Vesce		Ray-gras		Lucerne		Spinach		Flax		Oats	
	Wide	Wide	Wide	Wide	Wide	Wide	Wide	Wide	Wide	Wide	Narrow	Narrow	Wide	Wide	Wide	Wide	Narrow	Narrow	Narrow	Narrow	Wide	Wide	Narrow	Narrow	Wide	Wide
14									67,5	3,3	20,4	63,7			11,7	4,9					32,3					19,8
16								81,4	4,4	25,0	77,6			14,2	5,9							38,9				23,5
18								98,0	5,1	28,7	93,3			17,1	7,5							45,3				26,8
20	75,8	59,1	56,4	37,9	116,4	6,1	33,3	109,1	116,4	6,1	33,3	109,1			19,1	8,9					51,8				30,5	
22	84,1	67,5	62,9	43,5	129,4	7,4	37,0	124,7	129,4	7,4	37,0	124,7			22,1	10,4					58,3				34,2	
24	92,4	73,9	69,3	46,2	143,2	8,1	42,5	137,8	143,2	8,1	42,5	137,8			24,0	11,9					64,7				37,9	
26	100,8	81,4	74,9	51,8	161,7	9,1	46,2	151,6	161,7	9,1	46,2	151,6			26,6	13,1					71,2				41,6	
28	109,1	88,7	82,2	56,4	183,0	9,3	51,8	171,0	183,0	9,3	51,8	171,0			29,6	14,7					77,6				45,3	
30	118,3	98,9	89,7	62,0	194,1	11,9	57,3	188,6	194,1	11,9	57,3	188,6			32,1	16,2					84,1				48,6	
32	127,6	106,3	98,9	64,7	209,8	12,9	64,7	197,8	209,8	12,9	64,7	197,8			34,9	17,5					90,6				52,1	
34	135,9	113,7	107,2	69,3	225,5	14,3	70,2	218,1	225,5	14,3	70,2	218,1			37,9	19,0					97,0				55,4	
36	145,1	122,0	117,4	73,9	241,3	15,8	79,5		241,3	15,8	79,5			40,6	20,4						103,5				59,1	
38	152,5	128,5	124,7	77,6		17,3	85,1			17,3	85,1			44,4	21,2						116,4				62,9	
40	159,9	134,9	132,2	81,4		19,1	88,7			19,1	88,7			49,0	25,8						133,1				66,6	
45	177,5	149,7	146,1	86,8		20,9	98,9			20,9	98,9			54,5	28,7						148,8				75,8	
50	196,9	166,4	159,9	92,4		23,5				23,5				59,1	33,3						165,5				84,5	
55	215,4	183,0	174,7	98,0										62,9	36,9						181,1				93,3	
60	234,8	200,6	191,3	105,4										67,5											102,6	
65	255,2	215,4	207,1	129,4											26,8										111,4	
70	274,5	232,1	221,9	139,5											30,5										120,6	
75	293,9	249,6	237,5												38,9										129,4	
80	313,3	264,4	253,3																						138,3	
85	336,4	280,0	269,0												147,5										147,5	
90	361,4	293,9	283,7																						156,2	
95	373,4	310,6	299,5																						158,7	
100	388,2	325,4	316,2																						160,9	
Row spacing	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5	
Base flaps's lever set in n°	3	3	3	3	3	3	3	3	4	4	1	1	3	3	2	2	1	1	1	1	1	1	1	1	3	
1000 grains operative weight	40	46	30	239	530	44	19	12	5,6	24																

DOSING	MACHINE WIDTH	1075-15,3 RUEDAS (X)			KG (after X turns) x 40 = ----- (Kg/Ha)
	TYPE 300	35	30	26	
	TYPE 350	30	26	26	

7- SPARE PARTS

7.1- INTRODUCTION

The terms RIGHT, LEFT, FRONT and REAR refer to the machine in its starting direction.

When guidance describes parts that have a matching pair (symmetrical handles, wheels etc) only one will be demonstrated in the drawings shown. Please search for the distinguishing reference in the spare parts list.

When asking for spare parts, please provide the number and type of the machine that can be found on the machine's IDENTIFICATION PLATE.



BE CAREFUL WHEN MAINTAINING THE SEED DRILL, SHARP EDGES CAN CAUSE INJURY



DO NOT WORK UNDER THE MACHINE WHEN IT IS RAISED. ALWAYS SECURE THE MACHINE PROPERLY TO PREVENT IT FROM COLLAPSING AS A PRESSURE LOSS IN THE TRACTOR CAN OCCUR

7.2- CHASSIS

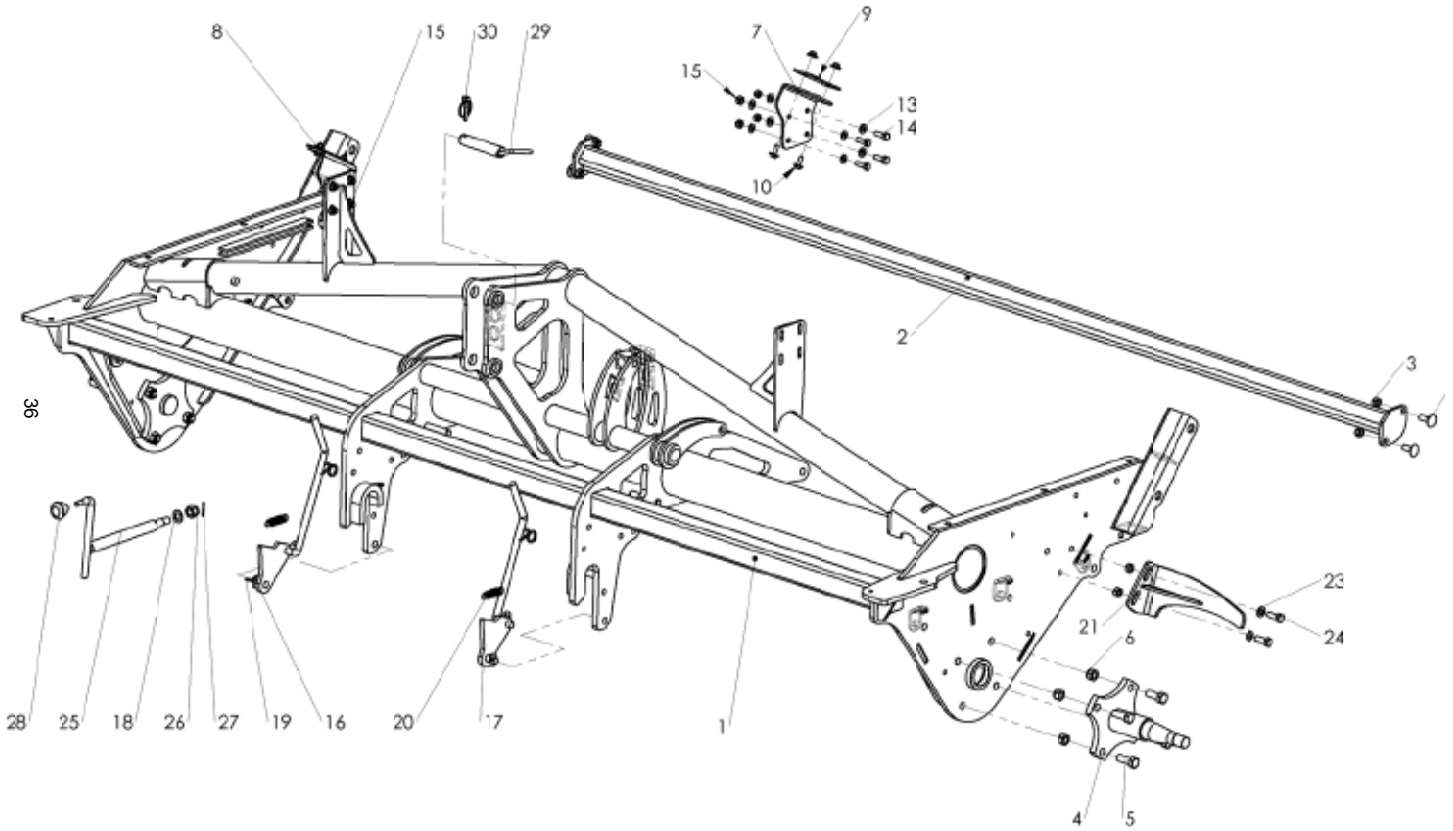


Figura	Código	Denominación
1	PS-012111	CHASIS TRI-2110 300 ACABADO
2	PS-012115	REFUERZO TRASERO CHASIS 300
3	985 12	TUERCA DIN 985 M12
4	PS-012110	MANGUETA TRI-2110 F-127
5	933 16X45 8.8B	TORNILLO DIN 933 M16x45 8,8 BI
6	985 16	TUERCA DIN 985 M16
7	PX-012134-D	CHAPA UNION TOLVA DER.
8	PX-012134-I	CHAPA UNION TOLVA IZQ.
9	PL-022100	GOMA UNION TOLVA TRIPODE
10	9021 8 BI	ARANDELA PLANA DIN 9021 M8 BI
13	125 10 BI	ARANDELA DIN 125 M10 BI
14	933 10X30 8.8 B	TORNILLO DIN 933 M10x30 8,8 BI
15	985 10	TUERCA DIN 985 M10
16	PS-012124-D	GATILLO TRI-2110 DERECHA
17	PS-012124-I	GATILLO TRI-2110 IZQUIERDA
18	125 16 BI	ARANDELA DIN 125 M16 BI
19	94 5X25 BI	PASADOR DE ALETAS DIN 94 5X25 BI
20	MI-010101	MUJERLE GUITARRA
21	PS-012123-D	RASCADOR RUEDA DERECHA TRI-2110
21	PS-012123-I	RASCADOR RUEDA IZQUIERDA TRI-2110
23	125 12 BI	ARANDELA DIN 125 M12 BI
24	933 12X35 8.8B	TORNILLO DIN 933 M12x35 8,8 BI
25	PS-0104	HUSILLO CONTROL PROFUNDIDAD
26	935 16 BI	TUERCA DIN 935 M16 BI
27	94 3,5X28 BI	PASADOR DE ALETAS DIN 94 3,5X28 BI
28	PL-010200	EMPUÑADURA "PERA"40
29	PS-010101	BULON DEL TRIPODE
30	FE-610008	PASADOR ANILLA DE 12
31	603 12X35 BI	TORNILLO DIN 603 M12x35 BI

7.3- HOPPER

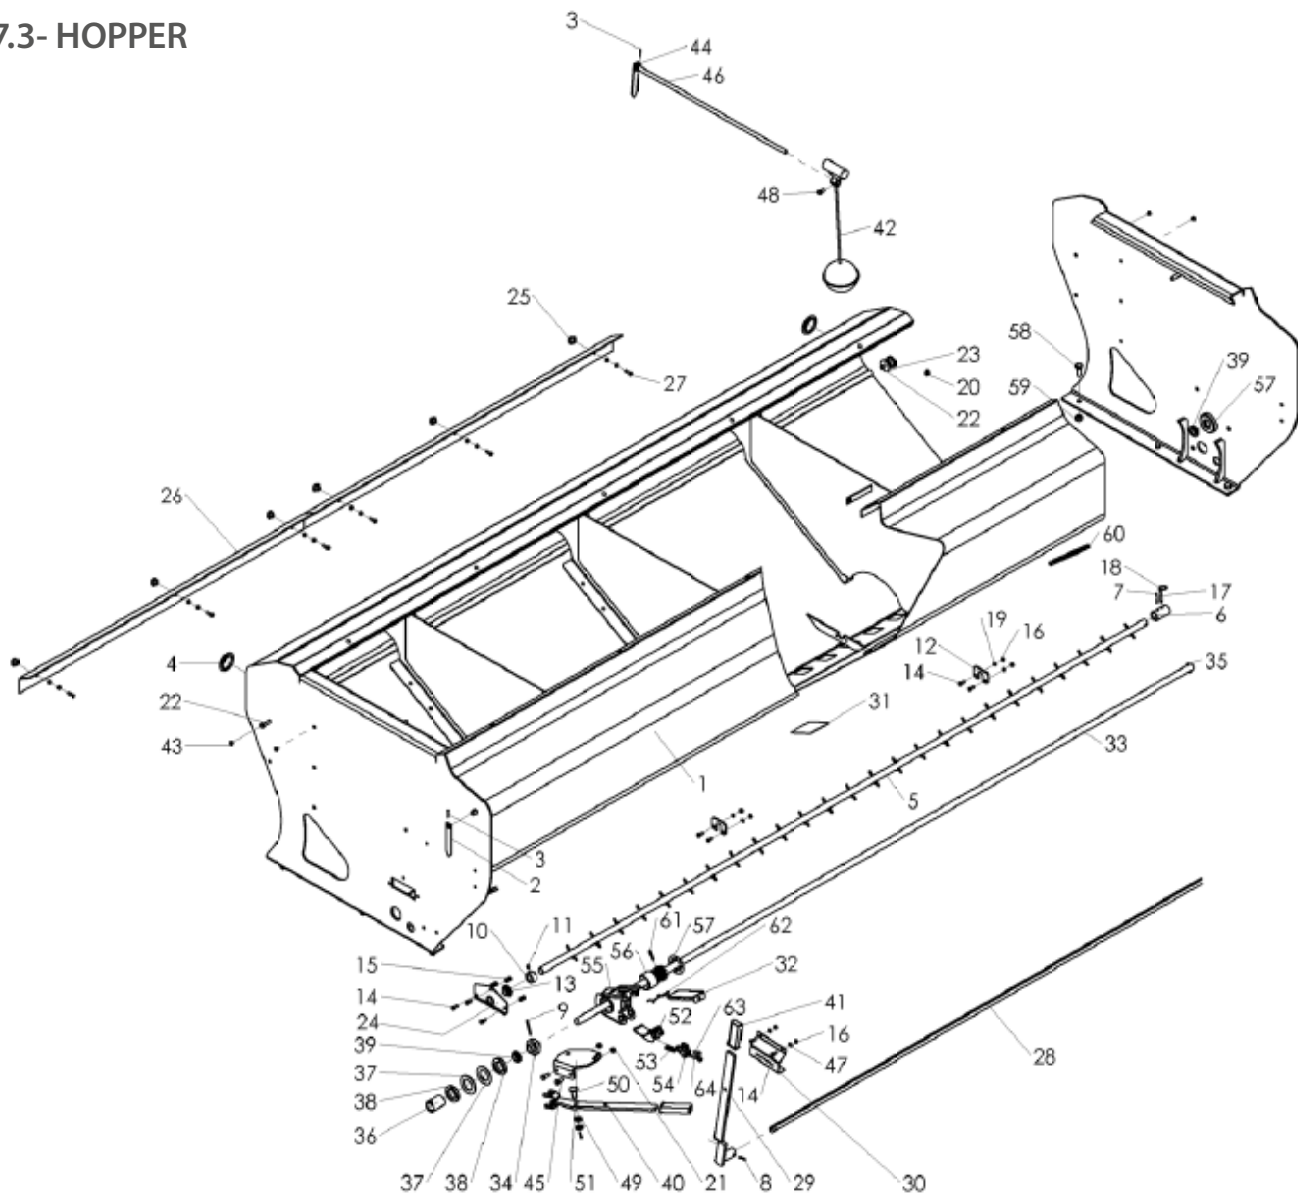


Figura	Codigo	Denominación			
1	PS-022108	TOLVA SEMBRADORA TRI-2110 300	34	ME-042107	RULINA ARRASTRE D-20
2	I01-01	INDICADOR VERTICAL	35	6325 7X30	PASADOR DIN 6325 Ø7x30
3	94 3,5X20 BI	PASADOR DE ALETAS DIN 94 3,5X20 BI	36	ME-032101	SOPORTE TOLVA REGULABLE EJE DISTR
4	PL-021300	TAPON AGUJERO PASAMANGUERAS NEUMASEM	37	PX-022157	ARANDELA EJE DISTRIBUIDOR
5	PS-042104	EJE AGITADOR 300 TRI-2110	38	981 35-150	TIJERCA KM-7 M-35x1,5
6	T01-111	TUBO UNION VARILLA AGITADOR	39	PL-020204	CASQUILLO 20,2X25X10
7	1481 7X30 BI	PASADOR ELASTICO DIN 1481 Ø7x30 BI	40	PS-042103	PALANCA EIX DISTRIBUIDOR TRI-2110
8	1481 5X25 BI	PASADOR ELASTICO DIN 1481 Ø5x25 BI	41	E06-23	MANOPLA PVC PARA PASAMANO 30X8
9	1481 5X50 BI	PASADOR ELASTICO DIN 1481 Ø5x50 BI	42	PS-022115	BOYA TOLVA TRI-2110
10	A01-86	ANILLO RETENCION CASQUILLO AGITADOR	43	FE-611017	TAPONES PROT. PARALELOS D8,5MM
11	914 8X10 BI	ESPARRAGO HEX/INT DIN914 M8x10	44	125 12 BI	ARANDELA DIN 125 M12 BI
12	P04-03	PUENTE AMARRE VARILLA AGITADOR	45	933 8X20 8.8B	TORNILLO DIN 933 M8x20 8,8 BI
13	C09-73	CASQUILLO 20,2X25X10	46	TA-022101	EJE INDICADOR NIVEL BOYA 2110
14	933 6X16 8.8B	TORNILLO DIN 933 M6x16 8,8 BI	47	127 6 BI	ARANDELA GROWER DIN 127 6 BI
15	125 6 BI	ARANDELA DIN 125 Ø6 BI	48	933 6X15 8.8B	TORNILLO DIN 933 M6x15 8,8 BI
16	934 6 BI	TUERCA DIN 934 M6 BI	24	EE-020215	TAPA SOPORTE EJE AGITADOR, SEM.
17	B03-95	BULON DEL AGITADOR	49	M01-61	MUELLE PALANCA REGULACION
18	L02-01	LLAVERO CERRADO	50	B03-194	BULON ARTIC PALANCA DISTR
19	7980 6 BI	ARANDELA GROWER DIN 7980 M6 BI	51	PX-042113	CHAPA POSICIONAMIENTO EJE DISTR
20	125 8 BI	ARANDELA DIN 125 M8 BI	52	PL-040205	TAPETA FONDO MOVIL
21	985 8	TUERCA DIN 985 M8	53	M01-60	MUELLE TAPETA FONDO MOVIL SEMBRADORA
22	933 8X45 8.8B	TORNILLO DIN 933 M8x45 8,8 BI	54	B10-11	BRIDA SOPORTE TAPETA FONDO MOVIL
23	BU-020700	BULON GUIA-TOPE TAPA TOLVA	55	CO-042101	DISTRIBUIDOR CHAPA TRI-2110
25	PL-073100	VOLANTE CON TUERCA M6	56	PL-040201	RODILLO SIMIENTE
26	PL-042104	PROTECTOR DISTRIB 300 DER	57	A02-20	ARANDELA ESTRIADA CHAPA
27	933 6X20 8.8B	TORNILLO DIN 933 M6x20 8,8 BI	58	933 12X30 8.8 B	TORNILLO DIN 933 M12X30 8,8 BI
28	PM-0412	EJE FONDO MOVIL -300	59	985 12	TUERCA DIN 985 M12
29	PS-043135	PALANCA FONDO MOVIL	60	CT-0420	GUIA, DESCANSO BANDEJA TOLVA SEMBRADORA
30	PX-043106	CHAPA POS PALANCA F. MOVIL EUROPA 2000 N/XS	61	1481 5X30 BI	PASADOR ELASTICO DIN 1481 M 5X30 BI
31	PX-022156	TAPA DISTRIBUIDOR LIBRE	62	ML-042101	MUELLE POSICIONADOR TAPETA TRI-2110
32	PX-042103	TAPETA CORREDERA DISTRIBUIDOR	63	933 8X20B PUNTA	TORNILLO DIN 933 8X20 BI CON PUNTA
33	TA-042103	EJE DE SIEMBRA 300/25	64	931 6X45 8.8 B	TORNILLO DIN 931 M6X45 8,8 BICROMATADO

7.4- COVER AND SELECTOR SIEVE

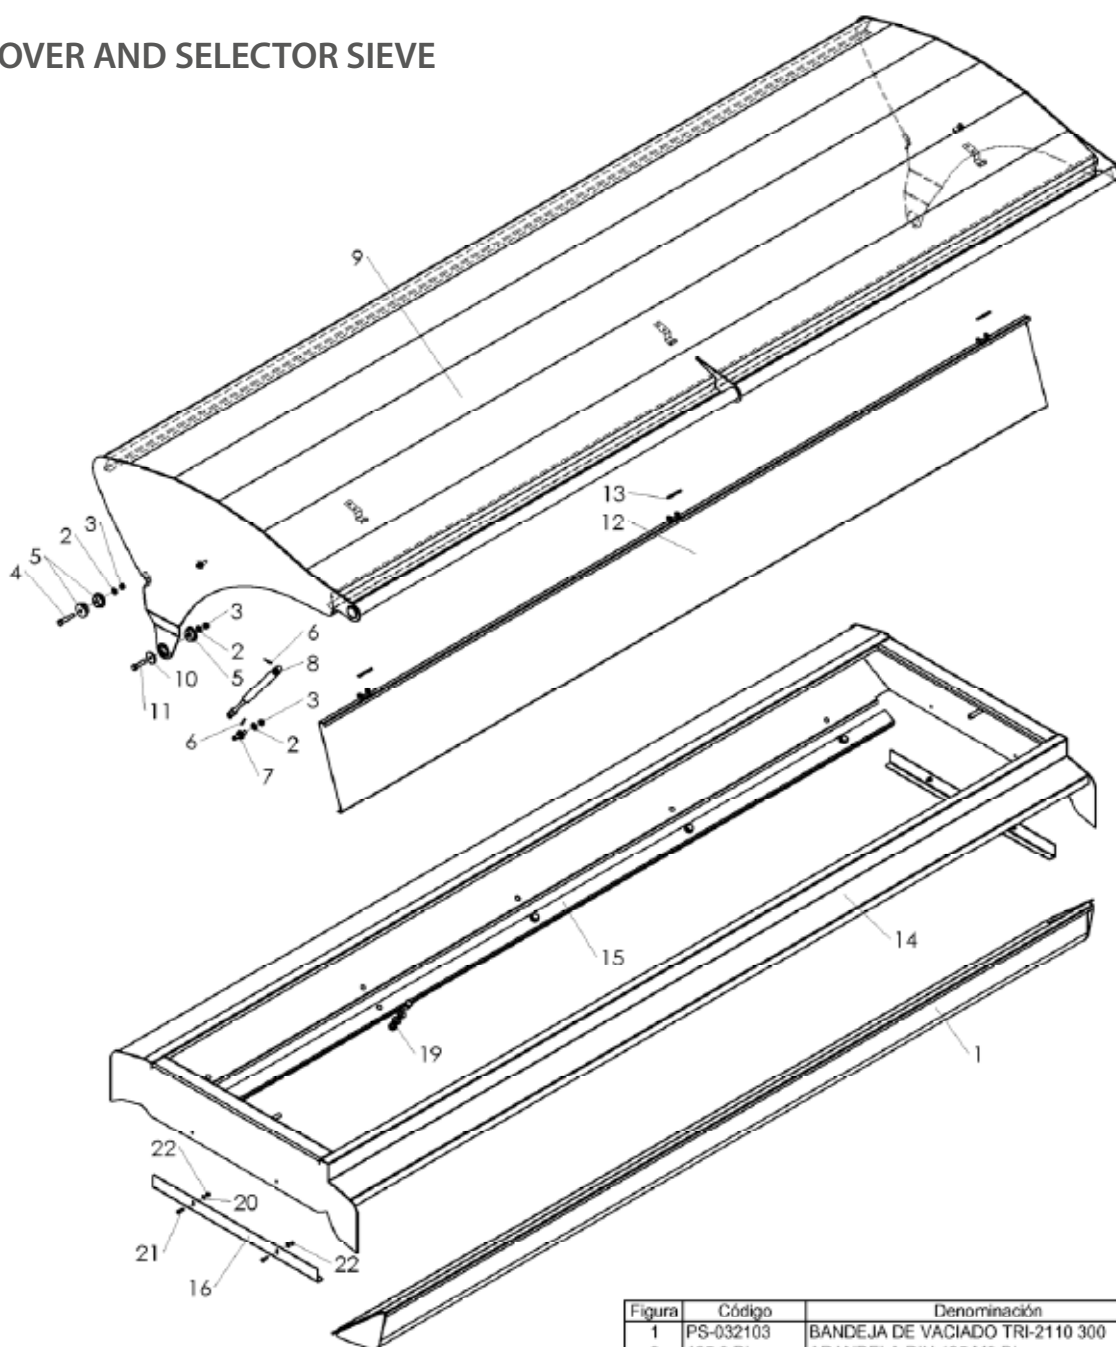


Figura	Código	Denominación
1	PS-032103	BANDEJA DE VACIADO TRI-2110 300
2	125 8 BI	ARANDELA DIN 125 M8 BI
3	985 8	TUERCA DIN 985 M8
4	933 8X45 8 BI	TORNILLO DIN 933 M8x45 8,8 BI
5	BU-020700	BULON GUIA-TOPE TAPA TOLVA
6	94 2X20 BI	PASADOR DE ALFAS DIN 94 2X20 BI
7	ME-032103	BULON PISTON GAS TOLVA
8	FE-660022	RESORTE A GAS Ø8 TAPA TRI-2110
9	PS-032100	TAPA TOLVA SEMBRADORA TRI-2110 300
10	EE-030200	ARANDELA Ø30 CON AGUJ. Ø8,5 BI.
11	933 8X35 8.8B	TORNILLO DIN 933 M8x35 8,8 BI
12	PS-032106	DELANTAL 300 TRI-2110
13	94 5X36 BI	PASADOR DE ALETAS DIN 94 5X36 BI
14	PS-022111	ALZA SEMBRADORA TRI-2110 300
15	PX-022158	REFUERZO CIERRE ALZA 300
16	PX-022159	CHAPA CIERRE LATERAL ALZA
19	985 10	TUERCA DIN 985 M10
20	125 5 BI	ARANDELA DIN 125 M5 BI
21	933 5X16 8.8B	TORNILLO DIN 933 M5x16 8,8 BI
22	985 5	TUERCA DIN 985 M5

7.5- ARMS BARS

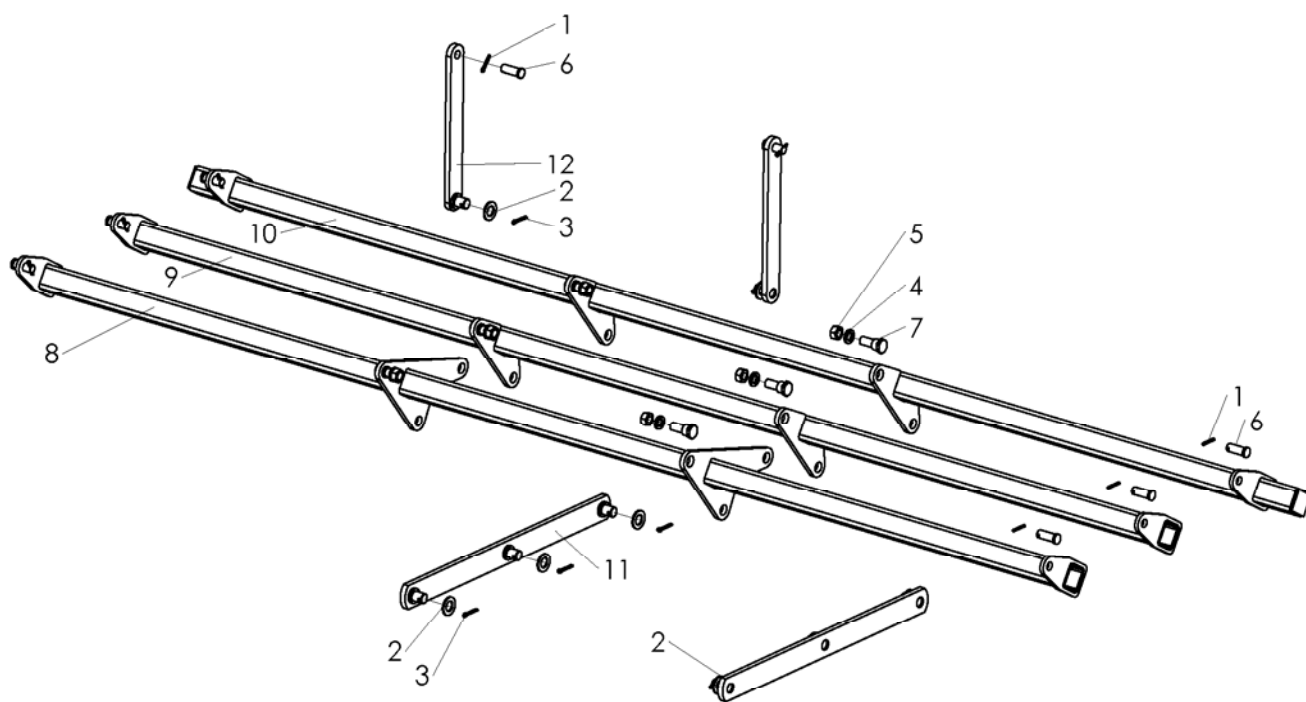


Figura	Código	Denominación
1	94 5X25 BI	PASADOR DE ALETAS DIN 94 5X25 BI
2	125 20 BI	ARANDELA DIN 125 M20 BI
3	94 5X32 BI	PASADOR DE ALETAS DIN 94 5X32 BI
4	127 16 BI	ARANDELA GROMER DIN 127 16 BI
5	934 16 BI	TUERCA DIN 934 M16 BI
6	B03-201	BULON d16x47 ESTAMPADO
7	BU-050703	BULON LATERAL PORTABASTIDOR
8	MO-052102	CONJUNTO PORTABOQUILLAS 300 TRI-2110
9	MO-052105	BARRAS PORTABRAZOS BRAZOS 300M9 TRI-2110
10	MO-052108	BARRAS PORTABRAZOS BRAZOS 350M22 TRI-2110
11	PS-2614	BIELA SINCRONIZACION BARRA PORTABRAZOS
12	PS-012122	BIELA SINCRONIZACION BARRA PORTABRAZOS

7.6- TRACK ERASERS "RANSOME"

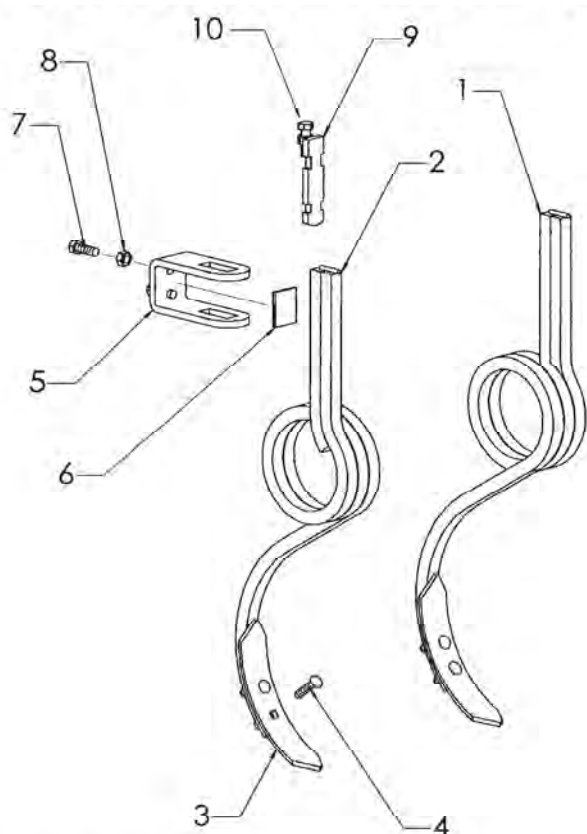


Figura	Código	Denominación
1	PS-1105/D	Brazo borrahuellas con taco derecha
2	PS-1105/I	Brazo borrahuellas con taco izquierda
3	FO-060300	Rejita de 57x7
4	608/934 9X40	Tomillo de arado DIN 608 M-9x40 con tuerca
5	EE-060307	Brida sujeción brazo borrahuellas
6	PX-060200	Pletina brida borrahuellas
7	933 12X35 8.8 B	Tomillo DIN 933 M-12x35 8.8 bicromatado
8	934 12 BI	Tuerca DIN 934 M-12 bicromatada
9	CO-060200	Tensor de apriete corto
10	933 12X40 8.8 B	Tomillo DIN 933 M-12x40 8.8 bicromatado

7.7- TRACK ERASERS "SPRING"

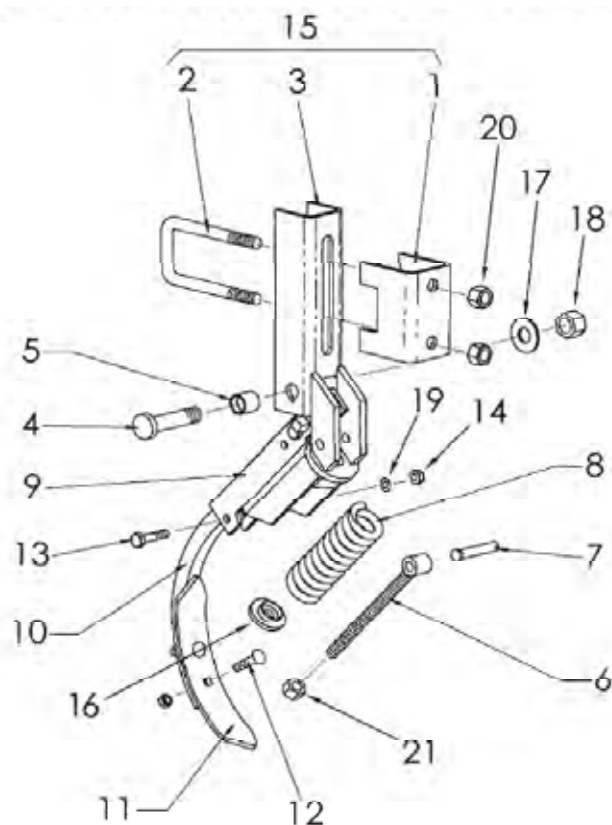


Figura	Código	Denominación
1	PX-060201	Refuerzo corto soporte brazo borrahuellas BM
2	EE-060228	Brida brazo borrahuellas BM
3	PS-1113	Soporte brazo borrahuellas BM
4	EE-050312	Tomillo del soporte M-20/150x85
5	PL-050302	Casquillo articulación brazo
6	FO-060202	Tensor muelle brazo borrahuellas y cultivador
7	BU-060300	Bulón Ø12x69
8	ML-060300	Muelle del brazo borrahuellas y cultivador
9	PS-1120	Bastidor brazo borrahuellas BM con taco
10	FO-060302	Brazo corto para borrahuellas BM
11	FO-060300	Rejita de 57x7
12	608/934 9X40	Tomillo de arado DIN 608 M-9x40 con tuerca
13	931 10X45 8.8 B	Tomillo DIN 931 M-10x45 8.8 bicromatado
14	934 10	Tuerca DIN 934 M-10
15	MO-0719	Brazo borrahuellas BM completo
16	ME-052812	CASQUILLO TOPE MUELLE ML-052802
17	125 20 BI	Arandela plana DIN 125 Ø20 bicromatada
18	985 20/150	Tuerca DIN 985 M-20/150
19	127 10	Arandela grower DIN 127 Ø10
20	985 16	Tuerca DIN 985 M-16
21	980 14 BI	Tuerca DIN 980 M-14 bicromatada

7.8- FLOATING CULTIVATOR

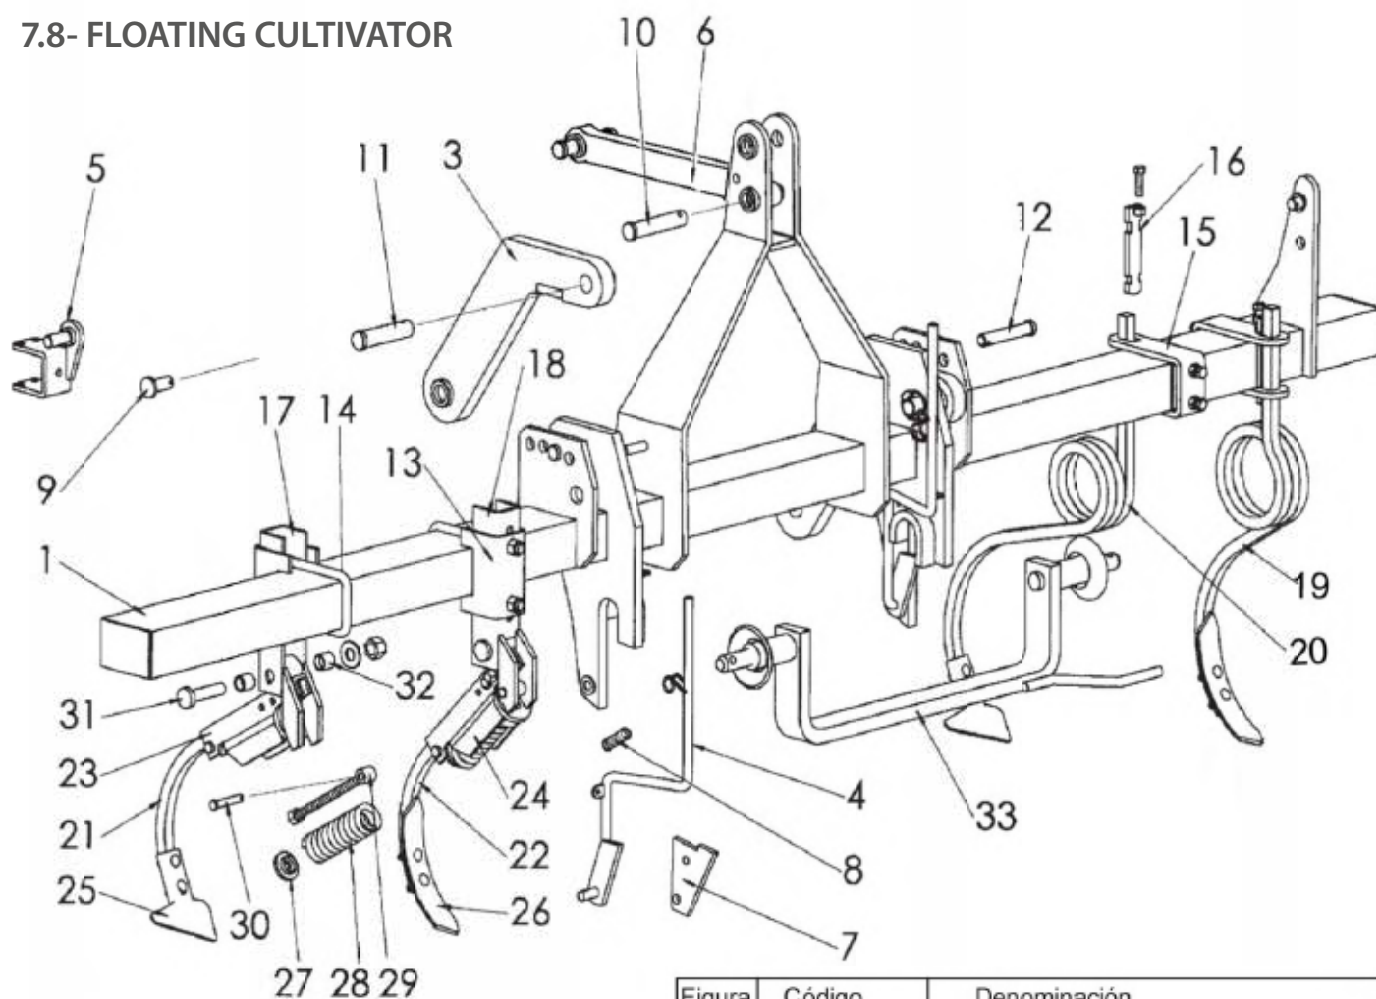


Figura	Código	Denominación
1	PS-0705/6/7/8	Chasis cultivador flotante 250/300/350/400
3	PS-0702/D	Biela enganche CF TRI derecha
3	PS-0702/I	Biela enganche CF TRI izquierda
4	TA-060201/D	Gatillo enganche CF con clip, derecha
4	TA-060201/I	Gatillo enganche CF con clip, izquierda
6	PS-060205	Tirante tercer punto C.F. TRI
7	TA-0721	Pletina sustitución gatillo
8	ML-010101	Muelle gatillo enganche
10	BU-060203	Bulón Ø25x125
11	BU-060202	Bulón Ø28x115
12	BU-060201	Bulón Ø20x115
13	PX-060202	Refuerzo mediano soporte brazo BM para CF
14	EE-060230	Brida brazo cultivador flotante M
15	EE-060227	Brida brazo cultivador flotante R
16	CO-060201	Tensor de apriete mediano
17	PS-1117	Soporte brazo cultivador CM
18	PS-1113	Soporte brazo borrahuellas BM
19	VA-060200/D	Brazo borrahuellas R sin taco derecha
19	VA-060200/I	Brazo borrahuellas R sin taco izquierda
20	VA-060201/D	Brazo cultivador R sin taco derecha
20	VA-060201/I	Brazo cultivador R sin taco izquierda
21	FO-060303	Brazo largo para cultivador CM
22	FO-060302	Brazo corto para borrahuellas BM
23	PS-1121	Bastidor brazo cultivador CM con taco
24	PS-1120	Bastidor brazo borrahuellas BM con taco
25	FO-060301	Rejita golondrina 135 mm
26	FO-060300	Rejita 57x7
27	ME-052812	CASQUILLO TOPE MUELLE ML-052802
28	ML-060300	Muelle brazo borrahuellas y cultivador
29	FO-060202	Tensor muelle brazo borrahuellas y cultivador
30	BU-060300	Bulón Ø12x69
31	EE-050312	Tornillo del soporte M-20/150
32	PL-050302	Casquillo articulación brazo
33	PS-0109	Barra enganche EURO categoría II

7.9- CENTRAL LEVELER

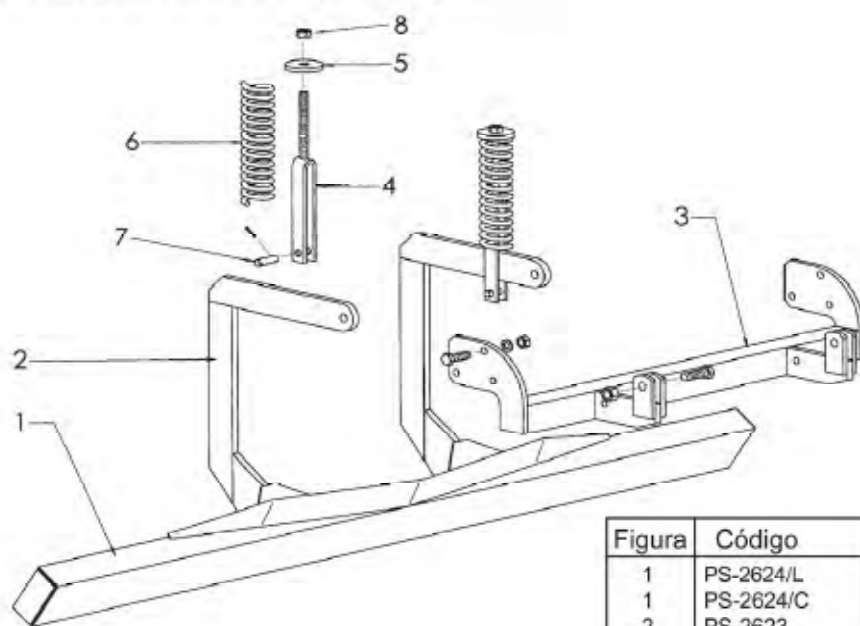


Figura	Código	Denominación
1	PS-2624/L	Cuerpo inferior nivelador 630 mm
1	PS-2624/C	Cuerpo inferior nivelador 420 mm
2	PS-2623	Brazo soldable niveladora
3	PS-2665/L	Cuerpo superior nivelador 630 mm
3	PS-2665/C	Cuerpo superior nivelador 420 mm
4	MB-13	Brida del muelle
5	EE-060303	Tapeta del muelle
6	ML-080100	Muelle brazo rastra
7	BU-080702	Bulón Ø11x40 bicromatado
8	934 12/150 BI	Tuerca DIN 934 M-12/150 bicromatado

7.10- HECTARE COUNTER

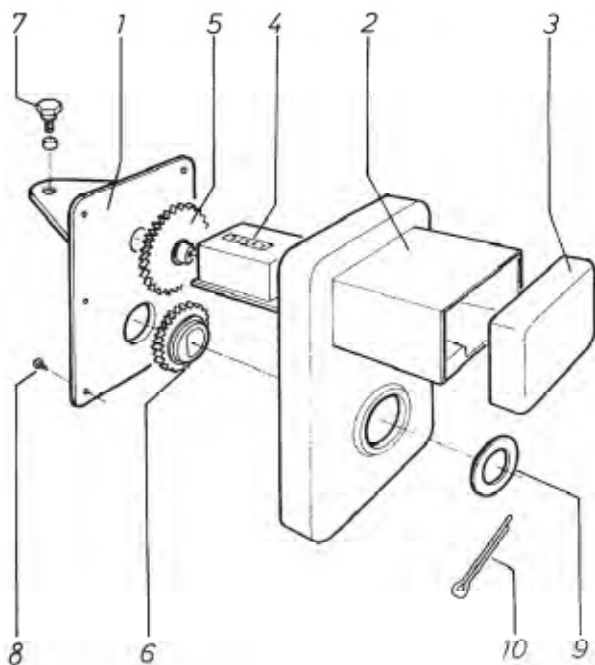


Figura	Código	Denominación
1	PL-100200	Base caja cuenta-hectáreas
2	TA-100102	Caja cuenta-hectáreas
3	PL-100201	Tapa negra cuenta-hectáreas
4	MV-100200	Contador cinco cifras + 0
5	PL-100300	Piñón conducido de 65Z para máquina de 250
5	PL-100301	Piñón conducido de 61Z para máquina de 300
5	PL-100101	Piñón conducido de 59Z para máquina de 350
5	PL-100303	Piñón conducido de 56Z para máquina de 400
6	PL-100304	Piñón motriz de 28Z para máquina de 250
6	PL-100305	Piñón motriz de 32Z para máquina de 300
6	PL-100105	Piñón motriz de 34Z para máquina de 350
6	PL-100307	Piñón motriz de 37Z para máquina de 400
7	ME-100211	Tomillo sujeción cuenta-hectáreas
8	7971 7X3/8 BI	Tomillo rosca chapa DIN 7971 7x3/8" bicrom.
9	125 20 BI	Arandela plana DIN 125 Ø20 bicromatada
10	94 3,5X28 BI	Pasador aletas DIN 94 Ø3,5X28 BI

7.11- HARROW WITH FLEXIBLE TINES EPI-6

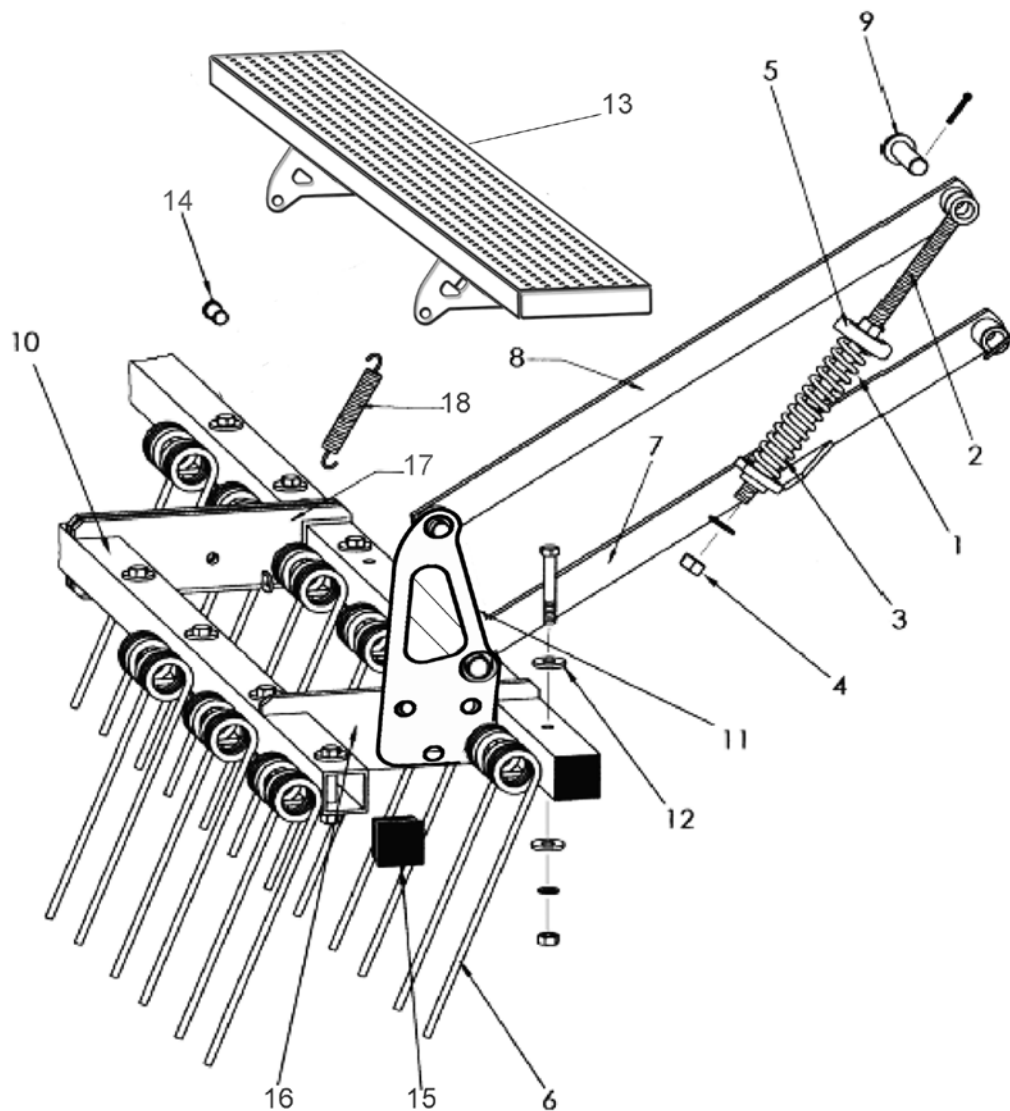


Figura	Código	Denominación
1	ML-080104	Muelle brazo rastra epi-6
2	PS-1710	Tensor muelle rastra epi
3	PS-1735	Tubo interior muelle rast epi 6
4	985 16	Tuerca din 985 m16
5	EE-080306	Tapeta muelle ø40x20,5
6	ML-080103	Muelle doble púa ø 8 mm. Trasero (m01-83)
7	PS-1741/D	Brazo motriz/d rastra epi 6 para tri y super
7	PS-1741/I	Brazo motriz/i rast epi 6 para tri y super
8	PS-1734	Brazo tensor rastra epi-5 para tri
9	BU-080202	Bulón largo ø20x78 estampado (b03-177)
10	PS-1736/37/38	Barras rastra 250/300/350 epi 6
11	PS-082109/D7I	Pletina art. Brazo rastra der-izq. Tri-2110
12	ME-080202	Arandela ø14x4 bicromatada s-848 (a02-25)
13	PS-082105/06/07/08	Peldaño 250/300/350/400 rastra epi6
14	BU-080206	Bulon 16x37
15	CN-817001	Contera de plastico para tubo 50x50x3
16	PX-080207	Pletina union tubos, sold.rastra epi-6 (p03-235)
17	PX-080201	Pletina artic.peldaño, sold.rastra epi-6 (p03-236)
18	ML-080101	Muelle del peldaño rastra

7.12- MARKERS

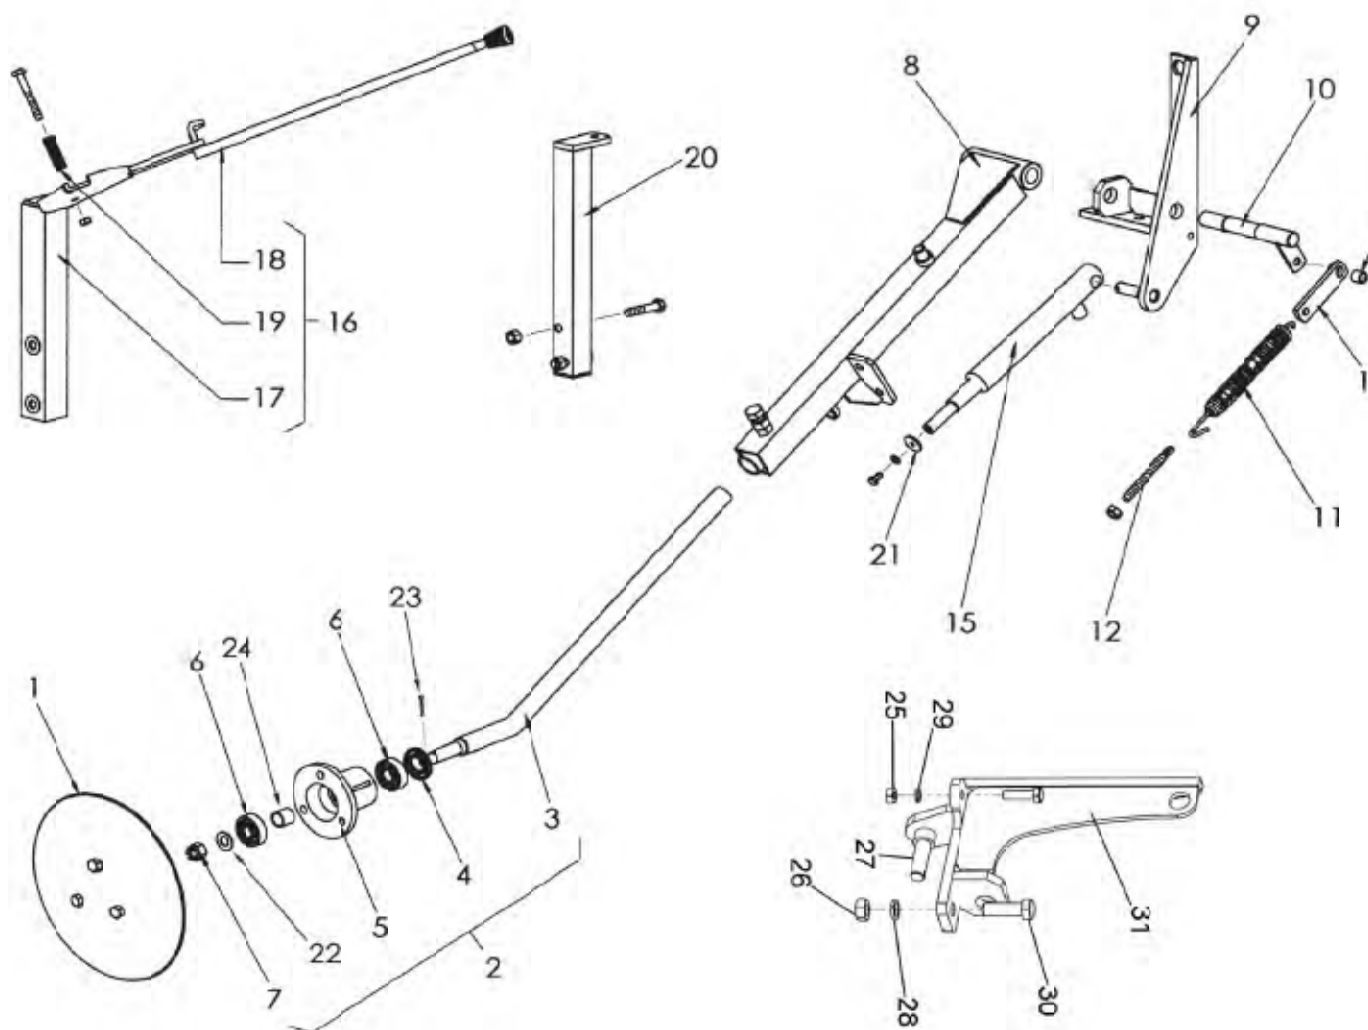


Figura	Código	Denominación
1	EE-100217	Disco brazo trazador, 3 agujeros
2	RE-100300	Buje completo, con eje y rodamientos
3	PR-100201	Eje disco trazadores
4	FE-601000	Retén doble labio Ø25xØ52x7
5	ME-100214	Buje disco
6	FE-600005	Rodamiento 6304 2RS
7	935 16 BI	Tuerca almenada DIN 935 M-16 bicromatada
8	PS-1803/D	Brazo trazador 250/300/350 derecha
8	PS-1815/D	Brazo trazador 400 derecha
8	PS-1803/I	Brazo trazador 250/300/350 izquierda
8	PS-1815/I	Brazo trazador 400 izquierda
9	PS-101303/D	Soporte brazo trazador derecha
9	PS-101303/I	Soporte brazo trazador izquierda
10	PS-101304	Eje articulación brazo trazador
11	ML-050201	Muelle del brazo corto
12	EE-100219	Tensor muelle brazo trazador
13	PS-1805	Pletina amarre muelle
14	ME-100200	Anillo articulación tensor
15	CO-100200	Cilindro S.E. brazo trazador 888/TRI
16	MO-100305	Mando central mecánico completo TRI

Figura	Código	Denominación
1	EE-100217	Disco brazo trazador, 3 agujeros
2	RE-100300	Buje completo, con eje y rodamientos
3	PR-100201	Eje disco trazadores
4	FE-601000	Retén doble labio Ø25xØ52x7
5	ME-100214	Buje disco
6	FE-600005	Rodamiento 6304 2RS
7	935 16 BI	Tuerca almenada DIN 935 M-16 bicromatada
8	PS-1803/D	Brazo trazador 250/300/350 derecha
8	PS-1815/D	Brazo trazador 400 derecha
8	PS-1803/I	Brazo trazador 250/300/350 izquierda
8	PS-1815/I	Brazo trazador 400 izquierda
9	PS-101303/D	Soporte brazo trazador derecha
9	PS-101303/I	Soporte brazo trazador izquierda
10	PS-101304	Eje articulación brazo trazador
11	ML-050201	Muelle del brazo corto
12	EE-100219	Tensor muelle brazo trazador
13	PS-1805	Pletina amarre muelle
14	ME-100200	Anillo articulación tensor
15	CO-100200	Cilindro S.E. brazo trazador 888/TRI
16	MO-100305	Mando central mecánico completo TRI

7.13- GEARBOX



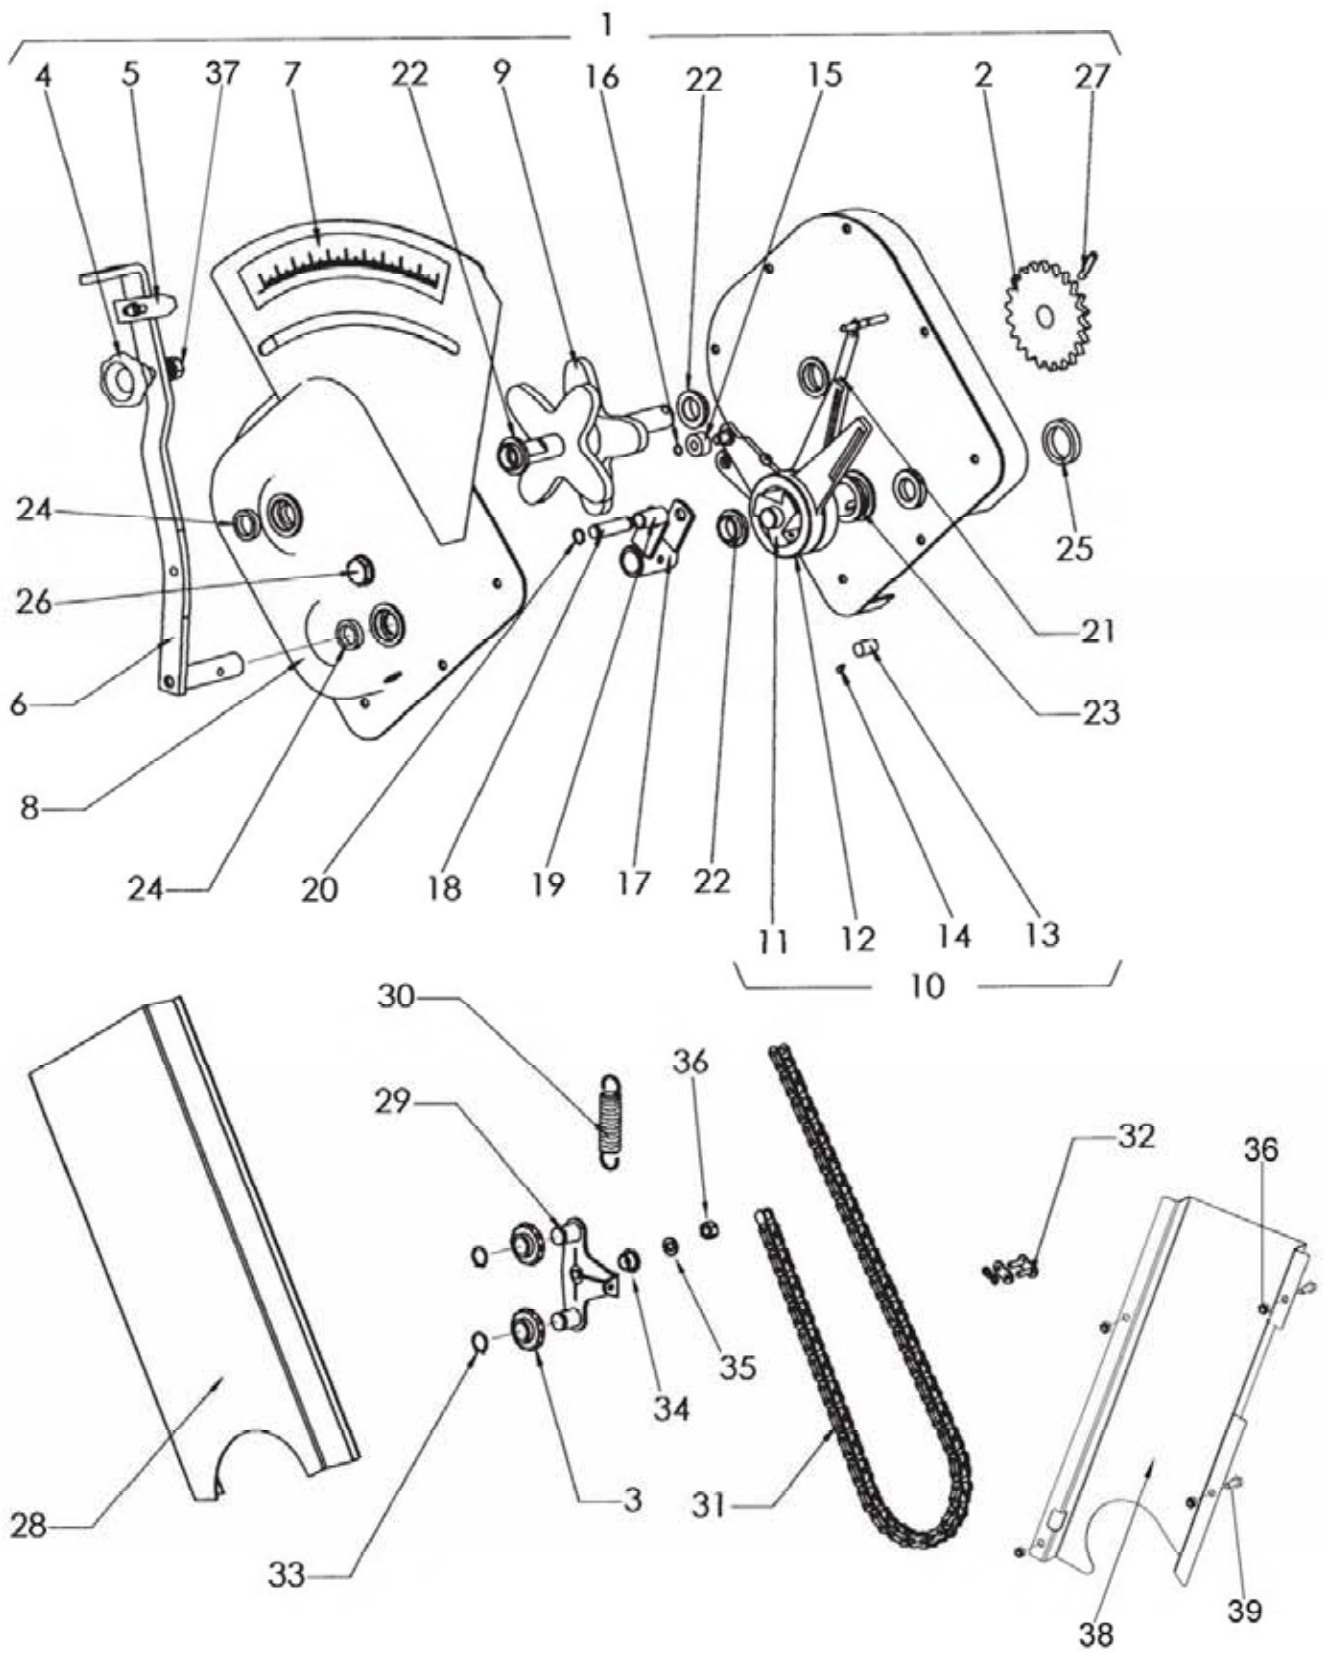


Figura	Código	Denominación
1	MO-0601	Variador semilla SV-04
2	ME-040100	Piñón 22Z para cadena de 1/2"
3	PL-040100	Piñón tensor cadena 1/2"
4	MV-09	Volante con tornillo M-10 rosca izquierda
5	PX-040204	Índice palanca variador
6	PS-0610	Palanca regulación variador semilla
7	AD-040200	Adhesivo graduación variador semilla
8	PS-0618	Tapa caja variador semilla con graduador
9	TA-0618	Excéntrica estrella variador semilla
10	MO-0605	Conjunto eje giro libre semilla
11	RE-040201	Eje transmisión variador semilla, suelto
12	ME-040226/D	Leva de arrastre larga derecha
12	ME-040226/I	Leva de arrastre larga izquierda
13	RODILLO 12X18	Rodillo Ø12x18
14	RE-040202	Tetón posicionador rodillo con muelle
15	PL-040200	Anillo de la leva
16	471 8	Anillo saeger DIN 471 Ø8
17	PS-0611	Horquilla tope levas variador semilla
18	BU-040200	Bulón tope levas
19	PL-040206	Casquillo tope levas
20	471 12	Anillo saeger DIN 471 Ø12
21	ML-040101	Muelle retorno levas
22	PL-040207	Casquillo Ø20xØ25x10
23	PL-040208	Casquillo Ø30xØ35x10
24	FE-601004	Retén doble labio Ø20xØ28x6
25	FE-601005	Retén doble labio Ø30xØ40x7
26	HI-707005	Mirilla nivel aceite 1/2" GAS
27	1481 6X40 BI	Pasador elástico DIN 1481 Ø6x40 bicromatado
28	PS-2641	Tapadena semilla con espárragos TRI
29	CO-040300	Tensor cadena
30	ML-010101	Muelle gatillo enganche
31	FE-605008	Cadena 1/2" variador semilla, L=1625
32	FE-605025	Enganche para cadena de 1/2"
33	471 16	Anillo saeger DIN 471 Ø16
34	FE-600008	Casquillo de fricción Ø12xØ14x9
35	125 8 BI	Arandela plana DIN 125 Ø8 bicromatada
36	985 8	Tuerca DIN 985 M-8
37	985 10 I	Tuerca DIN 985 M10 inoxidable
38	PX-042116	Tapacadenas semilla TRI-2110
39	933 8x25 8.8 B	Tornillo DIN 933 8X25 8.8 BI

7.14- FINISHES

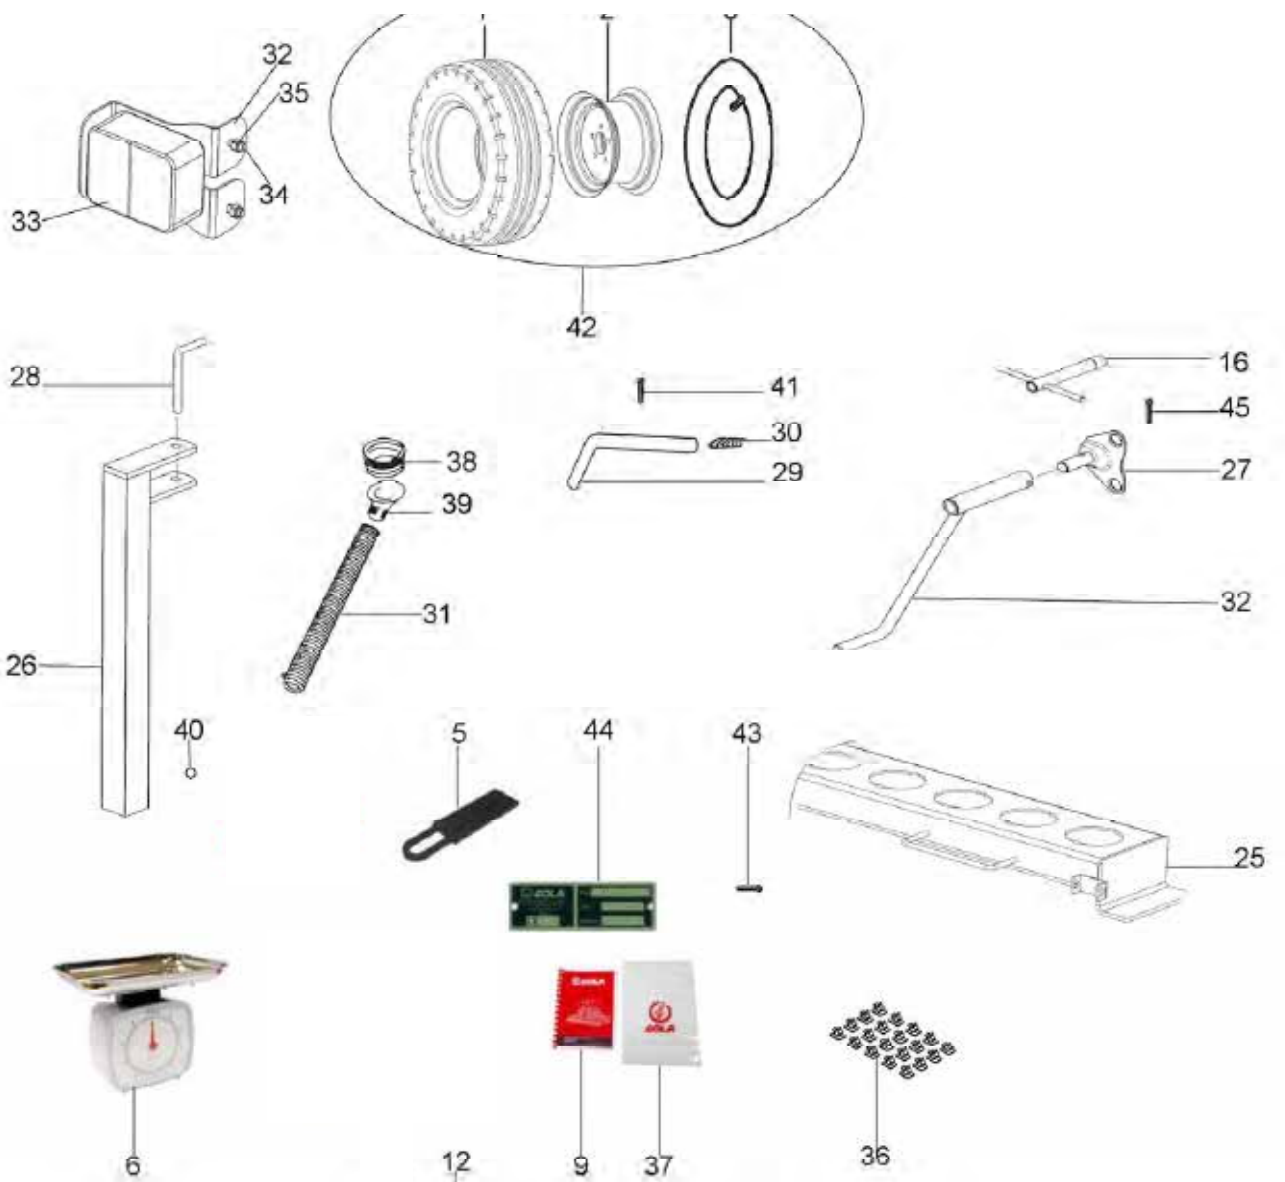

TRISEM-2110

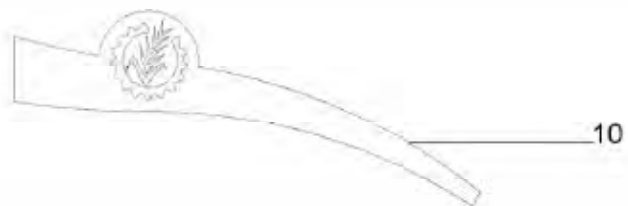

42

Nº	REF.	DENOMINACION
1	PL-042105	NEUMATICO 10.75-15,3 12PR S/CAMARA
2	CO-042105	LLANTA 9x15,3" DESPL.-50 mm
3	PL-042110	CAMARA PARA RUEDA 10.75-15,3
5	C11-41	CUENTA SEMILLAS
6	CN-808004	BALANZA MOD. 606 10KG./CAP.50GR./GRAD.
7	AD-040200	ADHESIVO GRADUACION VARIADOR SEMILLA
9	CN-811057	MANUAL INSTRUCCIONES SOLA TRISEM-2110
10	AD-072103	ADHESIVO LATERAL DERECHO TRI
11	AD-072102	ADHESIVO LATERAL IZQUIERDO TRI
12	AD-072100	ADHESIVO "TRISEM-2110"
13	AD-070228	ADHESIVO "SOLÀ" GRANDE
14	A10-24	ADHESIVO NIVEL BOYA
15	CN-815023	ADHESIVO ANAGRAMA ESPIGA BLANCA
16	ML-12	LI AVF ROCA HEXAGONAL
17	A10-32	ADHESIVO "PELIGRO ACERCAMIENTO"
18	A10-31	ADHESIVO "LIFER LIBRO INSTRUCCIONES"
19	A10-36	ADHESIVO "PESO MAXIMO 1260 Kg"
	A10-37	ADHESIVO "PESO MAXIMO 1390 Kg"
	A10-39	ADHESIVO "PESO MAXIMO 1570 Kg"
20	A10-42	ADHESIVO "PELIGRO AGITADOR"
21	A10-53	ADHESIVO "ATENCION TRAZADORES"
22	A10-82	ADHESIVO PELIGRO MANIOBRA ENGANCHE
23	A10-83	ADHESIVO "PELIGRO CAIDA"
24	AD-070211	ADHESIVO CONTROL DE CALIDAD
25	PS-052121	BARRA PORTABOQUILLAS 300 TRI-2110
	PS-052122	BARRA PORTABOQUILLAS 350 TRI-2110
	PS-052132	BARRA PORTABOQUILLAS 400 TRI-2110
26	PS-2631	PIE DESCANSO MAQUINA TRI
	PS-1601	PIE DESCANSO MAQUINA TRI (RUEDA 10.80-12)
27	MO-1637	ALOJAMIENTO MANIVELA RUEDA CON PASADOR
28	B03-41	BULON DEL PIE DESCANSO
29	B03-184	BULON GATILLO BARRA PORTABOQUILLAS
30	M01-63	MUELLE GATILLO BARRA PORTABOQUILLAS
31	ML-050302	TUBO PLASTIFICADO CONICO 1 OREJA 450
	ML-050306	TUBO PLASTIFICADO CONICO 1 OREJA 480
	ML-050303	TUBO PLASTIFICADO CONICO 1 OREJA 600
32	CO-070300	MANIVELA HUSILLOS
33	CN-818007	KIT LUCES 250/300 XS LAMU
34	933 6x16 BI	TORNILLO DIN 933 M6x16 8.8 BI
35	985 6	TUERCA DIN 985 M6
36	FE-606007	ABRAZADERA AUTOADHESIVA Ø7.9-10.3
37	CN-813002	BOLSA "MINIGRIP" 180x250 CON ANAGR. "SOLÀ"
38	PL-050300	FUELLE BOQUILLA
39	PL-050301	BOQUILLA ROSCADA
40	ML-050103	LLAVERO ABIERTO
41	94 3,5X28 BI	PASADOR ALETAS DIN 94 BICROMATADO
42	CO-042104	RUEDA 10.75-15,3 12PR LLANTA CREMA COMPLETA
43	FE-002001	REMACHE ALUMINIO
44	AD-070217	PLACA PATENTE
45	1481 6X30 BI	PASADOR ELASTICO DIN 1481 CINCADO



MAQUINARIA AGRÍCOLA SOLÁ, S.L.
Ctra. de Igualada, s/n. Apdo. Correos, 11
08280 CALAF (Barcelona) ESPAÑA
Tel. 34 93 868 00 60*
Fax. 34 93 868 00 55
www.solagrupo.com
e-mail: sola@solagrupo.com

