



seed drills

NEUMASEM 699

NEUMASEM 799



**OPERATING MANUAL
MAINTENANCE
ADJUSTMENTS
SPARE PARTS**

please read carefully prior to operation

Ref.: CN-811002

5ª Edition - June 2005

It is forbidden the total and partial reproduction

We can modify the specifications without prior notice

Seed Drills and Fertilizer Spreaders SOLA are produced in a factory particularly specialized in this kind of machines and they are guaranteed for the experience of the users.

They are machines based on state-of-the-art technology and are manufactured with recognized safety requirements for doing an excellent work with a minimal maintenance.

The purpose of this operating manual is to enable you to familiarise yourself with the working of your seed drill and to achieve your purposes.



Quality Certificate

TABLE OF CONTENTS

1. INTRODUCTION	4
2. TECHNICAL SPECIFICATIONS	5
2.1 Technical data	5
2.2 Standard equipment	6
2.3 Optional equipment	6
3. SAFETY INSTRUCTIONS.....	7
3.1 Safety symbols.....	7
3.2 Proper use.....	9
3.3 General arrangements	9
3.4 Loading and unloading.....	10
4. ESSENTIAL CONCEPTS FOR SOWING.....	12
5. PRIOR TO SOWING	14
5.1 Coupling the seed drill with cultivator	14
5.2 Coupling the seed drill without cultivator.....	15
5.3 Hydraulic system	16
5.4 Dosage	18
5.5 Microdosage	22
5.6 Setting the sowing depth, 799	22
5.7 Setting the sowing depth, 699	23
5.8 Distribution with mechanical fan	24
5.9 Distribution with hydraulic fan	25
5.10 Cultivator	26
5.11 Leveler.....	26
5.12 Harrow.....	27
5.13 Track markers.....	28
6. CONTROL MONITORS	29
6.1 Control monitor MCR	29
6.2 Control monitor MCC	31
7. MAINTENANCE	33
8. DOSAGE TABLE	34
9. SPARE PARTS.....	37
9.1 Chassis	38
9.2 Arms bar	40
9.3 Arms 699.....	43
9.4 Arms 799.....	44
9.5 Hopper.....	46
9.6 Transmission.....	48
9.7 Distribution	50
9.8 Hydraulic fan	52
9.9 Mechanical fan	54
9.10 Cultivator	56
9.11 Leveler.....	58
9.12 Track erasers (front and back)	60
9.13 Harrow.....	63
9.14 Track markers.....	64
9.15 Finish	66
9.16 Platform	68
9.17 Shut-off valves	70
9.18 Control monitors	72
9.19 Lateral wheel	74

1. INTRODUCTION

Before you proceed to operate the seed drill, please read and observe these instructions. In this way, you will avoid accidents, reduce repair costs and downtimes and increase the reliability and service life of your seed drill.

This operating manual must be read and used by all persons who are required to work with the seed drill (including preparatory work, troubleshooting during operation, care), maintenance (inspection and technical servicing) and transporting.

Pay particular attention to the safety instructions. SOLÀ cannot assume any liability for damage or malfunctions caused by a failure to observe the instructions contained in this operating manual.

First of all, the manual will explain the Technical Specifications, the Safety Instructions, and some Essential Concepts for sowing. In the chapters PRIOR TO SOWING and MAINTENANCE, the manual will explain the basic instructions for working with the machine. This manual is finished with a Dosage Table with different types of seeds.




SOLÀ reserves the right to make changes to the illustrations, technical specifications and weights contained in this operating manual if SOLA makes any improvements to the seed drills.

2. TECHNICAL SPECIFICATIONS NEUMASEM 699/799

2.1 TECHNICAL SPECIFICATIONS

TIPO Y ARMESOS	SEPARACIÓN ENTRE BRAZOS	ANCHO DE LABOR	CAPACIDAD DE LA TOLVA	PESO	NEUMÁTICOS	ANCHO DE TRANSPORTE
400/32	12,5 cm	4 m	1200 l	1450 kg	350/50-16	3 m
450/36	12,5 cm	4,5 m	1200 l	1570 kg	350/50-16	3 m
500/40	12,5 cm	5 m	1200 l	1680 kg	350/50-16	3 m
400/32	12,5 cm	4 m	1575 l	1500 kg	350/50-16	3 m
450/36	12,5 cm	4,5 m	1575 l	1620 kg	350/50-16	3 m
500/40	12,5 cm	5 m	1575 l	1730 kg	350/50-16	3 m
600/40	15 cm	6 m	1575 l	1850 kg	350/50-16	3 m

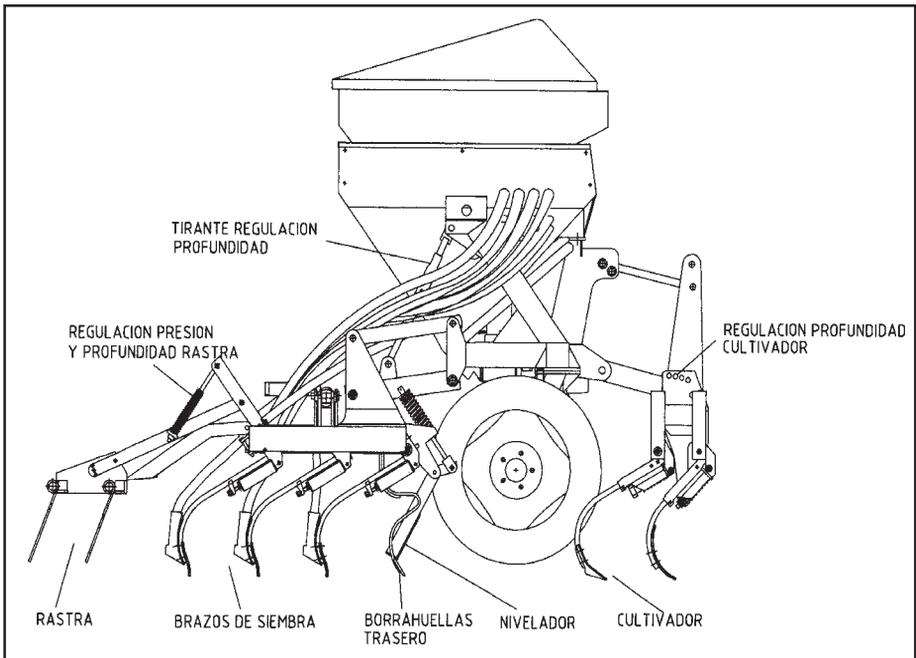

2.2 STANDARD EQUIPMENT

- Capacity hopper: 1200 l
- Sight of 825 l in the machines with big capacity hopper
- Selector sieve
- Hectare counter
- Electronic speed counter
- Seed level and distributor problems alarm
- Leveler
- Track erasers
- Hydraulic track markers
- Set of lights and working lamp
- Harrow
- Loading platform with access stairs
- Mechanical fan
- Hydraulic fan (type with cultivator).
- Arms with tooth furrow (699)
- Arms with coulter (799)
- Weighing machine, cranck and grains counter

2.3 OPTIONAL EQUIPMENT

- Tramlining system
- Manuel shut-off valve
- Shut-off folding parts
- Total sowing shut-off
- Leveler
- Lateral wheels

3. SAFETY INSTRUCTIONS

3.1 SAFETY SYMBOLS

You will find, in this operating manual, three types of safety and danger symbols:



To facilitate operation with the seed drill




To avoid damages on the seed drill or in the optional equipments



This symbol warns of the risk of injury

On the machine, you will find the following symbols:

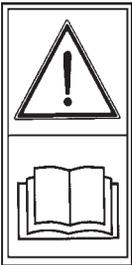

Please, read all safety instructions contained in this operation manual with care and also observe all warning signs attached to the seed drill.



If you are working under the machine, it is very important to assure it, to avoid its collapse. **Danger of serious lesions.**



Stay away of the tractor back part during the coupling operation, during the coupling manoeuvre. **Danger of serious lesions.**



Do not ride on the seed drill stairs when the machine is working. **Danger of serious lesions.**

SAFETY INSTRUCTIONS



Do not place under the sowing equipment or under swinging areas.
Danger of serious lesions.



Avoid fluid escaping under pressure.
Consult operating manual for service procedures.
Danger of serious lesions.



Stop the tractor engine and avoid its start during the maintenance or repairing works in the seed drill.
Consult operating manual.



Direction and speed of the power point.
(only in the machines with mechanical fan)



Do not place under track markers.

Danger of serious lesions.



Couplint point to raise the machine.

3.2 PROPER USE

- Seed drill **NEUMASEM 699/799** has been produced for the agricultural works, specially for cereals sowing and the other grain seeds.
- SOLA cannot be held liable for any consequential damage resulting from incorrect use, metering or distribution.
- All relevant accident prevention regulations, as well as other generally acknowledged safety and road traffic regulations, must be observed.
- SOLA seed drills are intended for sowing. Any uses other than those will automatically exempt SOLA from its/his liability in respect on ensuing damages.



3.3 GENERAL SAFETY ARRANGEMENTS

- Before to start the machine, it is very important to read the operation safety and road safety.
- Road traffic regulations must be observed when towing the seed drill on roads.
- No persons may be allowed to ride on the seed drill during the work and during the transport.
- Before to bring into operation the machine, it is very important to know the parts and the elements.
- Be extremely careful when coupling and uncoupling the seed drill to tractor. This operation involves a high risk of injury.
- The transmission of the power point must be fitted with a protective equipment and in good conditions. Avoid the turns of the protector tube with the chaine. The side of the clutch will be fit in the seed drill.
- The transmission of the power point must be fitted when engine is stopped.
- Before to connect the power point, make sure that nobody is standing in dangerous proximity to the seed drill.

- Do not never abandon the seat drive during the work
- Do not place strange elements inside the hopper
- Before carrying out care or maintenance work, always de-pressurize the hydraulic system and switch off the p.t.o. shaft and the tractor engine.
- The hydraulic system generates extremely high pressures. All piping, hoses and connections must therefore be checked regularly for leakage and visible external damage. Useful life for these elements is not more than six years. You must change them after this time.
- When the seed drill is raised, the tractor front axle discharges. Verify that the charge is enough to avoid lodging danger. In this situation, verify direction and braking capacity.
- During the transport with the seed drill raised, block the descent control. Before descending of the tractor, place the machine on the ground and remove starting keys.
- Be extremely careful when working with the machine in raised position. Use support elements to avoid a possible descent of the machine.

3.4 LOADING AND UNLOADING INSTRUCTIONS

The trucks loading and unloading must be made with the help of a crane-bridge. To avoid the damages in the seed drill, we have to use a special hook, as you can observe in drawings 1 and 2. Haul down cables must fasten to the three-point linkage and to the fastening points prepared in the back arms bar.

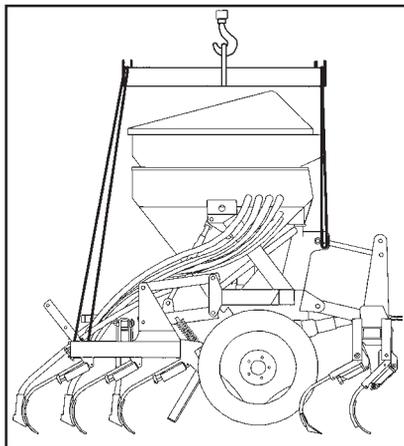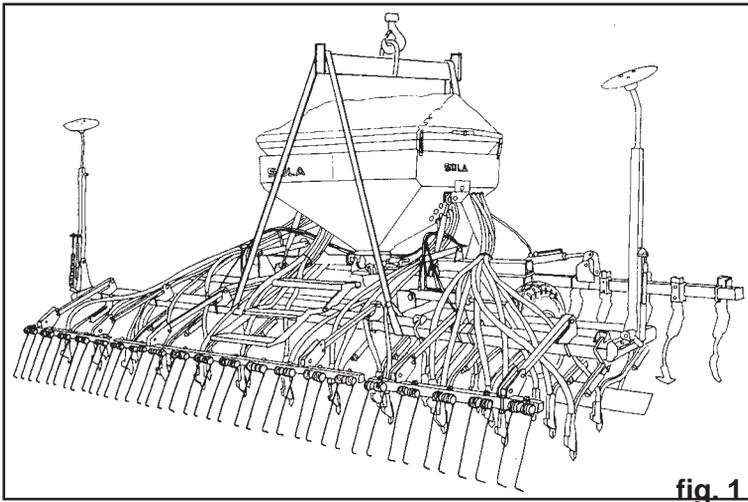

4. ESSENTIAL CONCEPTS FOR SOWING

4.1 GROUND

Better soil condition is, best quality of sowing. Over big clods or variable furrows it is not possible to do a good work.

Although SOLA machines are able to take hard efforts in extreme conditions, sowing will not be of good quality if the sowing land has not adequate conditions.

4.2 SEED

It is very important to use quality and clean seed, and, in the barley case, very well trimmed.

4.3 DEPTH

The suggested sowing depth is from 3 to 5 cm. To deeply too much is an error as the seed can not get the surface and death. It does not matter if some grains are visible as the harrow tines will cover them.

Sowing depth has influence in the birth, vigour of the plant and consequently in its resistance to both frost and drought. The sprouting node will be always between 1 or 2 cm. under the surface, independently of the sowing depth.

Deep sowing does not mean to have deep roots. Only a few roots arise from the bottom of the seed. The main root mass is born from the sprouting node, just under the ground level.

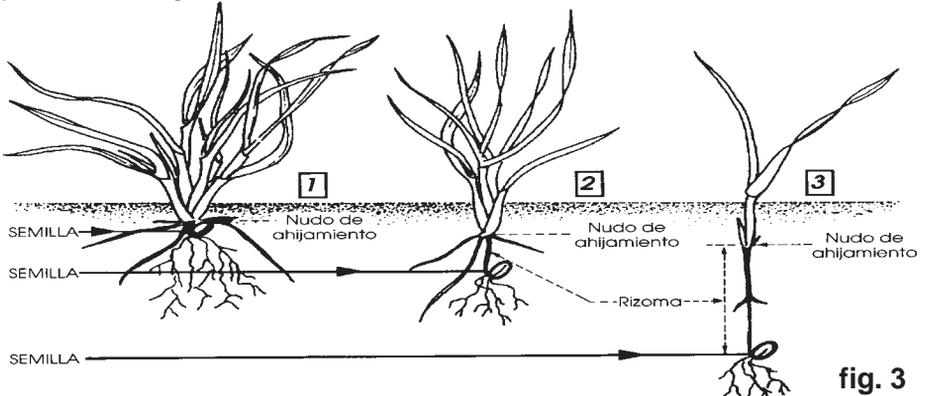


fig. 3

1

Sowing. Normal depth: from 2 to 4 cm

Thick stem, short rizhome, good freezing endurance.

Multiple sprouting, from 3 to 6 shoots and a lot of blades (from 6 to 10).

Big tuft of roots, 5 cms wide and 10-12 cms depth.

With less grains per square meters, we will obtain more ears.

2

Sowing. Between 5 and 6 cm

Thin stem, rizhome exposed to freezing.

Delayed and poor sprouting, one shoot (sometimes none), not many blades.

Medium tuft of roots, from 3 cm wide and 5 cms. depth.

We need more grains per square meter to obtain the same quantity of ears as in the first case.

3

Sowing. Very deep: from 8 to 10 cm

Very thin stem. No sprouting and a single blade.

The grain reserves become depleted by forming a large rizhome,

Poor tuft of roots, just 1 cm wide and 3 depth.

We need twice the grains per square meter to obtain the same quantity of ears as in the first case.



In very cold areas, successive frosts may cause soil surface fluffing up, involving the risk of releasing the incipient plant roots and causing its death.

In these cases and to avoid this danger, it is recommendable to deeply more the seed or, if it is possible, to pass a roller in order to compact the land and to protect the seed.

5. STARTING

5.1 COUPLING THE SEED DRILL WITH CULTIVATOR

To reduce the seed drill width in order to transport the machine by truck, the cultivator is connected to the machine chassis with a links fitted in a special position. Also, the arms placed in the cultivator are wrongly placed of the working position de su posición de trabajo. When the machine is unloaded and BEFORE doing the folding essay, connecting rods and wrongly placed arms, will be placed in the correct position, as we can see in drawing 4. In a different way, the hopper could suffer damages during the folding operation.

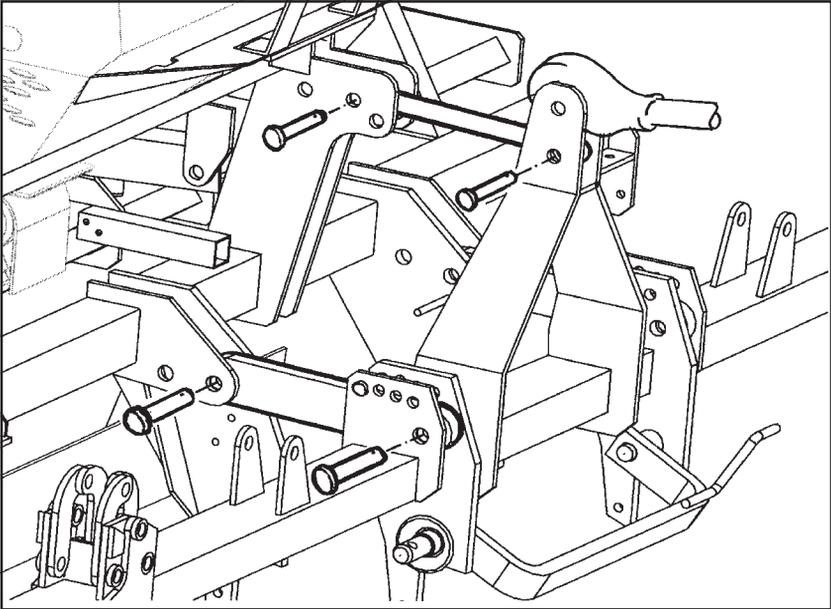


fig. 4

5.2 COUPLING SEED DRILL WITHOUT CULTIVATOR

Seed drills NEUMASEM are fitted for a fast coupling to the hydraulic and to the coupling bar.

Once the seed drill is coupled to the tractor, we have to adapt the joint shaft. Take to pieces and insert the end in the tractor power take-off and the other end in the seed drill. To calculate the lowest length of displacement "L" (drawing 5), lifting and descending the hydraulic lift. Cut to the correct length the metal and plastic parts, in the same size both pieces and place the transmission.

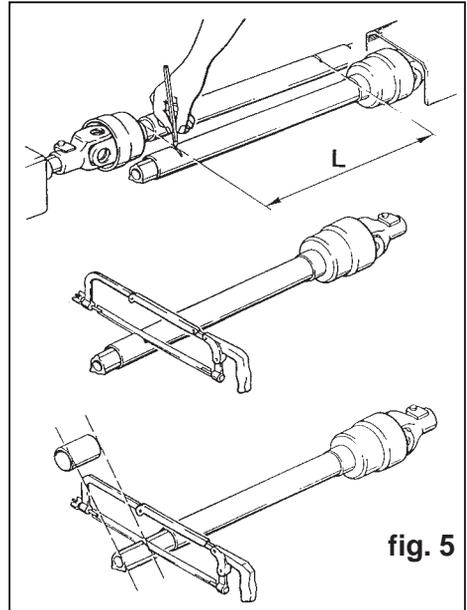


fig. 5

Verify that the transmission displacement was correct.

Make sure that the tractor engine and the p.t.o. shaft are switched off before proceeding to fit the universal joint shaft. Make sure that the protective tube can not rotate. Fix it with the chaine.



Disconnect the p.t.o. shaft to place the seed drill on the ground. In this way, you will avoid the transmission work with an excessive angle of divergence.. (maximum 35°).



Be extremely carefully actuate the tractor power take-off. ABRUPT STARTS COULD CAUSE IMPORTANT DAMAGES IN THE SEED DRILL.

5.3 HYDRAULIC SYSTEM

Flow regulator

It so the seed drill folding and unfolding realise carefully, we have two flow regulators. (drawing 6), one for each operation. They must be calibrated depending of the hydraulic flow given by the tractor. It is important and advisable to start with the regulator almost closed to avoid a too fast folding that could cause damages in the seed drill.



fig. 6



Make sure that nobody is standing in dangerous proximity to the seed drill.


Safety valve

Hydraulic system is fitted with a safety valve (drawing 7) to avoid the opening and closing of the cylinders while circulate by roads and ways. **Before desconecting the tractor hydraulic tubes, it is necessaty to depressurize the. In this way, we will avoid the descending of the folding laterals during the time.** Before doing this operation, we have to switch-off the tractor.



fig. 7

The machine is fitted with a mechanical safety pawl to secure the equipment during the transport of the machine. In drawing number 8 we can see the pawl in the safety position.

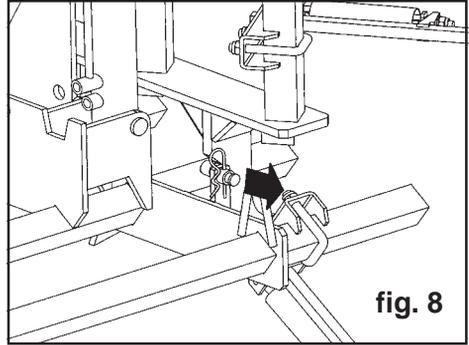

Before descending the equipment for working and after pressing to the system, be sure to take away mechanical pawls.

Parachute valves

Parachute valves are fitted on the connections of the sowing equipment cylinders. The valves mission es to avoid, in the case of breaking tubes, the equipment free fall.

These valves are regulated by the factory. Please, avoid their manipulation durant the maintenance and repairing works.

For your security, be sure that the valves are in the correct place before connecting the machine to the tractor and starting to work.



All piping, hoses and connections must be checked regularly. Spurting hydraulic oil can cause injuries and fires.

5.4 DOSAGE


We have two ways for doing dosage: for normal seed and for fine and small seed when sowing small quantities of seed.

For **normal seed** set the red change-over switch (n° 3, drawing 9) and the spring clip-butterfly valve (n° 8, drawing 9) to position N.



There is a risk of damaging the metering device when adjusting the seed rate to a lower setting. Do this only when the metering device is rotating or the seed hopper is empty.

fig. 9

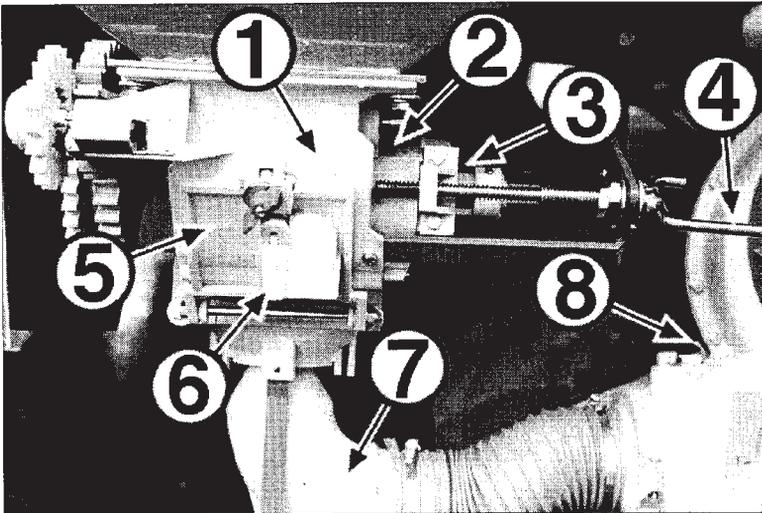

- | | |
|---|--|
| 1 Housing | 6 Rotary slide valve (not fitted on all machines) |
| 2 Metering scale | 7 Manifold |
| 3 Red change-over switch
N = normal seed
F = fine or small seed | 8 Spring clip-butterfly valve
N = normal seed
F = fine or small seed |
| 4 Spindle | |
| 5 Hopper trap-door | |

For **fine seeds**, turn the spindle until the metering scale is in position 0. Turn the red change-over switch clockwise (nº 3, fig. 9) until it engages in the groove in the hexagonal shaft.

The letter F on the red change-over switch will now be visible. Now we can regulate from 0 to the metering scale. The spring clip on the butterfly valve of the fan (nº 8, fig. 9) to position F.

Flow test

For doing the **flow test**, close the hopper trap-door and fill the hopper with seed. Open the venturi cones. Remove the manifold by unscrewing the wing nut (nº 7, figura 9). Place a bucket under the venturi cone outlet in order to collect the seed. Coloque Attach the crank in the left wheel of the seed drill and turn, giving the turns number as follows:

TIPO MÁQUINA	RUEDA 350/50-16
NEUMASEM 400/32	26,5 vueltas
NEUMASEM 450/36	23,5 vueltas
NEUMASEM 500/40	21 vueltas
NEUMASEM 600/40	17,6 vueltas

The hectare counter will now indicate 250 m².

Weight the seed collected. The seed drill flow in kg/ha will be the weight collected multiplied by 40.

If necessary repeat the operation until you consider the seed has been calibrated.

Replace the cone venturi and the fan and secure by the wing nut.



To do the flow test make sure the seed drill is standing on firm, level ground. The tractor and the PTO shaft must be connected.

Dosage test

Between the test done and the flow spreaded by the machine, can exist some differences, owing to the few pressure in the wheels, irregularities on the ground, etc., we can do an experimental test.

With a tape measure, we can mark on the ground, the distance in meters indicated as the follows:

Ancho de trabajo	PRUEBA EXPERIMENTAL metros a recorrer
400	62,5
450	55,6
500	50,0
600	41,7

Then, we can cover the market distanc with the seed drill in working position. By means of a signal done in the wheel, we can count the wheel turns during the round.

In this way, we obtain the turns number to do the seed dosage test.

Doing the test with this number ot turns, we will obtain the kgs per hectare that the machine will spread.

Adjustment of the seed dose

With current use of high quality seed, it is not enough to set the weight that has to be distributed by the seed drill, since the final results of the harvest will depends on the number of plants that reach complete lripeness.

Each plant needs or requires its living space from which feeds on.

In this way, as poor could be a high plant density as a low.

To know or to decide the kgs per hectare to sowing, and to know the adequate dose, we must know the number of plants par square meter we are going to sow. Orientatively, the plants number recommended for wheat and barley in dry land is as follows:

AUTUMN:	early sowing,	200 plants per m ²
	late sowing,	265 plants per m ²
SPRING:	early sowing,	310 plants per m ²
	late sowing,	445 plants per m ²

Notice that, in spring, sprouting is always lower and, consequently, we need to increase the quantity to sow.



MAQUINARIA AGRÍCOLA SOLÀ, S.L., thinks that is very recommendable for the farmer, to seek advice about dosification in some technical sowing centers.



The seed dose, must be adjusted to each soil depending on its texture, fertilization level, dampness and sowing time, grain quality, germinative value...

Moreover, it must be took into account that the maximum germinative value is variable and depends on a lot of factors. Experimentally it can be established between 70% and 80%, that is equivalent to multiply the number of grains to sow by 1,43 or 1,25 respectively. Find as follows, a practical method to obtain the kgs per hectare we are going to sow starting from de plants per square meter we want to obtain.

- 1) To introduce the grains counter in the seed (drawing 10). Get out, pass the hand on in order to have only a grain for each hole (100 grains in total). Repeat the operation 10 times in order to have 1000 grains.

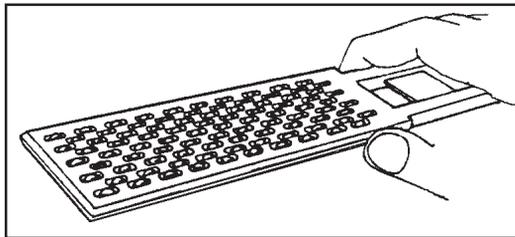


fig. 10

- 2) Weight the 1000 grains collected . Trought this operation, we will have the OPERATIF WEIGH.
- 3) Knowing the grains par square meter we are goint to sow, kgs per hectare we have to adjust in the dosage control are:

$$\text{kilos per hectare} = (\text{grains per m}^2 \times \text{OPERATIF WEIGHT}) / 100$$

5.5 MICRODOSAGE

The micrometering system serves as a means of metering fine seed and extremely small quantities of seed per hectare. The advantage of the micrometering system over the standard system when handling fine seed is that the cell is twice as wide for the same seed rate. This considerably enhances the self-cleaning properties of the cells.

Pull out the red gearwheel until it engages in position (n° 1, fig. 11). The micrometering system is now switched on. The settings are given in the calibration chart for fine seed (pages 33-36) with the micrometering system M.

- 1 Read gearwheel
- 2 Dispenser

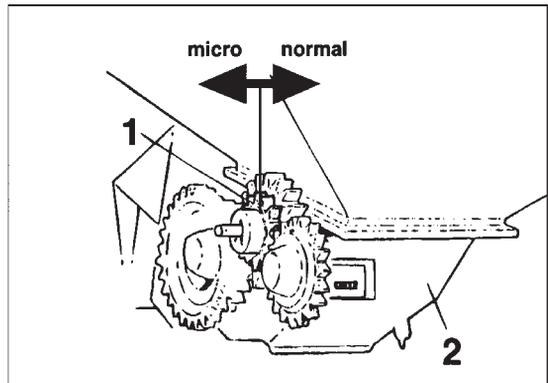


fig. 11



Check the cleaning brush before sowing with fine seed.

5.6 SETTING THE SOWING DEPTH NEUMASEM 799

The sowing depth can be adapted to the soil conditions by adjusting the coulter pressure.

Always, the seed drill will work in horizontal position.

Front and back coulters have to entered the ground in the same way.

Also, we can modify the sowing depth, adjusting the arms pressures individually by attaching to the coulter springs.

It exist, a spring kit for the smoothest grounds.


Another way to modify the sowing depth is attaching on the cultivator and the leveler: if the cultivator works deeper, the sowing arms works deeper, because they will found a free ground and the leveler will be able to drag more land.



In pneumatic machines, the air pressure, with the absense the record in the coulter, provoque that the seed depth in the rows was bigger than another conventional machine. After some working minutes, verify that the sowing depth is correct.

5.7 SETTING THE SOWING DEPTH NEUMASEM 699

For setting the sowing depth in type 699 we have to modify the pressure of the springs of the arms. For this, we have to operate on three cranks adjusting the three sections that divide the arms equipment. (drawing 12).

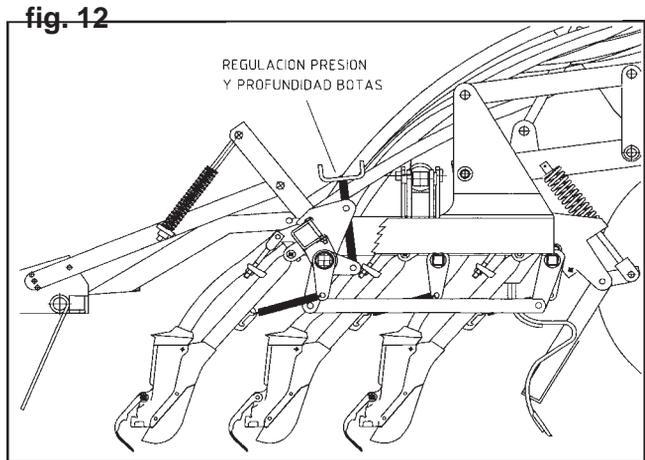

We have another possibility to adjust sowing depht. We can modify the sowing equipment hight throught the two tighteners that hold it to the chassis. With the sowing equipment hold on, sowing coulters have a penetration angle very big (nearly 90°) and they can bury the seed deeper. If we want to work in this position, the most advisable for the hard grounds, we will loosen the set nut of each arms in order to have that the sowing coulters descent for working better and for copying the unevenness of the terrain.

On the other hand, with the equipment in down position, coulters work with an angle of small penetration and the seed depth is smallest. In this case, we must tighten the adjustment nuts of each descended arm. To lift the seed drill, the arms do not descend too and the pressure springs will be able to go out of their grooves.

5.8 DISTRIBUTION WITH MECHANICAL FAN

To guarantee the seed supply to the sowing coulters it is necessary that the P.T.O. operates the fan turns at 540 rpm.

With less speed, some seeds could stay in the conductor pipes.

Also, we will take precaution to turn the fan to the operating speed before turning the transmission wheel.

To raise the machine, we will not reduce the operation speed until the wheel do not touch the ground.

If we trail the seed drill along the ground with air fan switched-off, the seed coming from distributor will block the manifold that feed the venturi cone. In the case it happens, replace the manifold and collect the seed before starting the normal operation with the seed drill.



The turn of the transmission wheel without fan to full operation can cause the blocked of the manifold tubes.

5.9 DISTRIBUTION WITH HYDRAULIC FAN

Type of machine	Hydraulic motor		Oil supply		
	absorption capacity (cm3)	speed (rpm)	minimum feed line pressure (bar)	maximum return line pressure (bar)	flow rate (l/min)
400	8	4200	130	10	40
450/500/600	8	4500	160	10	44

Connection

Connect the fast plug of the fan small pipe to a pressureless line of the tractor. Connect the pipe of 1/2" with the big fast plug, to a return line without pressure.



The maximum permissible return line pressure is 15 bar. Too high pressure will force the shaft seal out of its seating.

Settings

To adjust the fan speed, we have to use the three-way flow control valve located in the motor to control the oil flow spend by the motor. If the tractor has its own flow control valve, set the required flow rate at the tractor and fully open the three way flow control valve.

Adjust the fan speed to a 4200 r.p.m. or to 4500 r.p.m. as the upper table.



If you find that the oil becomes over heated, either because the delivery rate is excessively high or the oil reserve is too small, it could be necessary to fit an additional oil reservoir.



If it is not possible to obtain the required flow rate for normal operation, an additional hydraulic circuit must be installed. (hydraulic pump, pressure relief valve, directional valve, oil cooler, and possibly and additional reservoir). So as not to increase the pressure in the pressure line unnecessary verify hydraulic lines. Consult your manufacturer.

5.10 CULTIVATOR

The cultivator work has to be superficial but enough to erase the tractor marks. For achieving this result it is possible to adjust the arms located behind the wheels tractor with a different depth than the others.

The cultivator has 4 points to adjust in 4 different ways and it is afloat, that is, it has lateral movement and it is independent of the seed drill. It is possible to lift it with the tractor elevator while the seed drill remains on the ground.

5.11 LEVELER

The leveler work is essential to obtain a sowing of regular depth. We can adjust the leveler operating on four screws (drawing 13) to modify height and pressure of the leveler three sections.

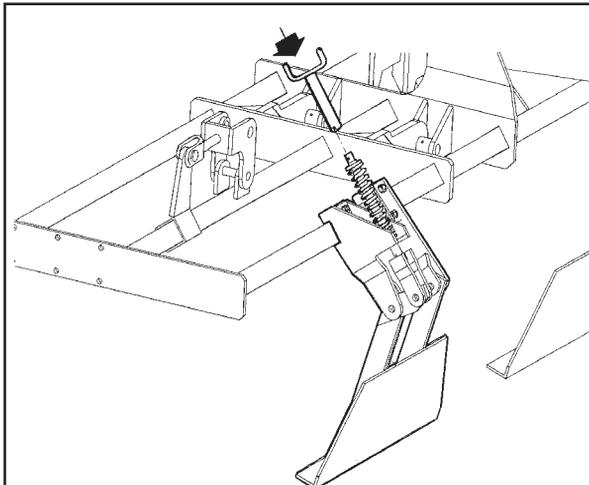


fig. 13

The leveler must trail the land but avoiding that the land running over the plate. To erase the seed drill marks, we can fit the track erasers. We have to adjust them.

5.12 HARROW

The harrow has different positions for working on different ground types. We can adjust:

- 1- Height: tighten the lower bolt (1, drawing 14).
- 2- Pressure: tighten the upper bolt of the brace rod (2, drawing 14).
- 3- Positions: modifying the screws position that hold the harrow to the arms (3, drawing 14).

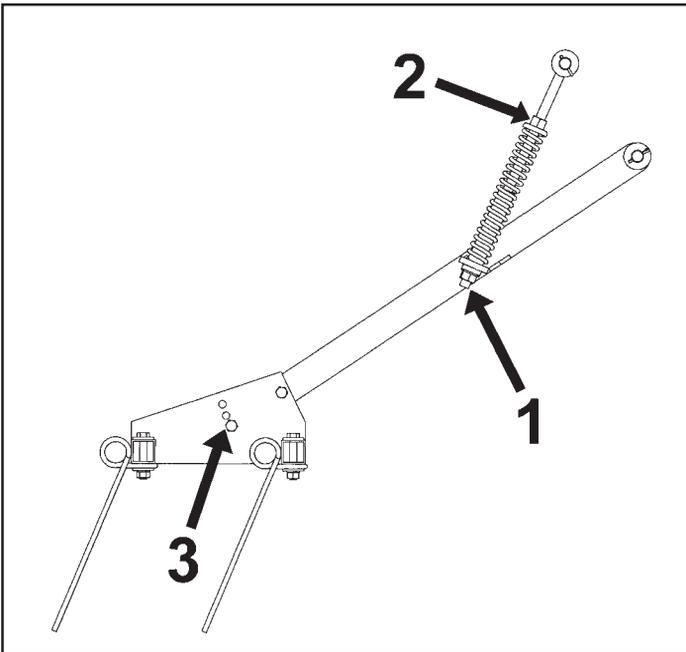


fig. 14

5.13 HYDRAULIC TRACK MARKERS

Track markers are fitted in the laterals of the folding equipment. The right marker is fitted on the short support and the left marker on the long support. Their operation is hydraulic and we have to connect them to two different connectors for working in an indistinctly way. It is very important to fold the track markers and fix them with the bow pin before folding the machine for transporting.

The track markers arms are extending. We can adjust them in length and we can position the discs on the correct penetration inclination. The spring allows to adjust the disc pressure on the ground. The length of the track markers is calculated as follows:

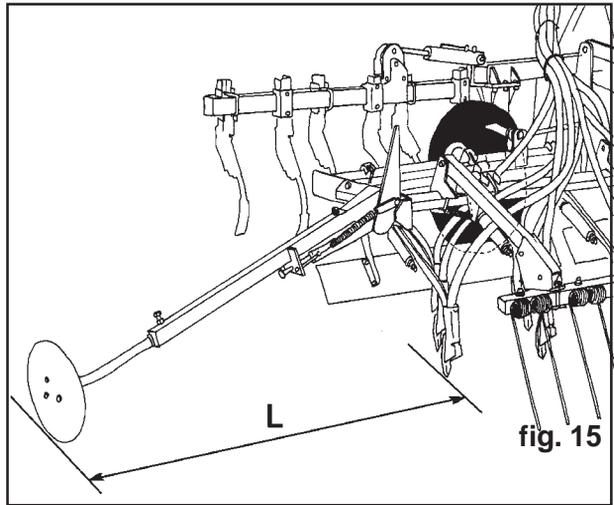


fig. 15

$$L = \text{working width seed drill - track gauge wheels tractor} + \text{width of the row}$$

NOTE: Sizes in cms



It is not advisable use to much the spring pressure, to avoid seriously damages.



The pressure oil can penetrate in the skin and can cause injuries and fires. Be extremely careful with the hydraulic connections and tubes.



No persons may be allowed to stand within the working area.

6. CONTROL MONITORS

6.1 CONTROL MONITOR MCR

Technical data

This monitor is fitted as a standard in the machine.

- Fan revolutions counter
- Visual and alarm signal indicating seed hopper reserve
- Alarm signal indicating malfunctions in distributors
- Operating hours

Installation and operating

Connect the leads of the different elements to the triple terminal and to the monitor as you can see in drawing 16.

Connect the monitor to the tractor battery respecting the correct polarity (red lead +12V) and fit on the cabin.

Connect and disconnect the triple terminal of the monitor twice that coupling and uncoupling the seed drill to the tractor.

In the monitor back part we find a starting monitor. Once connected, we can see, on the monitor display the fan revolutions number per minute

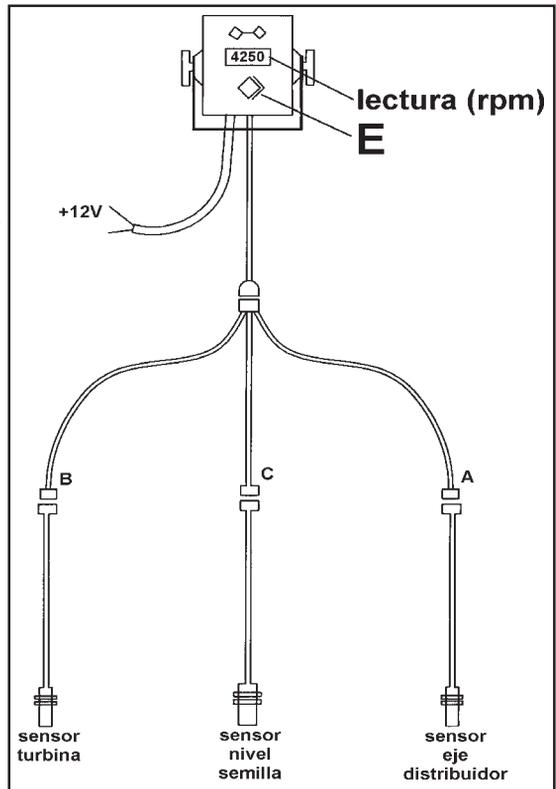


fig. 16

Fan revolutions must be of 4200 rpm in the 4 m. seed drill and 4500 the others. Maximum speed for the blower is 5000 rpm. It is very important to have the same revolutions to guarantee the correct seed rate in all devices.

To see the operating hours press «E» (drawing 16).

A short signal alarm of 4 beeps will warn us if the fan speed drops under 3500 rpm.

An optical and signal alarm (long and intermittent beep) will warn when the hopper reserve is low.

A signal alarm of a long and intermittent beep will warn if the metering device drive has been interrupted.

6.2 CONTROL MONITOR MCC

Technical data

It is an optional equipment. Find as follows the fonctions:


- Conecting and optical signal of folding parts shut off.
- Total sowing shut off

Installation and operating

Connect the leads MO y EV from double connector to the folding parts shut off and to the total sowing shut off. Both equipments are fitted on the machine if you have ordered them. Double connector must be connected to the monitor, and this to the tractor battery respecting the correct polarity (red lead +12V).

Upper switch engage the shut-off valves of the folding parts delivery tubes as we can see in drawing 17. Verify the correct operating: with the switch in «CER» and the red light switch on, valves must be shut-off. On the contrary, we have to change the connections of the monitor to the motor locate inside the hopper.

Down switch have to shut-off distributor turn, operating the electric shaft in position «CER» -red light switch on.

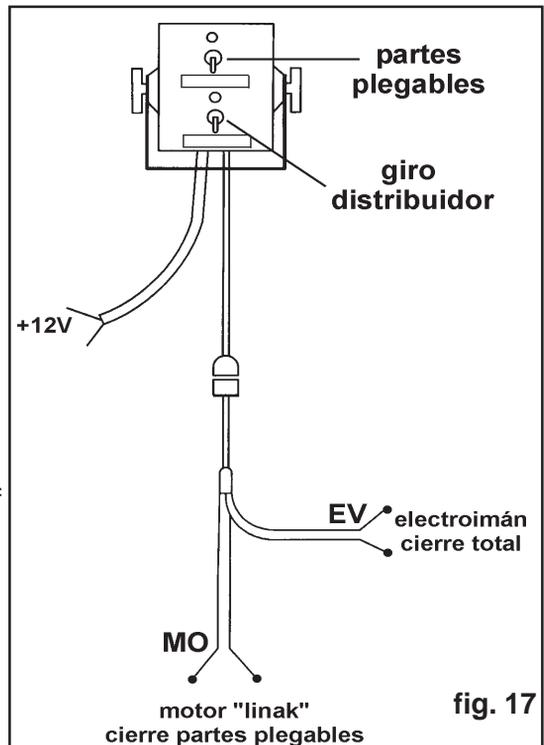



For operating shut-off valves devices of the folding parts, seed level have to be always below of the shut-off valves.



The operations must be done with the mettering device switch-off and the fan swich-on. We must secure that valves and tubes are empty. On the opposite, shut-off device valves can be injured.

7. MAINTENANCE

7.1 GREASING

Grease regularly the following points:

- Every day, transmissions articulations.
- Each 100 ha graise the folding parts articulations.
- Each 400 ha graise the wheel axles and the transmission bushing.

7.2 WHEELS PRESSURE

Tyre 350/50-16 --- 3,75 kg/cm²

The information is prescribed by the tyre manufacturer. Full-load pressure.

Generally, in poor prepared soils, it is advisable to reduce a bit the lpressure in order to overcome the land irregularities and achieve more sowing regularity.

7.3 SCREW WORKS

After some working hours, all bolts must be verified and tightened if necessaty. In model 799 we supply a special key, a tube key, located inside the hopper, for the hold-down screw.

7.4 DISTRIBUTOR HEAD AND TUBES

Before working it is very important to verify that the seed delivery tubes and the distributor head are not blocked. For this, with the operating fan and with the full hopper , we will give some turns to the wheel to verify that the seed falls through the arms. Switch-off the machine and disconnect the head cover to verify that anything is inside.

8. DOSAGE TABLES



The quantities shown at the tables are for guidance only. The flow can change due to preservation powders, seed sizes, density, humidity...



For a precision sowing, we advise you to follow the dosage process described in the chapter 5.4 of this booklet.

semilla	trigo	centeno	cebada	Avena	Alubias	Guisantes	Altramuz	Algarroba	Maiz	Hierba	Peso espec. (kg/l)	Colza	Trebol de prado	Hierba	Nabos
10	31	31	30	22	21	20	26	30	7.4	0.36	2.5	0.65	0.8	0.39	0.7
15	47	46	45	32	38	37	42	47	17		5	1.98	2.1	1.07	2.36
20	64	62	60	43	57	55	57	64	43	24	7.5	4.22	4.8	2.36	4.22
25	79	77	73	53	73	72	73	83	64	31	10	6.32	7.9	3.97	2.6
30	97	93	88	66	91	91	89	100	86	38	12.5	8.43	11	5.58	4.84
35	114	109	103	76	108	109	105	118	107	46	15	10.5	14	7.07	6.7
40	130	124	118	87	125	126	120	135	128		17.5	12.8	20	9.8	10.4
45	146	140	133	98	143	144	136	154	145		20	14.8	22	11.2	12.3
50	161	156	148	109	160	161	153	171	162		22.5	16.9	25	12.3	13.9
55	179	171	161	120	177	180	169	188	180		25	19.1	26	12.8	15.1
60	195	186	177	131	195	198	184	206	197			21.2	26	12.8	15.1
65	212	202	191	143	212	216	201	224	215			N	N	N	N
70	229	218	206	154	229	233	217	242	232		ENSAYO PREVIO DE CAUDAL				
75	246	234	221	165	247	250	233	259	248		sembradora vueltas				
80	262	250	234	176	263	268	249	277	265		400/32 26,5 vueltas				
85	277	267	249	186	280	288	265	294	283		450/36 23,5 vueltas				
90	294	280	264	197	298	305	280	312	300		500/40 21 vueltas				
95	311	296	279	208	314	322	298	330	317		Numero de vueltas de rueda para				
100	327	312	294	219	331	340	312	347	335		simular la siembra de 250 m2. El				
105	343	329	309	231	347	358	329	366	353		caudal en kg/ha se obtiene multiplicando				
110	360	345	324	242	366	376	345	383	370		la cantidad recogida por 40				

TABLA PARA NEUMASEM 400/450/500 CON RUEDAS FLOTATION 350/50-16

* Cuando las cantidades a dispersar son muy pequeñas (ancho de alveolo <= 25 mm) se puede llegar a obtener una siembra más uniforme por medio de la microdosificación, incluso en el margen de siembra normal (cereal y semillas gruesas).

semilla	trigo	centeno	cebada	Avena	Alubias	Guisantes	Altramuz	Algarroba	Maiz	Hierba	Peso espec. (kg/l)	Hierba	Nabos	Colza	Trebol de prado	Hierba	Nabos		
																		semilla normal kg/ha (aleta de regulación N)	semilla normal kg/ha (aleta de regulación F)
10	25	24	18	17	16	21	24	6	0.36	0.65	0.8	0.39	0.7	1.6	0.8	1.7	0.86	1.9	0.9
15	38	37	36	26	31	30	34	18	14	5	3.4	1.7	3.9	1.9				3.4	1.8
20	52	50	48	35	46	44	46	35	19	7.5	5.1	2.5	6.4	3.2	2.1	1.05	5.6	5.6	2.8
25	64	62	59	43	59	58	59	67	25	10	6.8	3.4	9	4.5	3.9	1.9	7.5	3.75	
30	78	75	71	53	73	73	72	81	31	12.5	8.5	4.3	12	5.7	5.4	2.7	9.4	4.7	
35	92	88	83	61	87	88	85	95	37	15	10.3	5.1	14	6.8	6.9	3.45	11.2	5.6	
40	105	100	95	70	101	102	97	109	103	17.5	11.9	5.9	16	7.9	8.4	4.2	13.1	6.56	
45	118	113	107	79	115	116	110	124	117	20	13.6	6.8	18	9	9.9	4.9	15	7.5	
50	130	126	119	88	129	130	123	138	131	22.5	15.4	7.7	20	9.9	11.2	5.6	16.1	8.06	
55	144	138	130	97	143	145	136	152	145	25	17.1	8.5	21	10.3	12.2	6.1	17.3	8.6	
60	157	150	143	106	157	160	148	166	159										
65	171	163	154	115	171	174	162	181	173										
70	185	176	166	124	185	188	175	195	187										
75	198	189	178	133	199	202	188	209	200										
80	211	202	189	142	212	216	201	223	214										
85	223	215	201	150	226	232	214	237	228										
90	237	226	213	159	240	246	226	252	242										
95	251	239	225	168	253	260	240	266	256										
100	264	252	237	177	267	274	252	280	270										
105	277	265	249	186	280	289	265	295	285										
110	290	278	261	195	295	303	278	309	298										

ENSAYO PREVIO DE CAUDAL
 NEUMASEM 600/40 (RUEDAS 360/60-16)
 Dar 17,6 vueltas a la rueda para simular la siembra de 250 m2. Recoger la semilla y pesarla. El caudal en kg/ha se obtiene multiplicando el peso recogido por 40

TABLA PARA NEUMASEM 600/40 CON RUEDAS FLOTACION 350/50-16


* Cuando las cantidades a dispersar son muy pequeñas (ancho de alveolo <= 25 mm) se puede llegar a obtener una siembra más uniforme por medio de la microdosificación, incluso en el margen de siembra normal (cereal y semillas gruesas).

9. SPARE PARTS

The terms RIGHT (derecha), LEFT (izquierda), FRONT (delante) and iBACK (detrás) refers to the machine in starting direction.

In drawings we do not repeat the same spare parts, but with different hand. Codes are in spare parts chapters.

Please, when you order the spare parts, inform about the code and machine type. You will find it on the hopper identification nameplate.

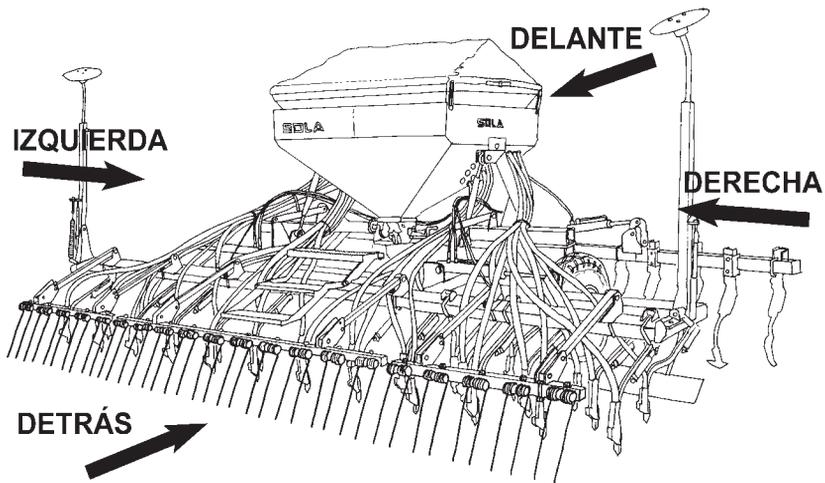


Be careful to change the elements of the sowing equipment, because the sharp elements can cause injuries.



As a general instruction, you must avoid working under the machine hanged up from the tractor. If you must do it, be extremely careful and secure it.


9.1 CHASSIS

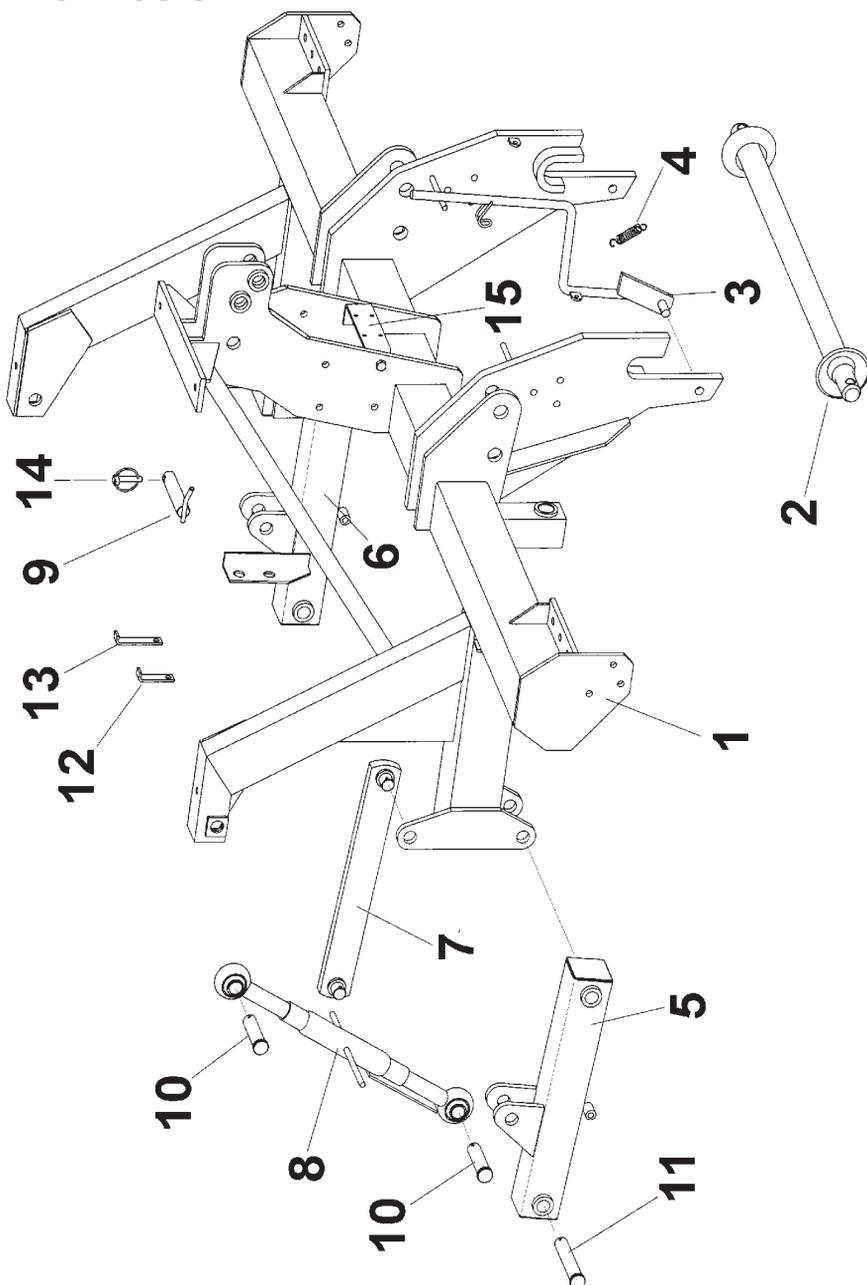

Drawing Code

1	PS-011302
2	PS-061306
2	PS-010102
3	TA-060201/D
3	TA-060201/I
4	ML-010101
5	PS-051301/D
6	PS-051301/I
7	PS-051302
8	PS-051318
9	PS-010101
10	BU-051302
11	BU-051301
12	EE-071314
13	EE-071315
14	FE-610008
15	TA-071306


9.2 ARMS BAR

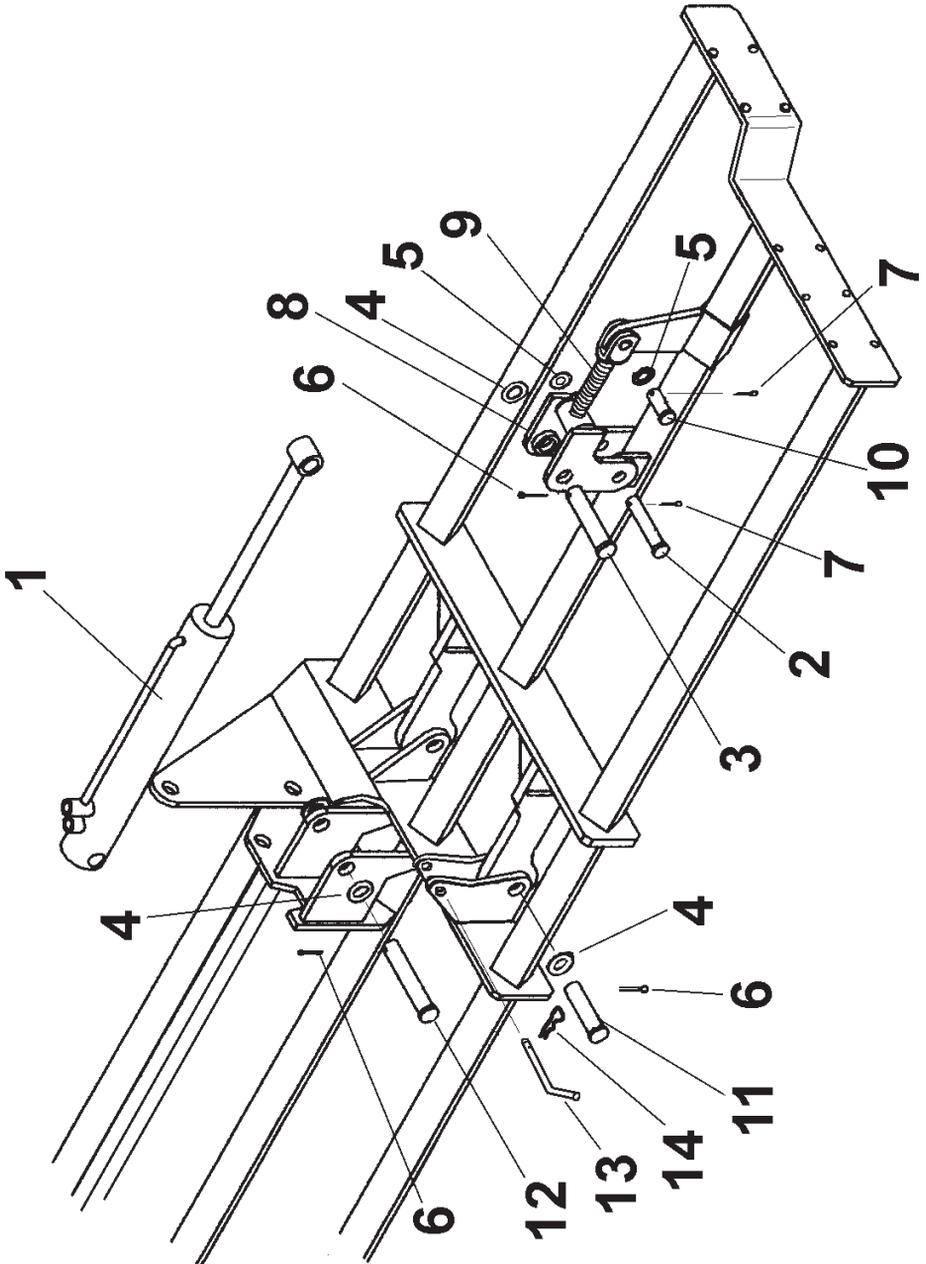

Drawing Code


1	CO-051300
2	BU-051303
3	BU-051304
4	125 25 BI
5	125 20 BI
6	94 5X40 BI
7	94 5X32 BI
8	PS-051307
9	TA-051328
9	TA-051329
10	BU-050404
11	BU-051302
12	BU-061302
13	BU-013101
14	FE-610004

9.3 ARM 799

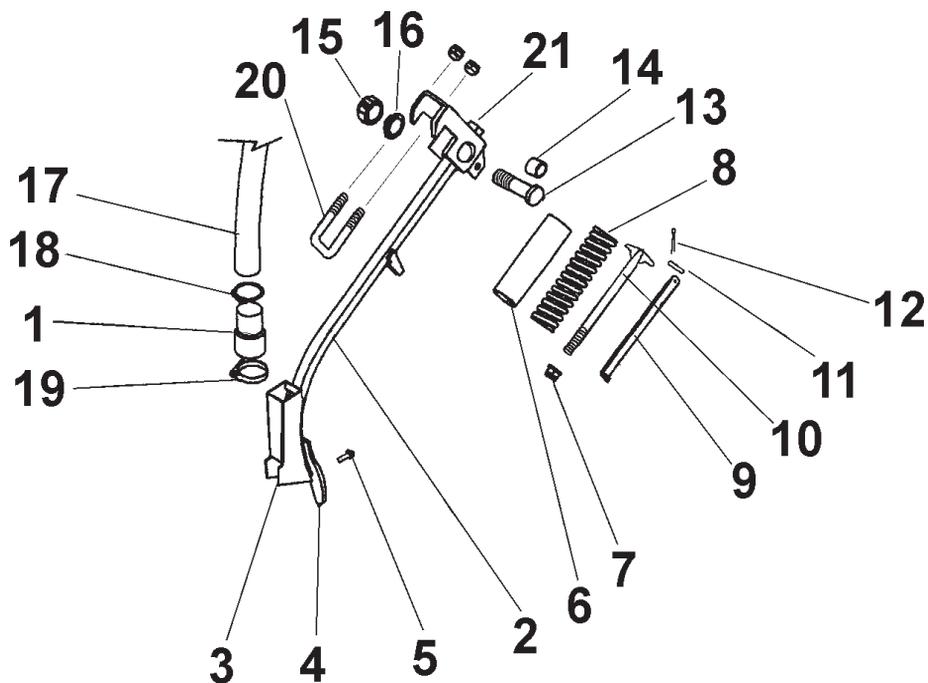


Drawing Code

1	PL-051300
2	PS-2611
2	PS-2611/D
2	PS-2611/I
3	CO-051302
4	FO-050301
5	608/934 9x45
6	EE-050310
7	985 14
8	ML-050300I
9	EE-050301
10	FO-050303
11	BU-050302
12	94 3,5x20 BI
13	EE-050312
14	PL-050302
15	985 20/150
16	125 20 BI
17	MP-907018
18	ML-051301
19	FE-606003
20	EE-050314
21	CO-050302

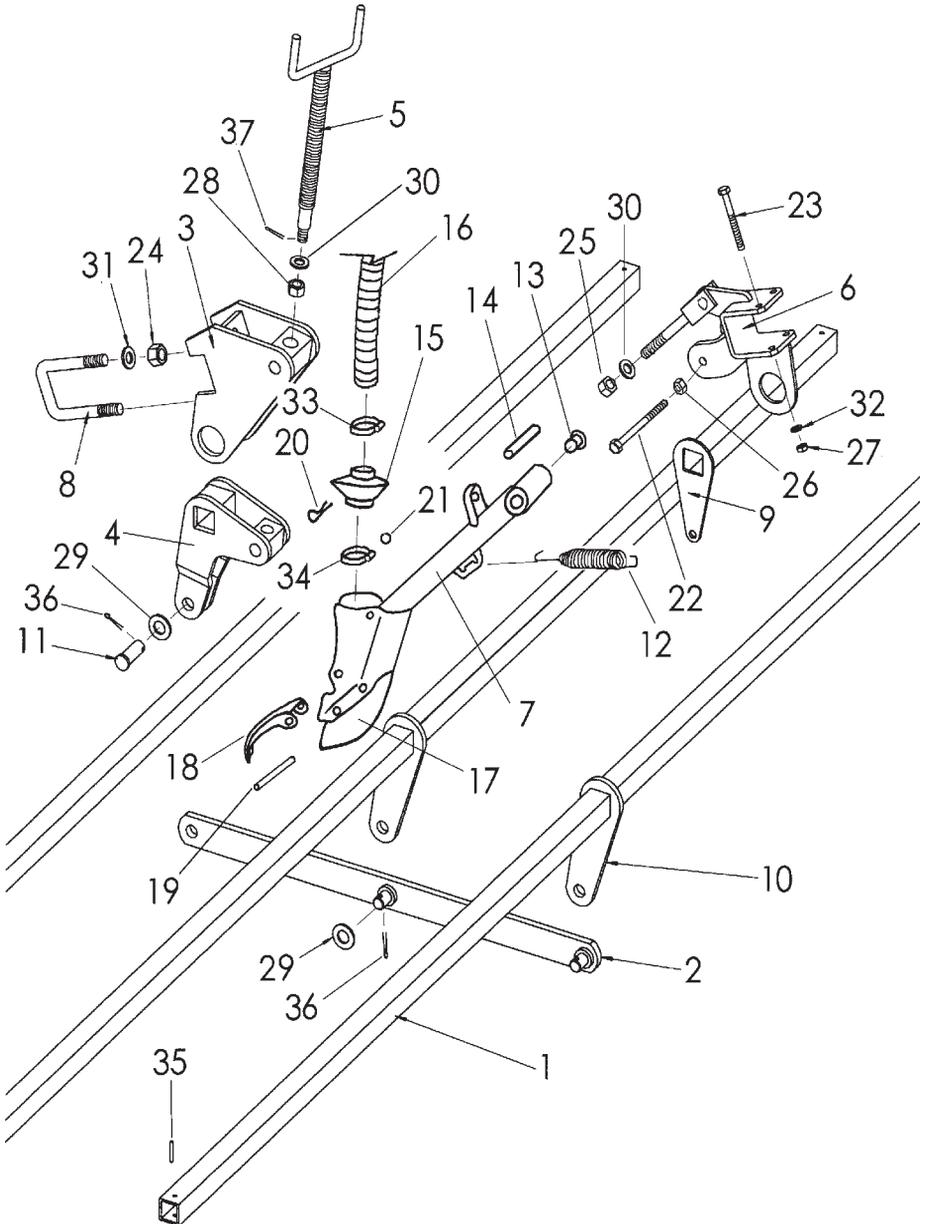9.4 ARMS 699

Drawing	Code
1	
2	PS-051312
3	PS-051310
4	PS-051311
5	PS-051313
6	PS-051314
7	MB-68
7	MB-70/D
7	MB-70/I
8	EE-050314
9	PX-051302
10	TA-051313
11	BU-050301
12	ML-051300
13	PL-050207
14	ME-050202
15	PL-050201
16	MP-907018
17	FU-050200
18	EE-050206
19	BU-050202
20	ML-050203
21	ML-050103
22	931 10X110 BI
23	931 8X75 8.8 BI
24	934 14 BI
25	985 12/150
26	985 10
27	934 8 BI
28	935 12 BI
29	125 16 BI
30	125 12 BI
31	125 14 BI
32	127 8 BI
33	FE-606001
34	FE-606002
35	1481 5X50 BI
36	94 5X25 BI
37	94 3,5X28 BI


9.5 HOPPER

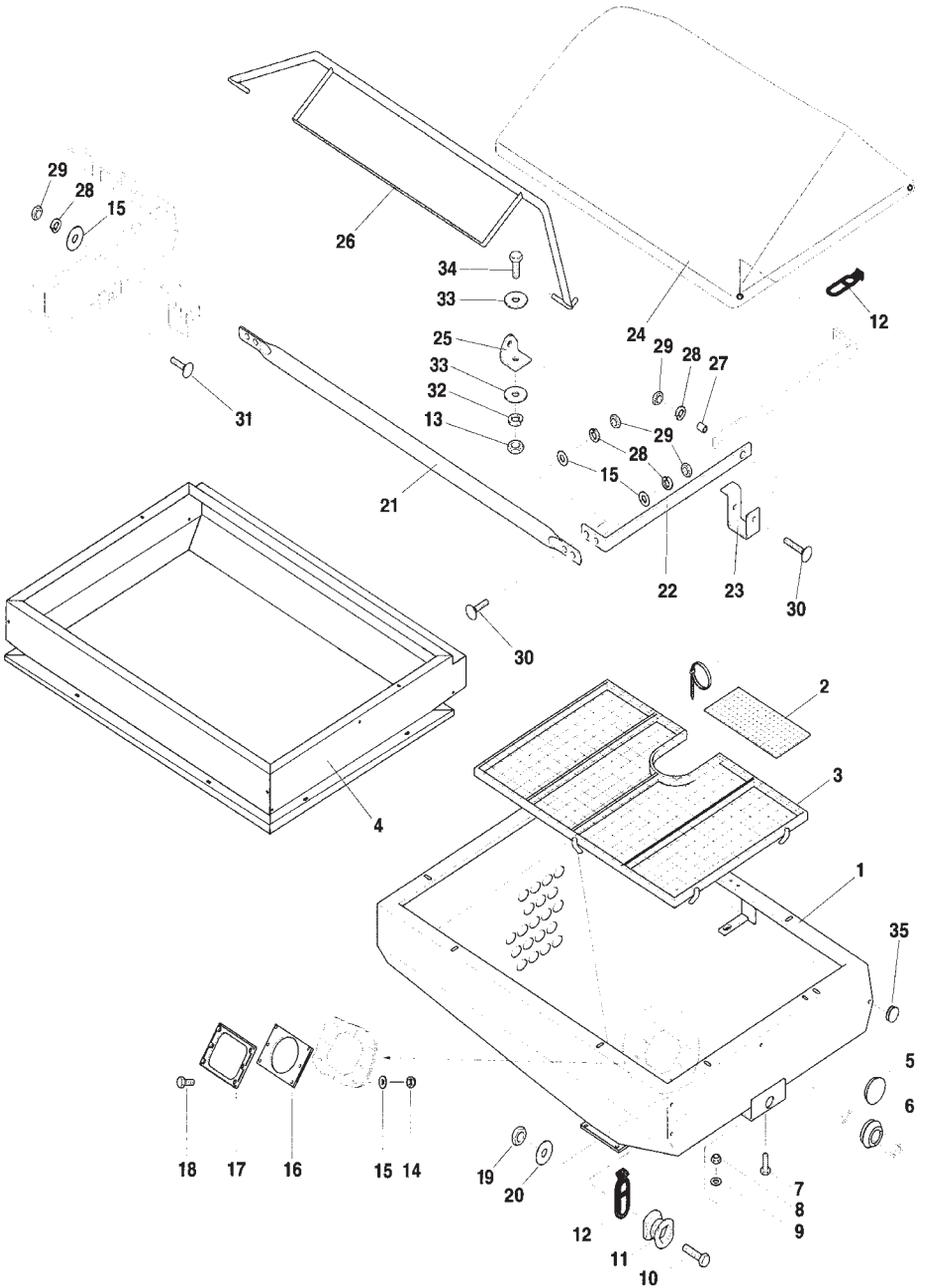

Drawing Code

1	KV-486460
2	KV-494872
3	KV-494163
4	PS-021300
4	PS-021305
5	KV-494832
6	KV-494830
7	933 12X35 BI
8	985 12
9	125 12 BI
10	933 8X20 BI
11	KV-494917
12	KV-494907
13	934 8 BI
14	985 6
15	9021 6 BI
16	KV-486749
17	KV-486653
18	933 6X20 BI
19	985 8
20	125 8 BI
21	KV-499325
22	KV-499474
23	KV-499330
24	KV-499902
25	KV-493511
26	KV-495778
27	KV-499338
28	127 6 BI
29	934 6 BI
30	603 6X25 BI
31	603 6X16 BI
32	127 8 BI
33	9021 8 BI
34	933 8X30 BI
35	KV-688491


9.6 TRANSMISSION

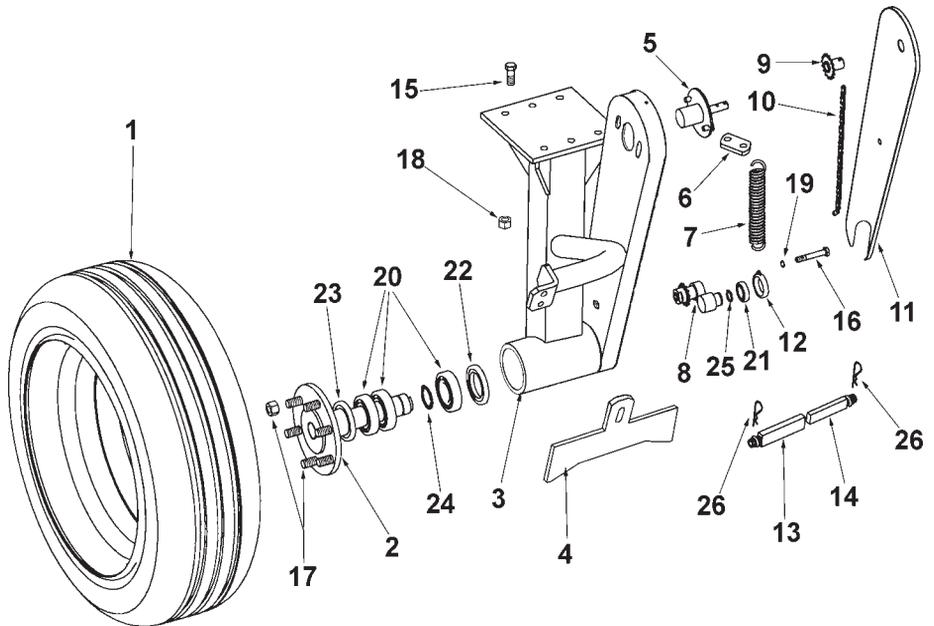

Drawing Code

1	CO-041300
2	ME-041306/D
2	ME-041306/I
3	PS-041306/D
3	PS-041306/I
4	PX-101312
5	KV-494117
6	TA-041303
7	ML-041302
8	PS-041308
8	PS-041309
9	KV-494112
9	KV-495284
9	KV-496203
10	KV-691831
10	KV-691341
10	KV-691241
11	PZ-041300
12	PS-041310
13	KV-499234
14	KV-499233
15	933 14X40 8.8 B
16	931 12X70 8.8 B
17	FE-610000
18	985 14
19	127 12 BI
20	FE-600037
21	FE-600028
22	FE-601012
23	FE-601017
24	471 50
25	471 20
26	FE-610004


9.7 DISTRIBUTION

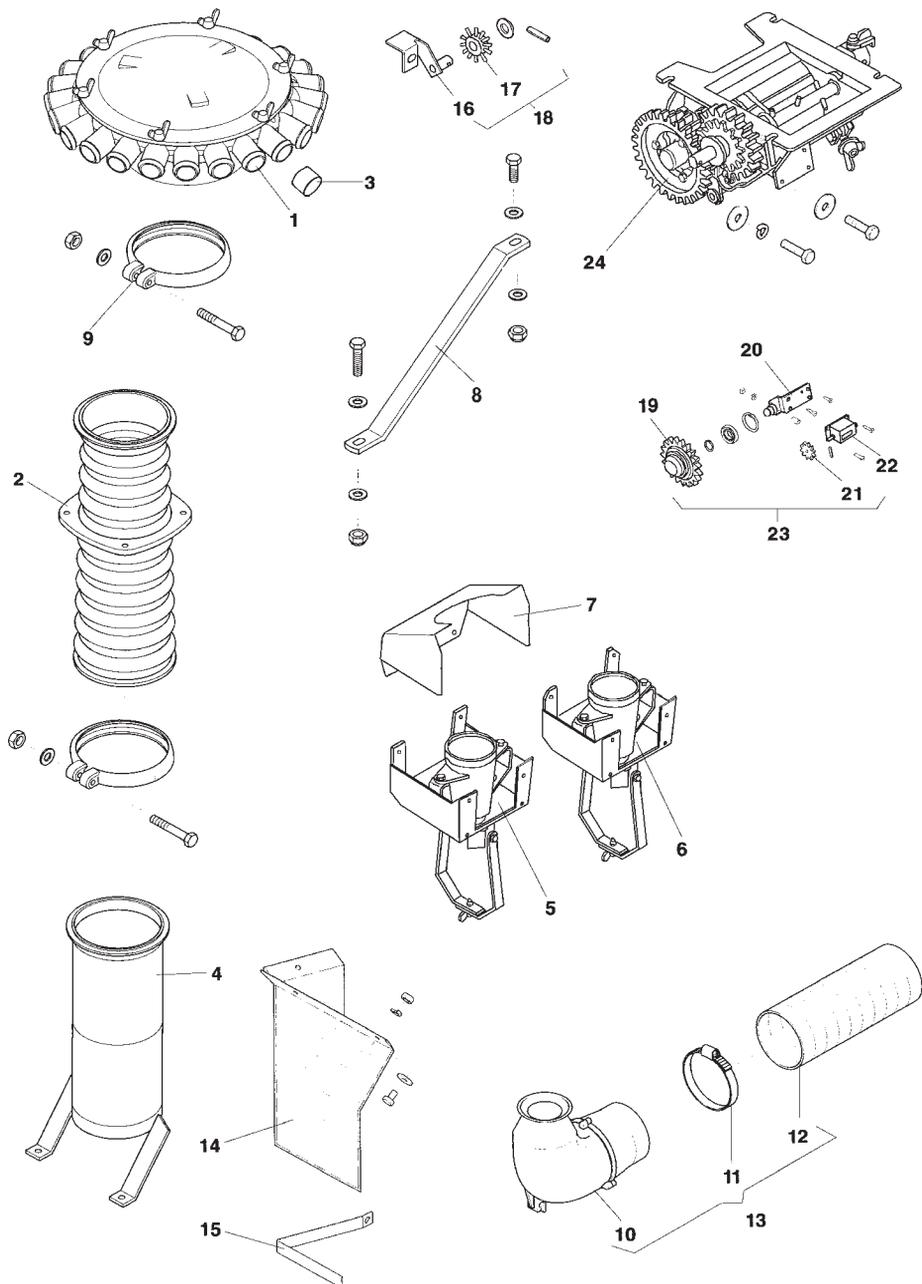

Drawing Code

1	KV-495586
2	KV-493067
3	KV-688471
4	PS-041300
4	PS-041301
5	KV-486131
6	PS-021303
7	KV-486147
7	PS-021304
8	EE-041311
8	EE-041312
9	KV-491810
10	KV-489313
11	KV-687421
12	KV-499750
13	KV-499282
14	KV-489763
15	KV-495335
16	KV-496207
17	KV-496784
18	KV-496206
19	KV-489806
20	KV-489425
21	KV-489809
22	KV-494754
23	KV-489139
24	KV-489430


9.8 HYDRAULIC FAN

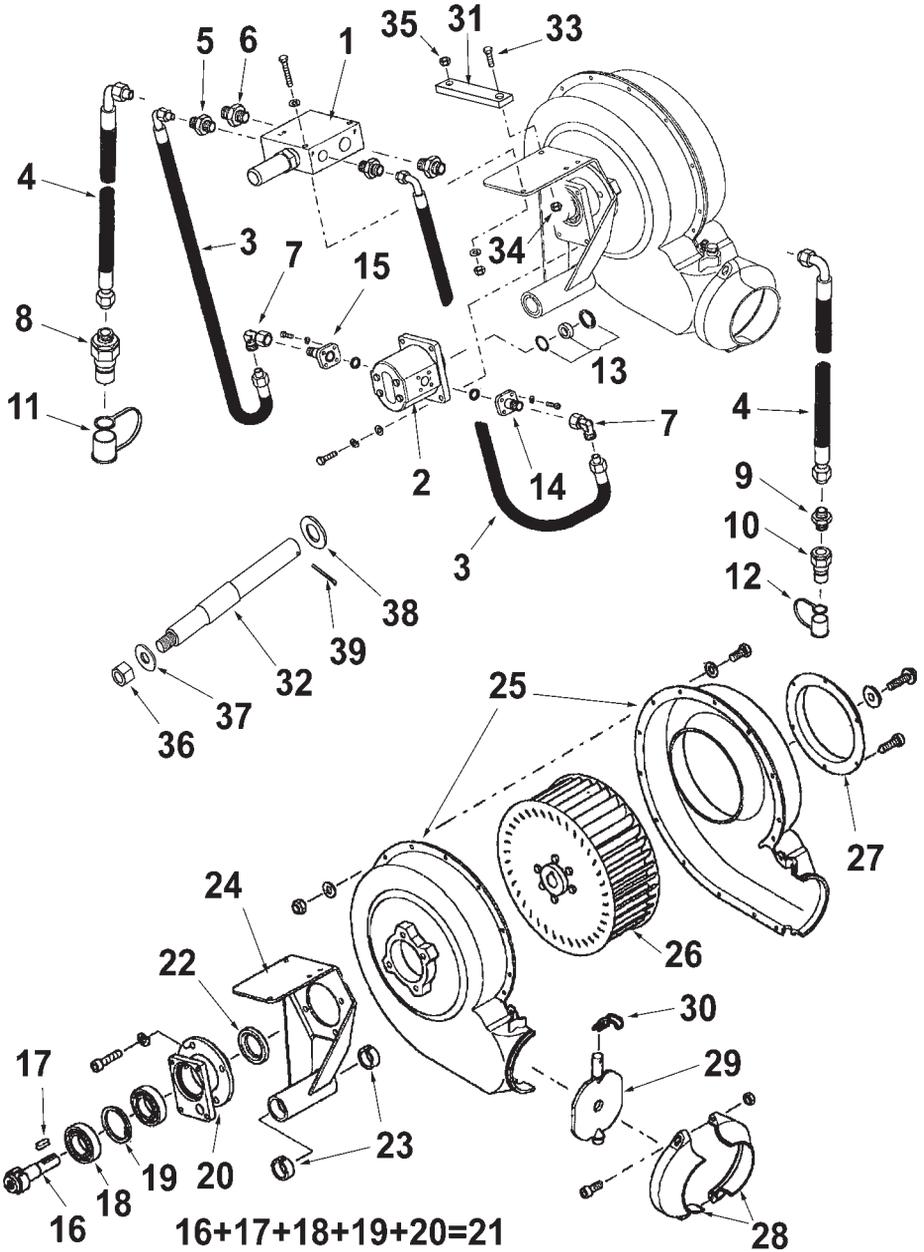

Drawing Code

1	KV-688344
2	KV-688831
3	KV-380915
4	KV-380914
5	KV-688353
6	KV-688255
7	KV-688033
8	KV-688259
9	KV-688254
10	KV-688258
11	KV-688393
12	KV-688791
13	KV-498824
13	KV-498831
14	KV-688374
15	KV-688257
16	KV-380509
17	KV-640052
18	FE-600034
19	472 62
20	KV-380788
21	KV-380176
22	KV-499510
23	KV-650262
24	KV-380367
25	KV-494196
26	KV-494732
27	KV-499425
28	KV-499690
29	KV-494846
30	KV-494729
31	EE-041313
32	ME-011303
33	931 8X40 BI
34	985 8
35	985 10
36	985 20
37	125 20 BI
38	125 30 BI
39	94 5X40 BI


9.9 MECHANICAL FAN

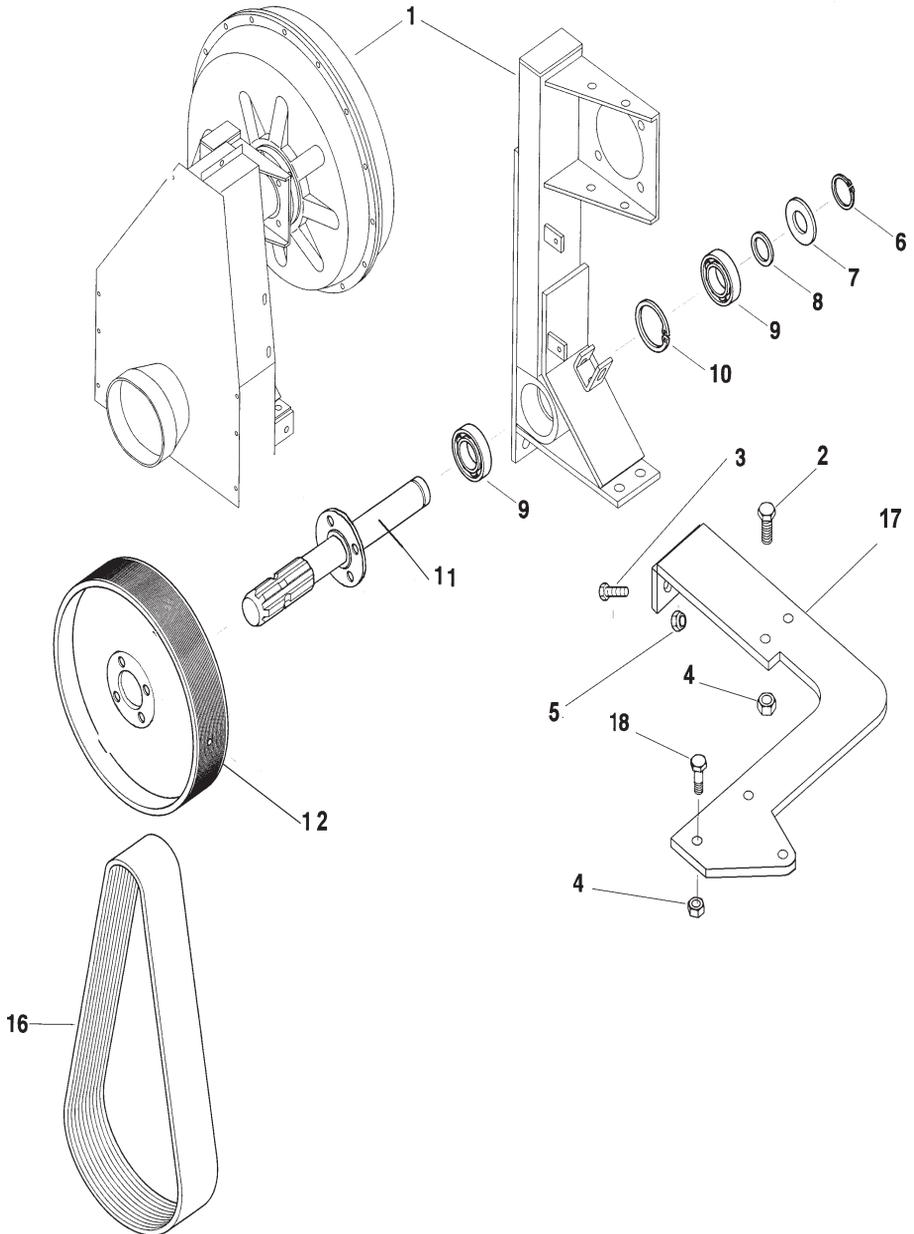

Drawing Code


1	VA-041301
1	KV-496200
2	933 12X35 BI
3	931 10X35 8 BI
4	985 12
5	985 10
6	471 30
7	KV-490219
8	988 25x35x1
9	FE-600014
10	472 62
11	ME-041326
12	ME-041325
12	ME-041327
13	1481 10x70 BI
14	1481 6x70 BI
15	KV-688451
16	KV-494745
16	KV-494836
17	PS-011308
18	933 12x40 8.8 B

9.10 CULTIVATOR

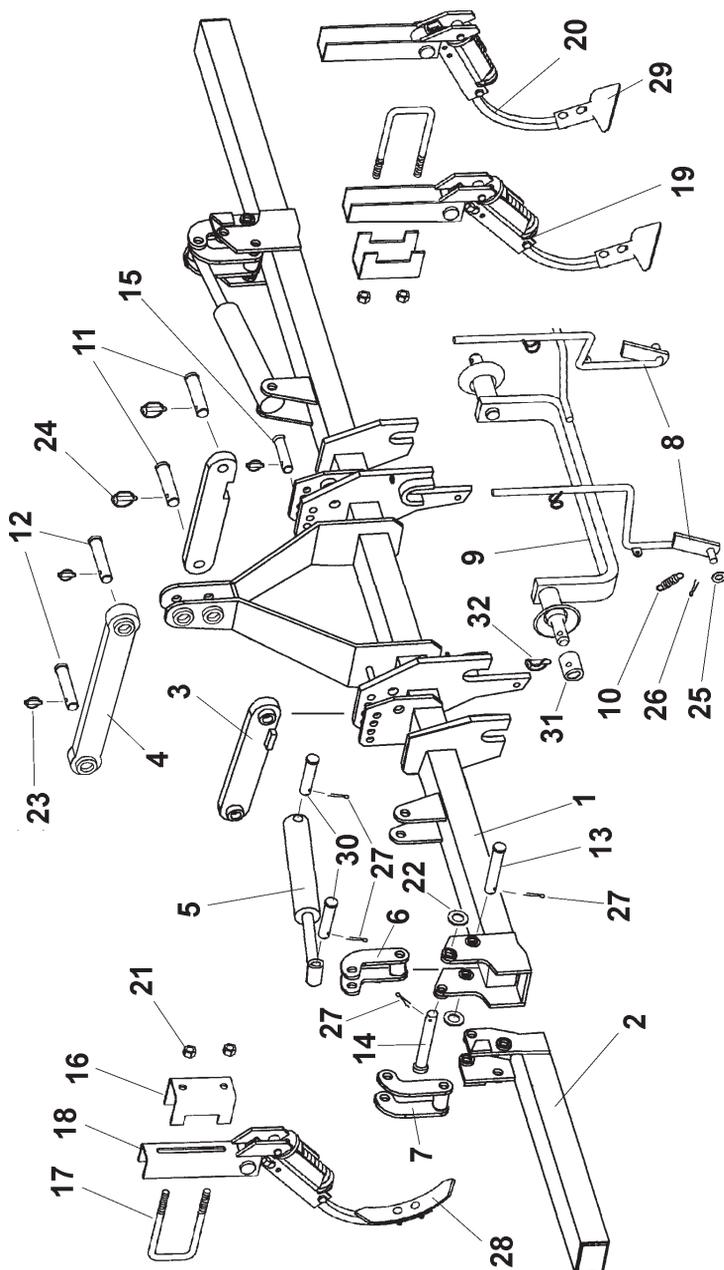



Drawing	Code
1	PS-061310
2	PS-061311
2	PS-061312
2	PS-061313
3	PS-061315/D
3	PS-061315/I
4	PS-061323
5	CO-061300
6	PS-061303
7	PS-061302
8	TA-060201/D
8	TA-060201/I
9	PS-011306
10	ML-010101
11	BU-060202
12	BU-060203
13	BU-061301
14	BU-061300
15	BU-060201
16	PX-060202
17	EE-060230
18	MO-0719/B
19	MO-061310
20	MO-0720/B
21	985 16
22	125 25 BI
23	FE-610007
24	FE-610008
25	125 16 BI
26	94 5X25 BI
27	95 5X36 BI.
28	FO-060300
29	FO-060301
30	BU-061302
31	ME-063701
32	FE-610009

9.11 LEVELER

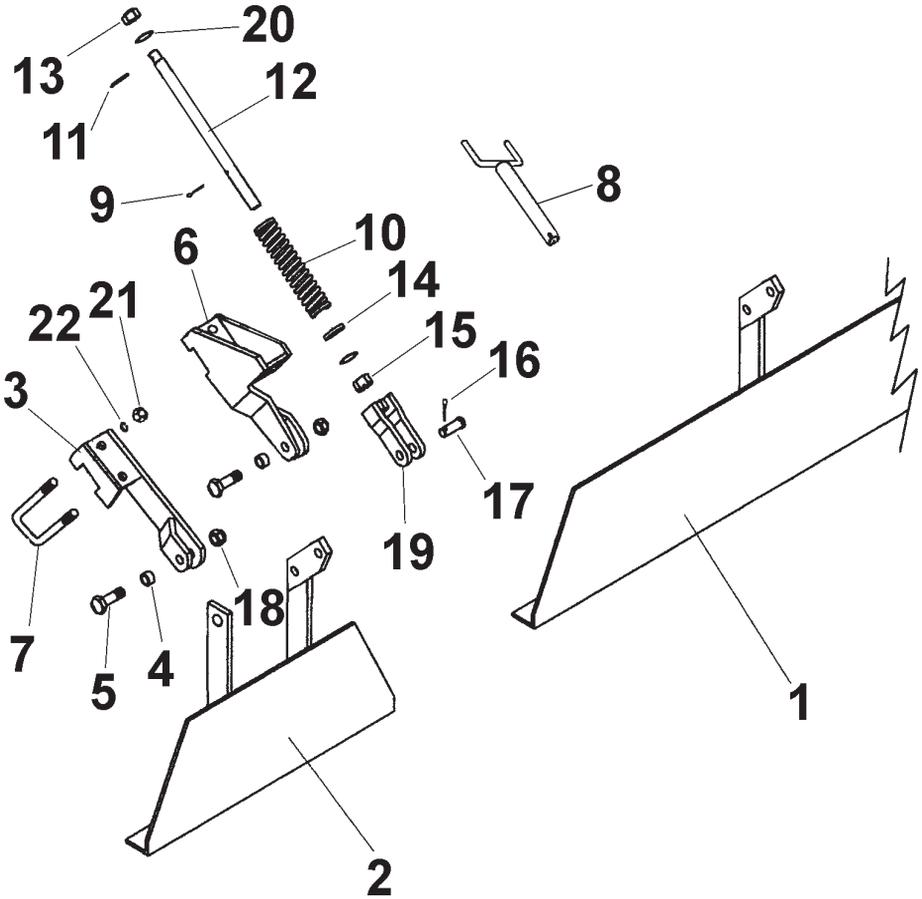

Drawing	Code
1	PS-061325
2	PS-061307/D
2	PS-061307/I
2	PS-061308/D
2	PS-061308/I
2	PS-061309/D
2	PS-061309/I
3	PS-061305/D
3	PS-061305/I
4	ME-061301
5	931 16X55 8.8 B
6	PS-061304
7	EE-050314
8	PS-061319
9	94 4X32 BI
10	ML-050300
11	1481 5X30 BI
12	ME-061305
13	985 20
14	ME-061303
15	935 20 BI
16	94 5X25 BI
17	BU-050301
18	985 16
19	PS-061318
20	125 20 BI
21	934 14 BI
22	127 14 BI


9.12 TRACK ERASERS (FRONT AND BACK)

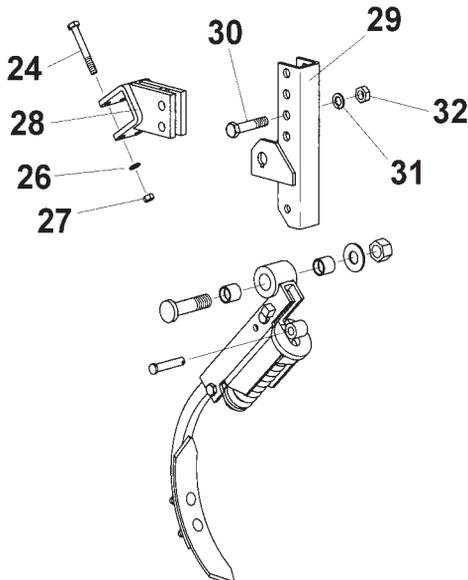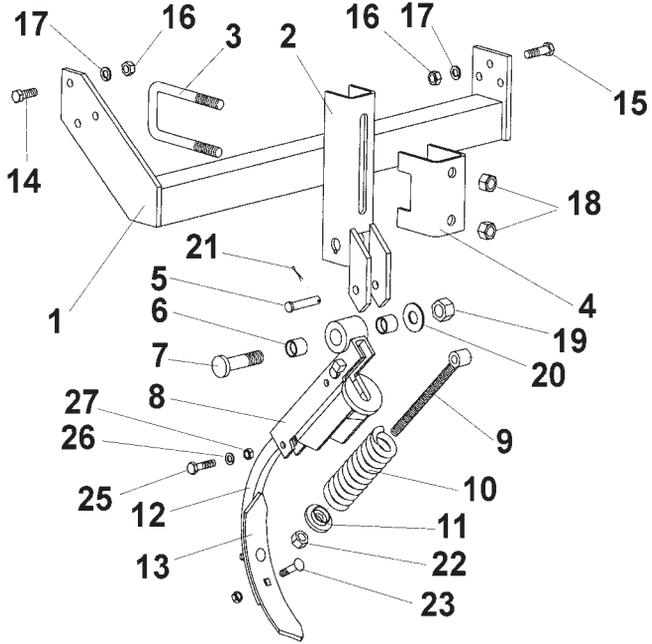

Drawing Code

1	PS-061321/D
1	PS-061321/I
2	PS-1113
3	EE-060228
4	PX-060201
5	BU-060300
6	PL-050302
7	EE-050312
8	PS-1120
9	PS-1114
10	ML-060300
11	PS-1115
12	FO-060302
13	FO-060300
14	933 12X35 BI
15	933 12X45 BI
16	934 12 BI
17	127 12 BI
18	985 16
19	985 20/150
20	125 20 BI
21	94 3,5X 20 BI
22	985 14
23	608/934 9X40
24	931 10X80 8.8 B
25	931 10X45 8.8 B
26	127 10 BI
27	934 10 BI
28	PS-061322
29	PS-061330
30	931 14X70 BI
31	127 14 BI
32	934 14 BI


9.13 HARROW

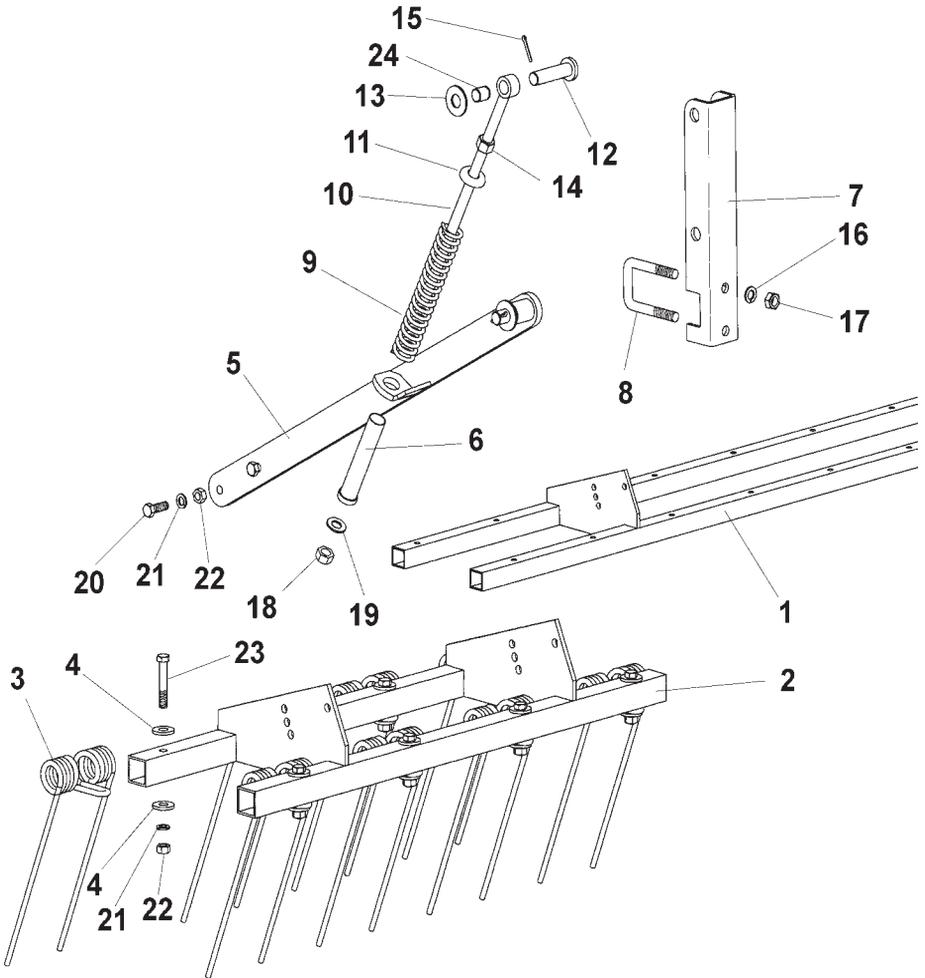

Drawing Code

1	PS-081306
2	PS-081307
2	PS-081308
2	PS-081309
3	ML-080103
4	ME-080202
5	PS-081311/D
5	PS-081311/I
6	PS-1735
7	PS-081310
8	EE-050314
9	ML-080104
10	PS-1710
11	EE-080306
12	BU-080202
13	125 20 BI
14	985 16
15	94 5X32 BI
16	7980 14 BI
17	934 14 BI
18	934 16 BI
19	125 16 BI
20	933 12X35 BI
21	7980 12 BI
22	934 12 BI
23	931 12X70 BI
24	CT-081305


9.14 TRACK MARKERS

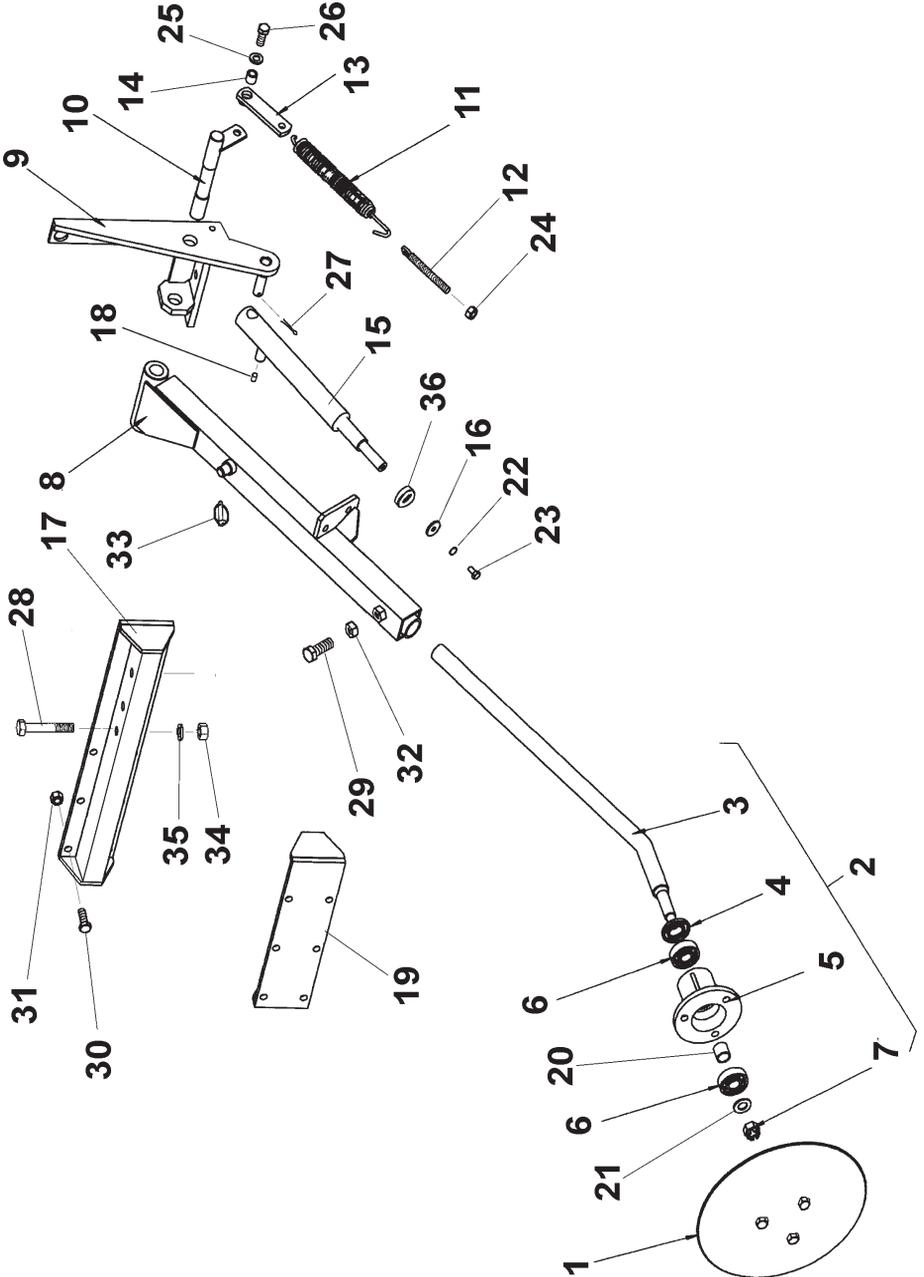

Drawing Code


1	EE-100217
2	RE-100300
3	PR-100201
4	FE-601000
5	ME-100214
6	FE-600005
7	935 M-16 BI
8	PS-1815/d
9	PS-101303/D
10	PS-101304
11	ML-050201
12	EE-100219
13	PS-1805
14	ME-100200
15	CO-101300
16	EE-030200
17	PS-101302
18	ME-100210
19	PS-101301
20	CT-100800
21	125 16 BI
22	127 8 BI
23	933 8X15 BI
24	985 12/150
25	125 12 BI
26	933 12X30 BI
27	94 5X32 BI
28	931 14X80 BI
29	933 16X45 BI
30	933 12X35 BI
31	985 12
32	934 16 BI
33	FE-610007
34	934 14 BI
35	7980 14 BI
36	CT-100302

9.15 FINISH

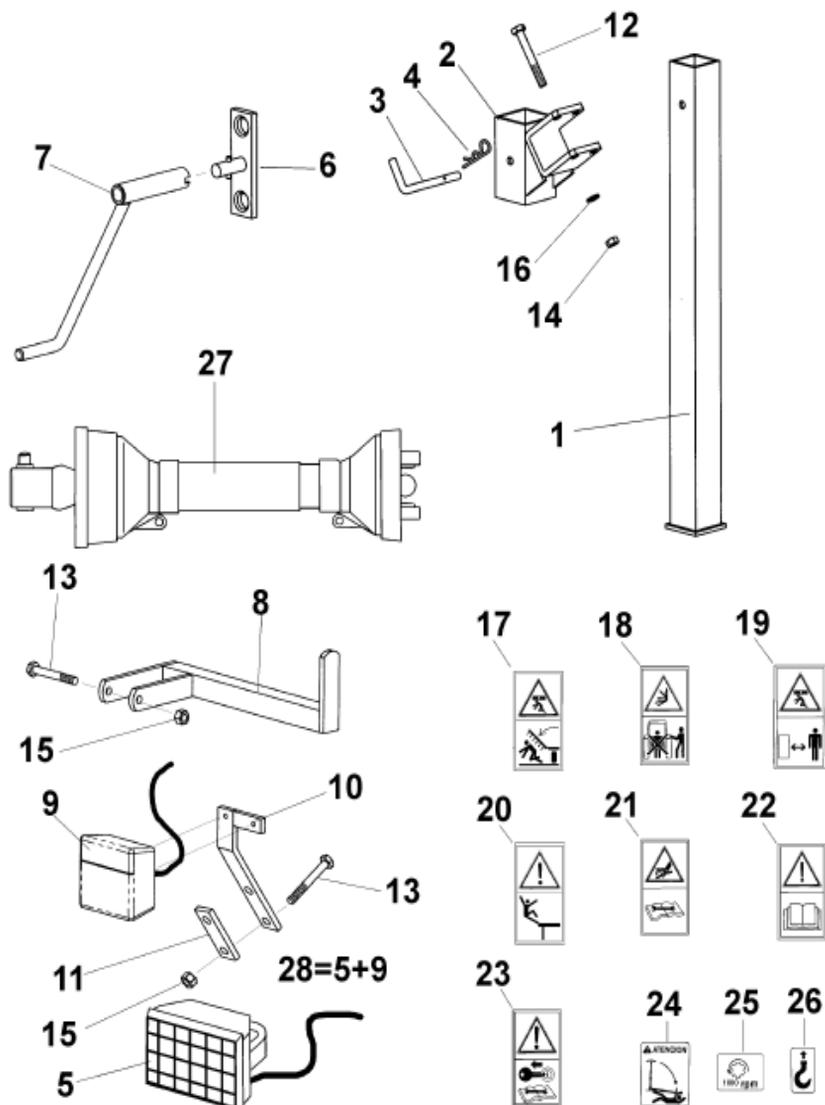


Drawing	Code
1	PS-071310
2	PS-071309
3	TA-071305
4	FE-610002
5	MV-071301
6	MO-041313
7	CO-070300
8	PS-071305
8	PS-071306
9	MV-071302
10	PS-071303
11	EE-101312
12	931 10X80 8.8 B
13	931 10X80 8.8 B
14	934 10 BI
15	985 10
16	127 10 BI
17	AD-071302
18	AD-070214
19	AD-070207
20	AD-070215
21	AD-070222
22	AD-070206
23	AD-070227
24	AD-100200
25	AD-071307
26	AD-075104
27	FE-608006
28	MV-071300

9.16 PLATFORM

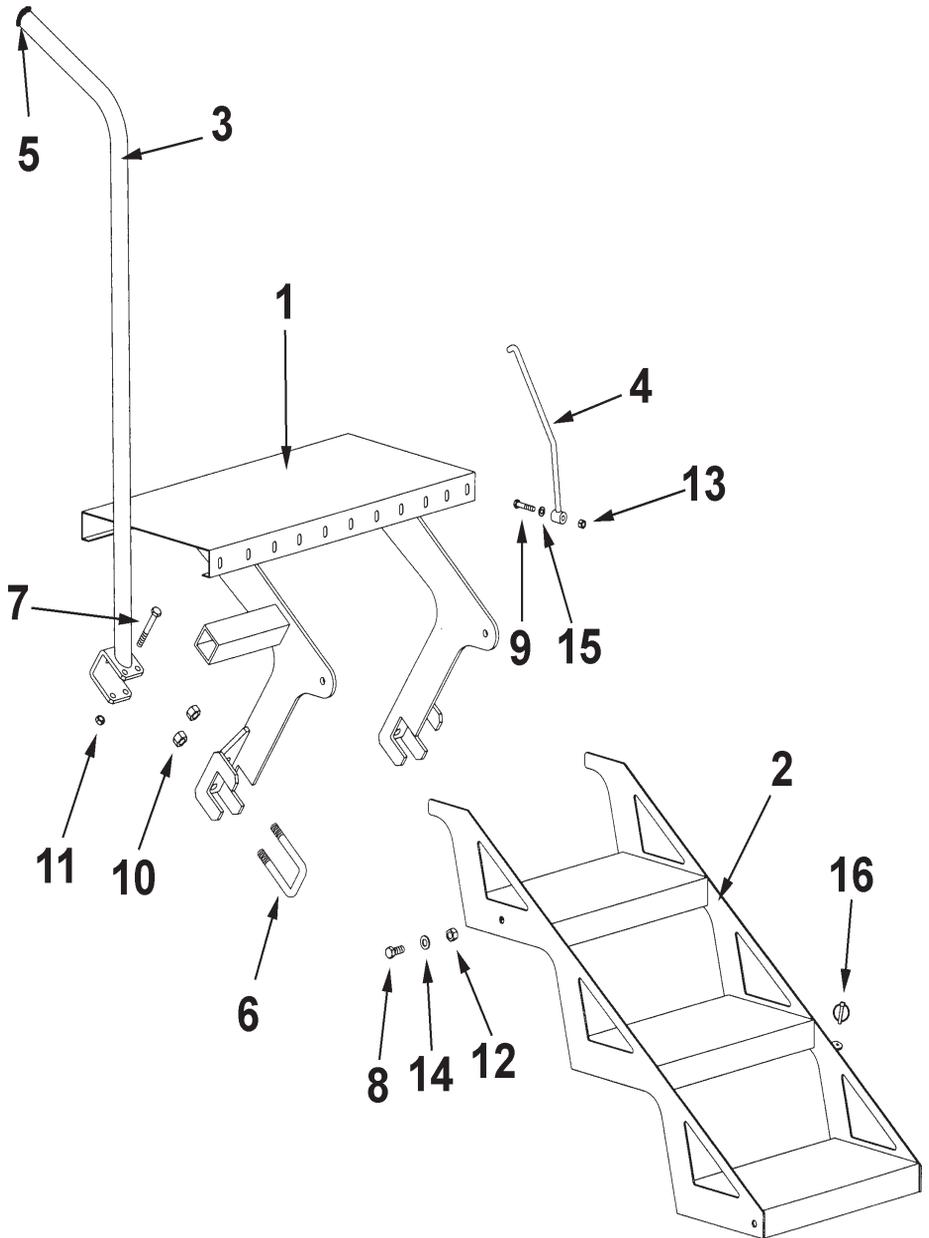


Drawing	Code
1	PS-071316
2	PS-071314
3	PS-071312
4	PS-071317
5	CN-817002
6	EE-050314
7	931 10X80 BI
8	933 12X30 BI
9	931 8X45 BI
10	985 14
11	985 10
12	985 12
13	985 8
14	125 12 BI
15	125 8 BI
16	FE-615005

9.17 SHUT-OFF VALVES

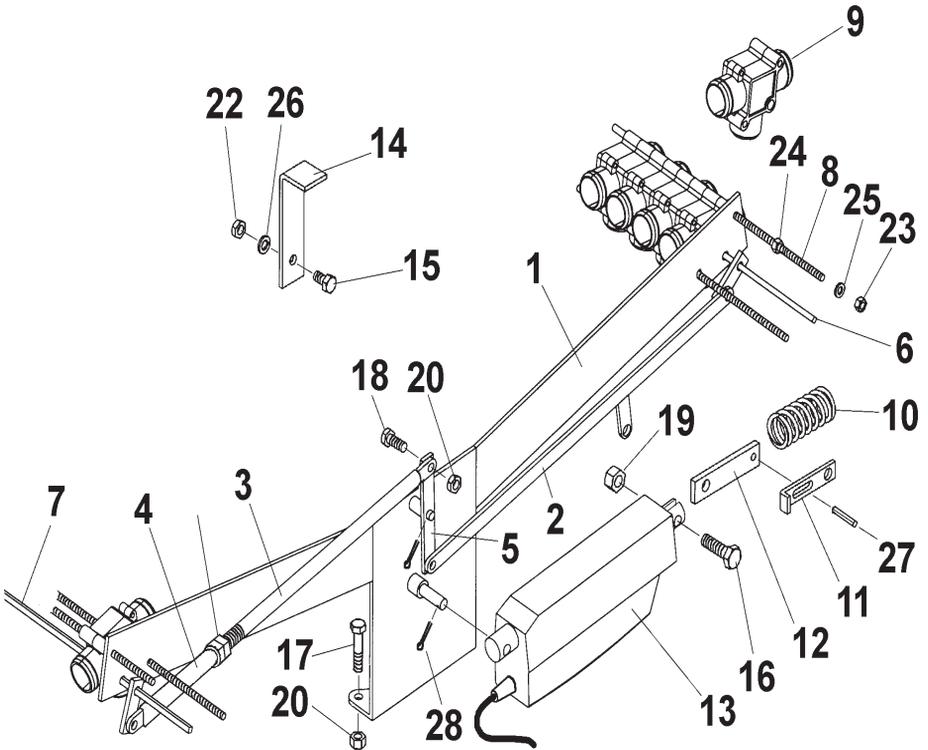


Drawing	Code
1	PS-101309
2	PS-101308
3	EE-101317
4	CO-101303
5	EE-101314
6	PS-101313
6	PS-101314
6	PS-101315
7	PS-101310
7	PS-101311
7	PS-101312
8	CT-101309
8	CT-101310
8	CT-101311
9	MO-041305
10	ML-101301
11	PX-101318
12	EE-101325
13	CO-101301
14	EE-101320
15	933 8X15 BI
16	933 10X35 BI
17	933 8X25 BI
18	933 8X20 BI
19	985 10
20	985 8
21	934 12/150 BI
22	934 8 BI
23	985 6
24	934 6 BI
25	125 6 BI
26	127 8 BI
27	1481 6X30 BI
28	94 3X20 BI

9.18 CONTROL MONITORS

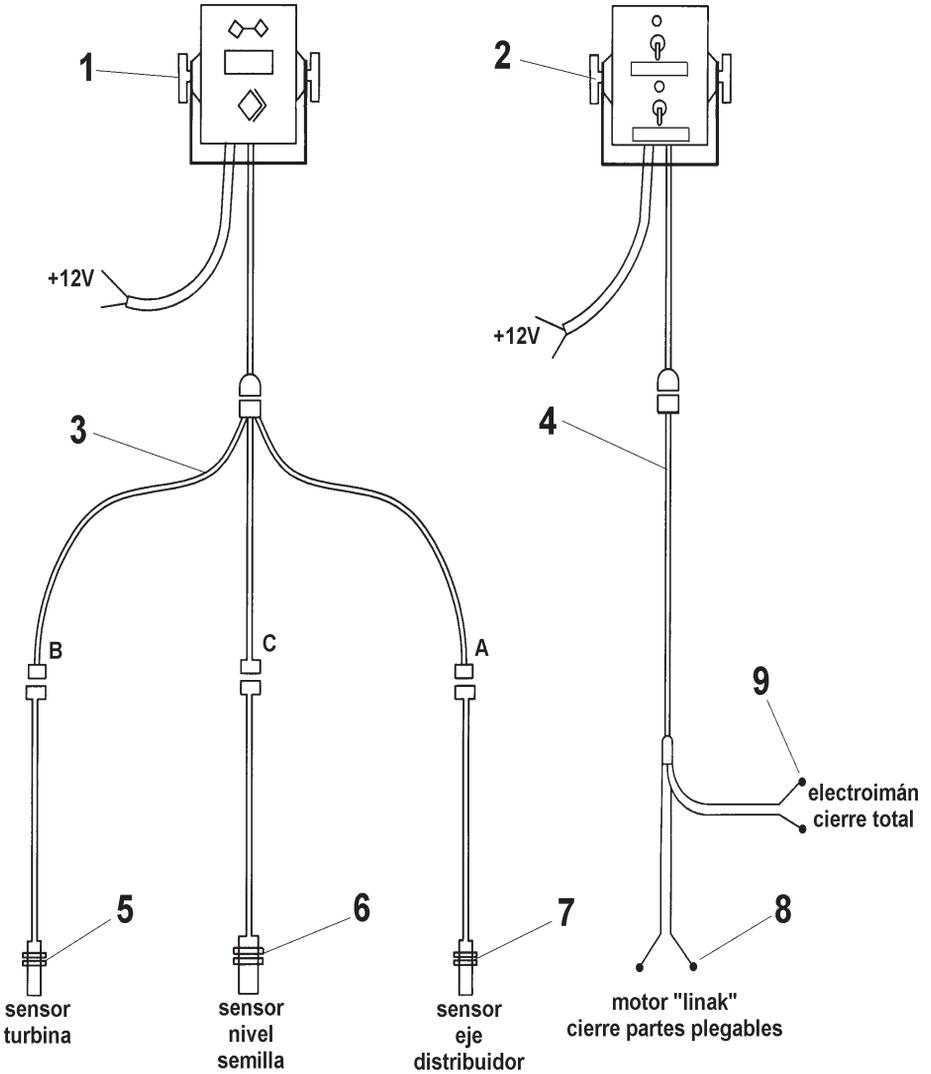

Drawing	Code
1	MV-101307
2	MV-101310
3	MV-101309
4	MV-101311
5	FE-650006
6	FE-650009
7	FE-650005
8	FE-650015
9	FE-650017

9.19 LATERAL WHEEL

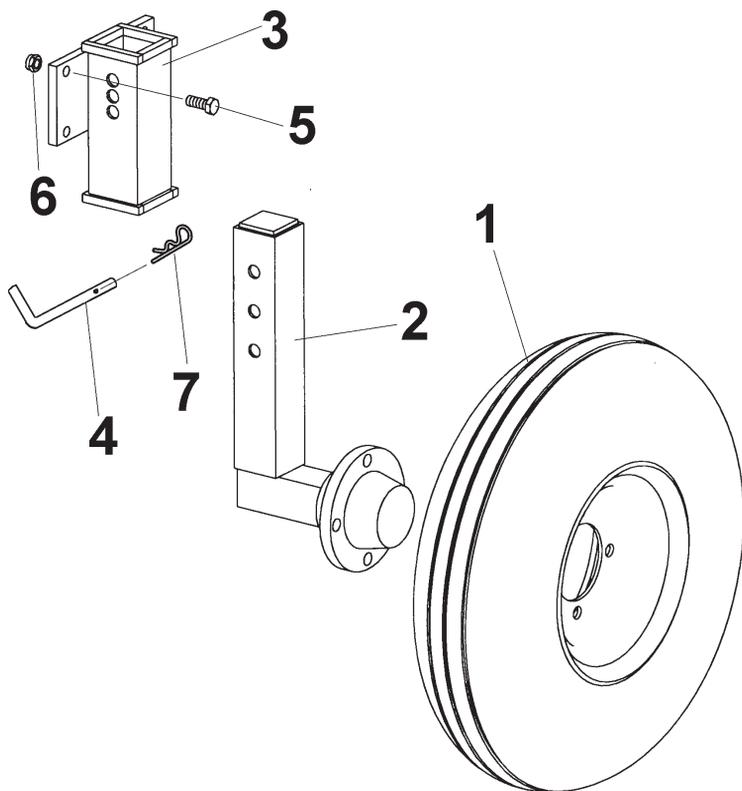

Drawing	Code
1	CO-101305
2	PS-101320
3	PS-101319
4	BU-013101
5	933 12X40 BI
6	985 12
7	FE-610003



Carretera d'Igualada, s/n
Teléfono 938 68 00 60
Fax 938 68 00 55
www.solagrupo.com
Apartado de correos 11
08280 CALAF (Barcelona)